




GAR HTER RADIO CHARGE START GLOW PLUG CIRCUIT

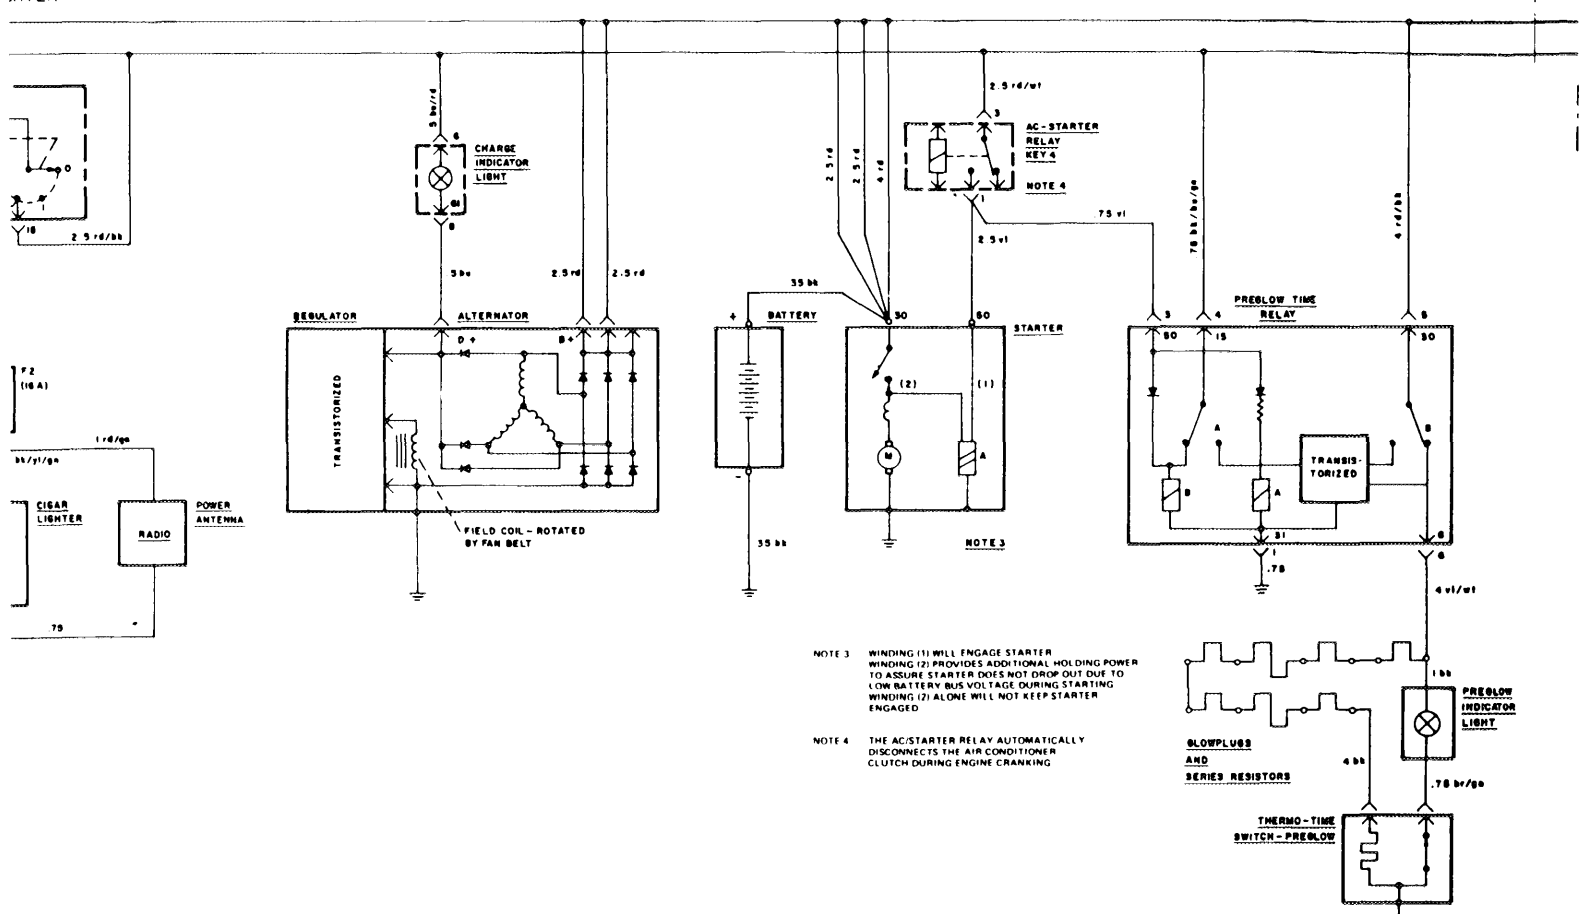


7 8 9 10 11 12

INTERIOR LIGHTS TRUNK LIGHT INSTRUMENT CLUSTER

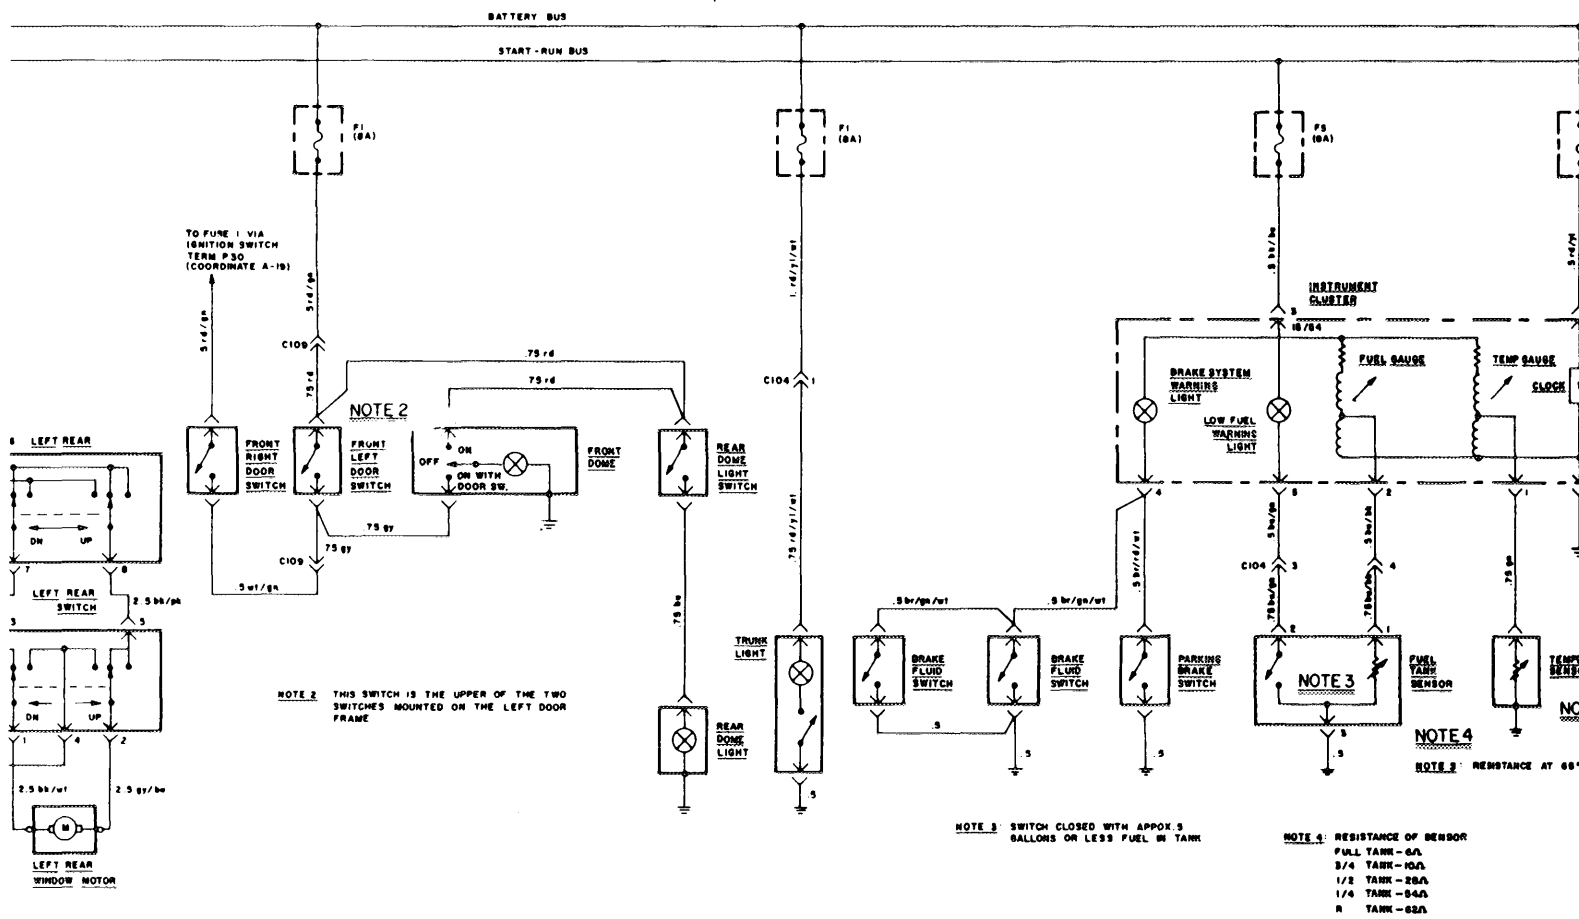

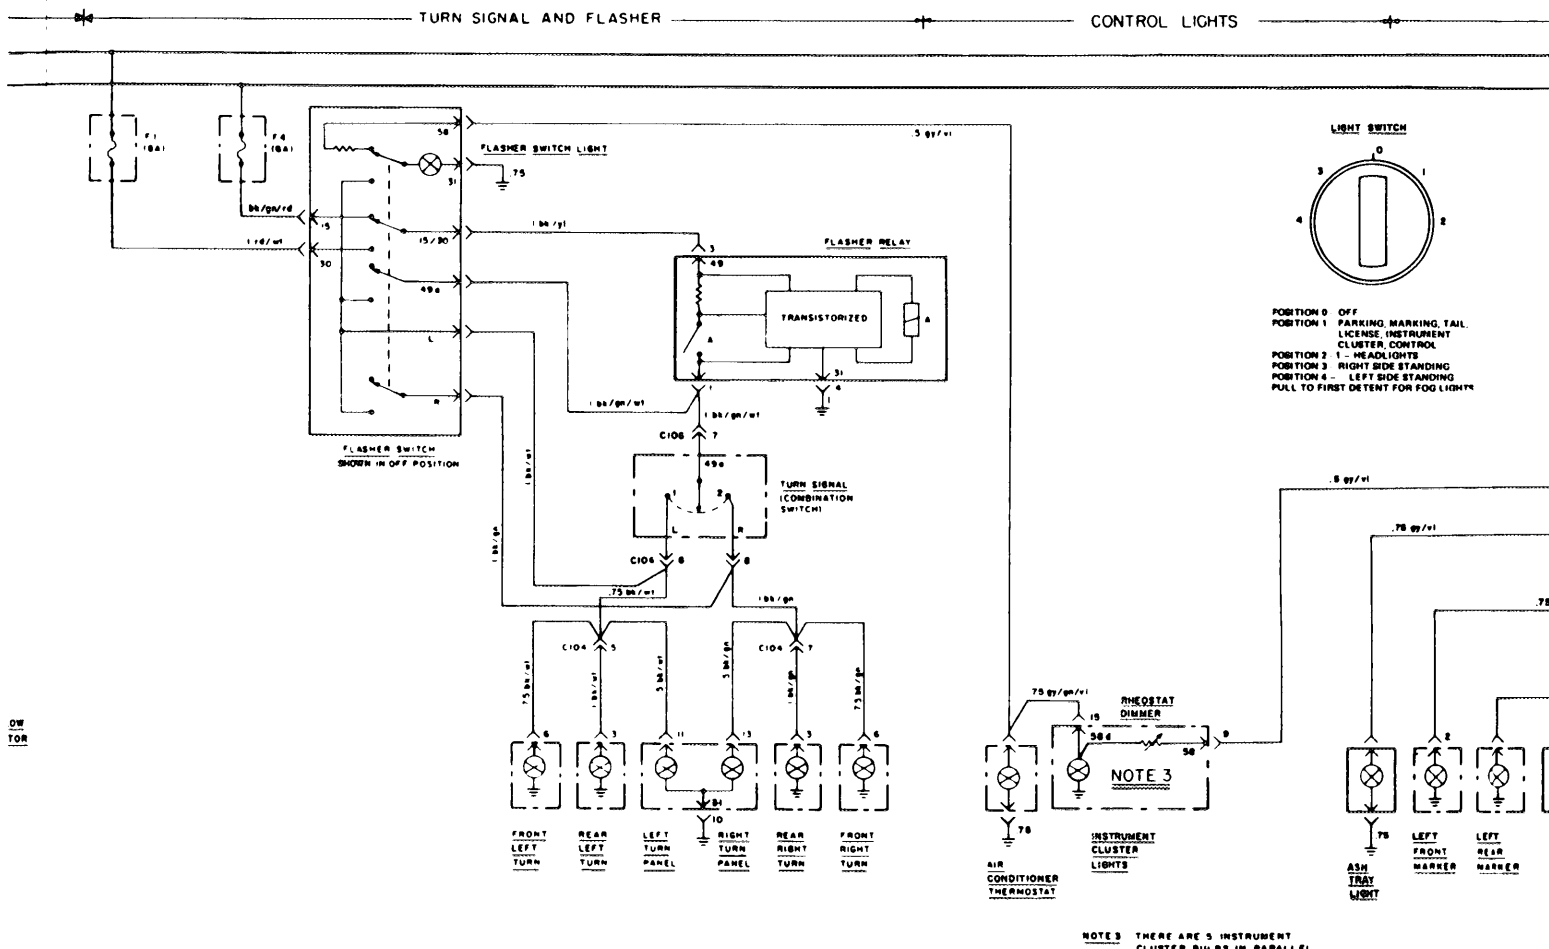


-12- + -13- + -14- + -15- + -16- + -17- +

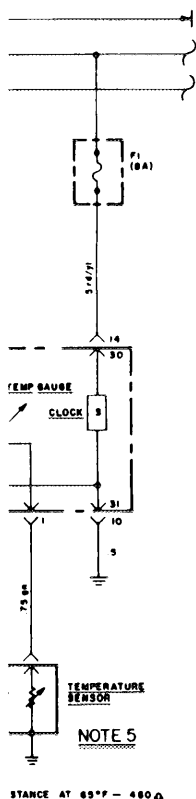

COMPONENT INDEX

SYSTEM/ COMPONENT	LOCATION ON VEHICLE	LOC FIG NO	TERM FIG NO	SYSTEM/ COMPONENT	LOCATION ON VEHICLE	LOC FIG NO	TERM FIG NO
CHARGE Regulator C 105	Alternator Firewall			TRUNK LIGHT C 104 (12 pins)	Under dash, driver's side	6	T4
ELECTRIC WINDOWS Front seat switch Window relay — key 10	Front seat console Right firewall under fuse bracket		T8 T7	TURN SIGNAL AND FLASHER Flasher relay C 104 (12 pins) C 106 (13 pins)	Under dash, driver's side Under dash, driver's side Under dash, driver's side	6 6 6	T6 T4 T5
C 108	Console						
GLOW PLUG CIRCUIT Preglow time relay Thermo-time switch (preglow) AC-Starter Relay Key 4	Under dash, left side Engine block, left side Right firewall, under fuse bracket		T7				
INSTRUMENT CLUSTER Brake fluid switches Coolant temp sensor Fuel tank sensor Parking brake switch C 104 (12 pins)	Reservoir Left front cylinder head Trunk Top parking brake Under dash, driver's side	3 9 6	T4				
INTERIOR LIGHTS C 109	Console						
KICKDOWN CIRCUIT Switch	Below accelerator pedal	8					
LIGHT SWITCH C 104 (12 pins) C 106 (14 pins)	Under dash, driver's side Under dash, driver's side	6 6	T4 T5				
SEAT BELT WARNING Ignition warning switch Warning unit	Ignition switch Under dash, driver's side		T12				
SLIDING ROOF Motor	Behind spare tire						
START AC-Starter relay, key 4	Right firewall under fuse bracket		T7				



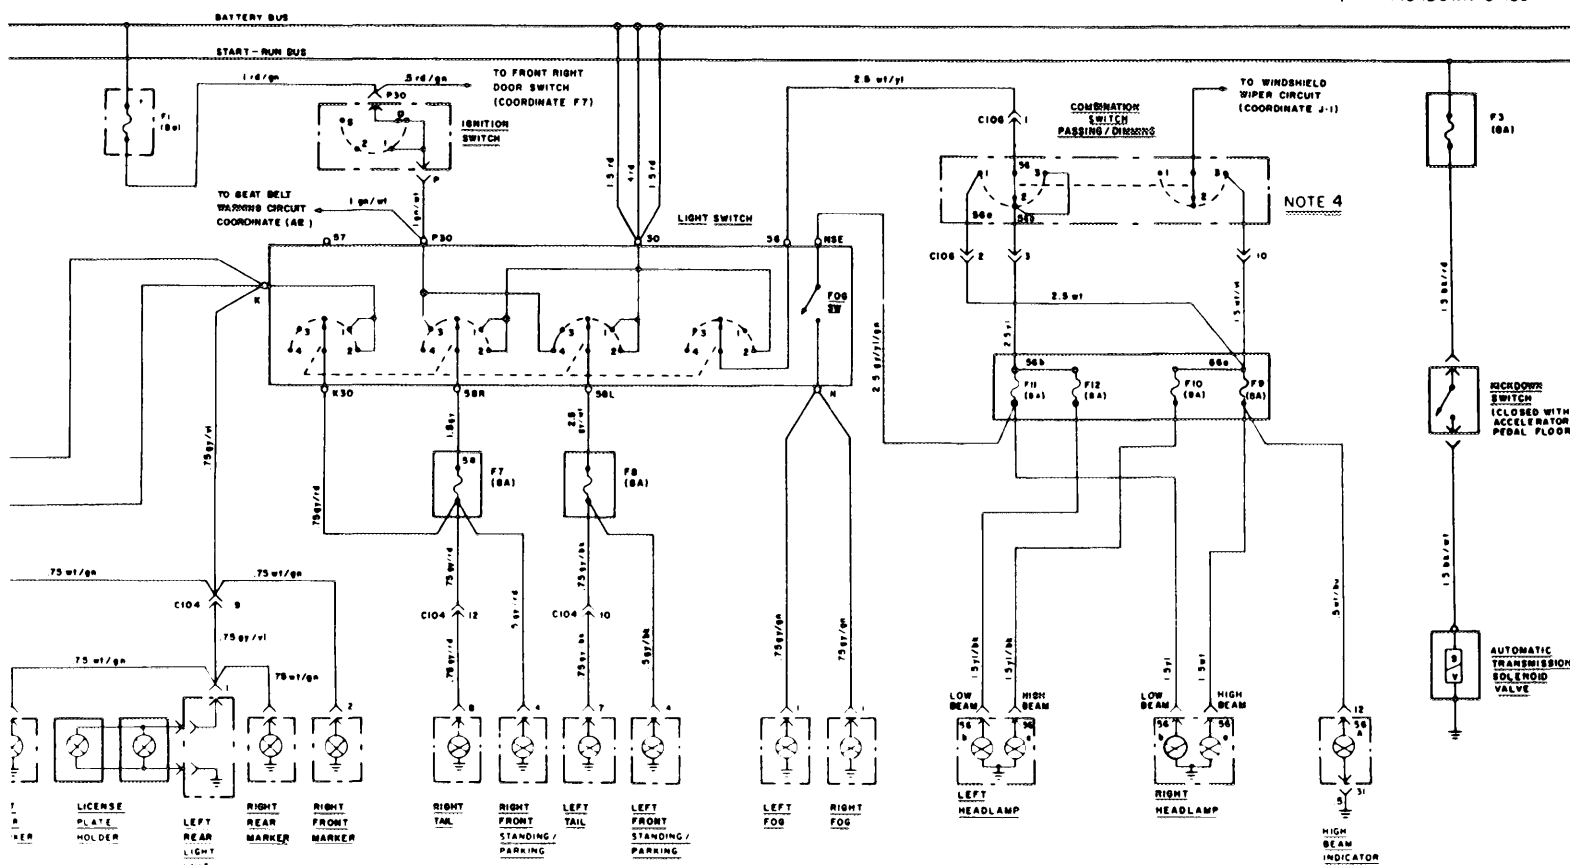

LOCATION FIGURES



Fig 1
1 - A/C Blower motor

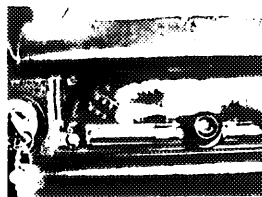


Fig 4
1 - C 113

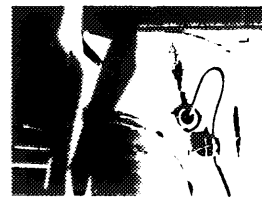


Fig 7
1 - C 112



Fig 2
1 - Change over switch



Fig 5
1 - Temperature switch, refrigerant



Fig 8
1 - Kickdown switch



Fig 3
1 - Main fuse box
2 - Heater blower pre resistors
3 - Brake fluid switches
4 - Wiper motor



Fig 6
1 - Flasher relay
2 - Time delay relay, heated rear window
3 - Interval wiper timer
6 - C 104
7 - C 106


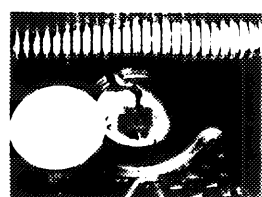


Fig 9
Fuel tank sensor

AIR CONDITI
AUXILIARY F
BLOWER MC
CHARGE
CIGAR LIGH
CLOCK
COOLANT TI
FUEL GAUGI
HEATED REA
HEATER COI
HORNS
KICKDOWN
LIGHT CIRCU
AIR CON
BACKUP
BRAKE
BRAKE
CIGAR L
FOG
GLOVE E
HEAD
INSTRUI
INTERIO
LOW FU
MARKE
PARKIN
STANDII
TAIL
TRUNK
PREGLOW
RADIO
SEAT BELT V
SLIDING ROC
START
TURN SIGNA
WINDOWS
WINDSHIELD

POWER BUS
SPECIAL GRI

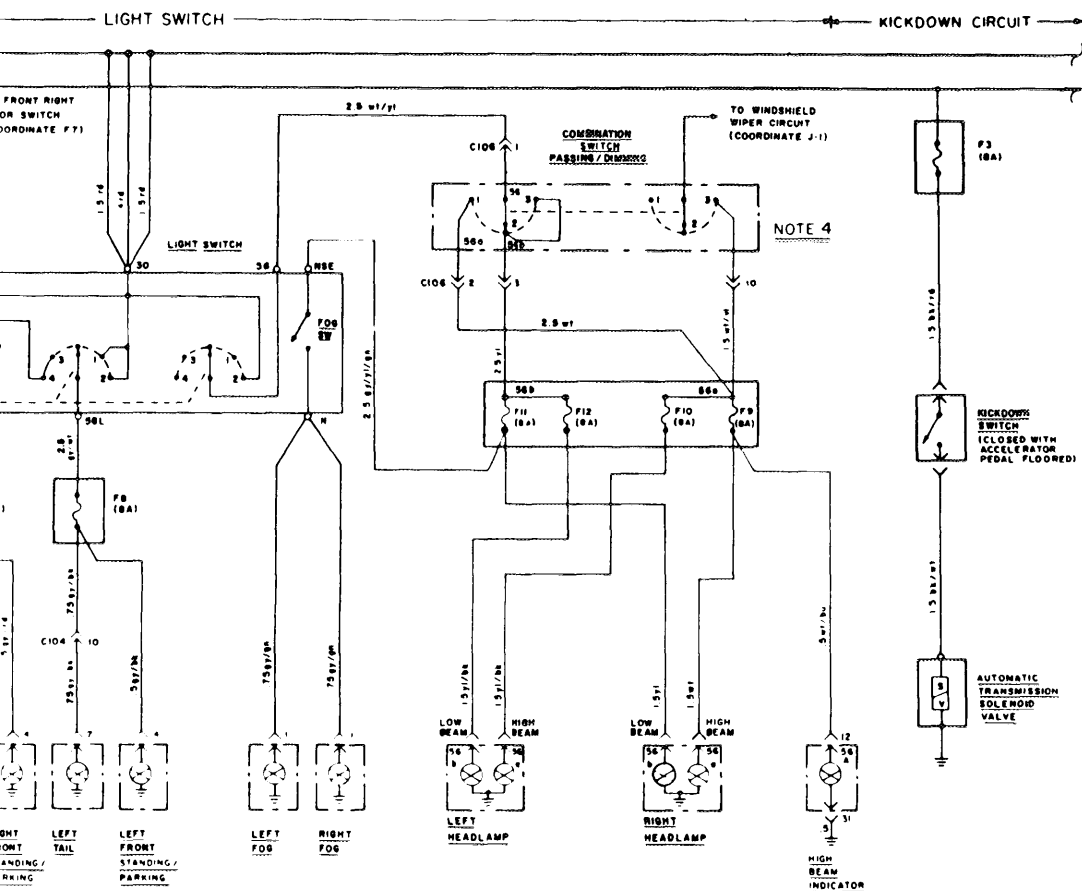

LOCATION FIGURES



4



5



6

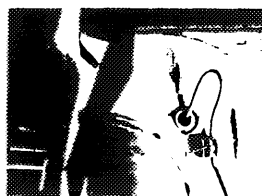


Fig. 7



Fig. 8


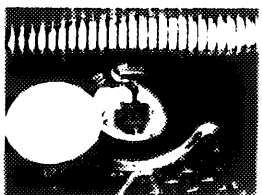


Fig. 9

Fuel tank sensor

1975 300D

AIR CONDITIONING CONTROL	L5
AUXILIARY FAN	L10
BLOWER MOTOR CONTROL	L6
CHARGE	B8
CIGAR LIGHTER	C6
CLOCK	F12
COOLANT TEMPERATURE GAUGE	F12
FUEL GAUGE	F11
HEATED REAR WINDOW	L15
HEATER CONTROL	L6
HORNS	K11
KICKDOWN	B23
LIGHT CIRCUITS	
AIR CONDITIONING THERMOSTAT	D16
BACKUP	L16
BRAKE	L12
BRAKE SYSTEM WARNING	F10
CIGAR LIGHTER	D17
FOG	D21
GLOVE BOX	L13
HEAD	D22
INSTRUMENT CLUSTER	D16
INTERIOR	F8
LOW FUEL WARNING	F11
MARKER	D17/D19
PARKING	D20
STANDING	D20
TAIL	D19
TRUNK	H9
PREGLOW	C11
RADIO	C7
SEAT BELT WARNING	B3
SLIDING ROOF	F2
START	B5/B9
TURN SIGNAL/FLASHER	B14
WINDOWS	F4
WINDSHIELD WIPER/WASHER	L3
POWER BUS DETAILS	L18
SPECIAL GROUNDING CIRCUITS	L20

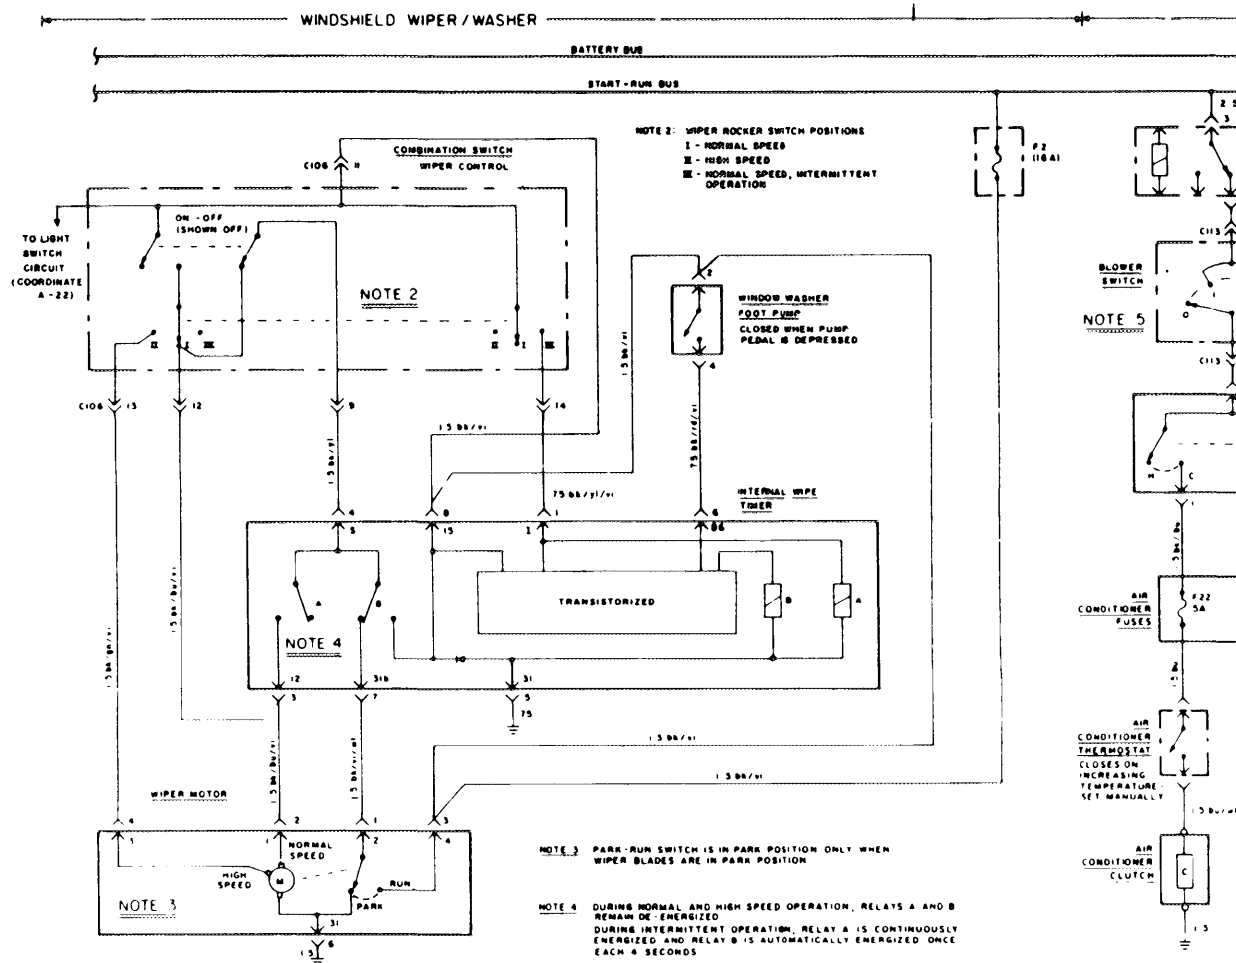

COMPONENT INDEX

SYSTEM/ COMPONENT	LOCATION ON VEHICLE	LOC FIG NO	TERM FIG NO	SYSTEM/ COMPONENT	LOCATION ON VEHICLE	LOC FIG NO	TERM FIG NO
AIR CONDITIONING/HEATING AC Blower motor AC Starter relay - key 4	Center of console Right firewall under fuse bracket	1	T7				
Change over switch Fuse 21 (AC blower) Fuse 22 (AC clutch) Heater blower motor presistor C 113 (6 pins)	Console - left side Right firewall - aux. box Right firewall - aux. box Forward of AC blower	2					
	Mounted to heater control lever plate	4	T2				
AUXILIARY FAN Aux. fan relay - key 6 Fuse 20 (aux. fan) Temp. switch - engine Temp. switch - refrigerant	Below radio fuse Left fender - aux. box Thermostat housing Right firewall	5					
BACKUP C 104 (12 pins)	Under dash - driver's side	6	T4				
BRAKE LIGHTS Switch C 104 (12 pins)	Above brake pedal Under dash - driver's side	6	T4				
HEATED REAR WINDOW Time delay relay Fuse 19 (window) C 112	Under dash - driver's side Left fender - aux. box Behind rear seat - right side	6	T14				
HORNS C 106 (14 pins)	Under dash - driver's side	6	T5				
WINDSHIELD WIPER/WASHER Interval wiper timer Motor C 106 (14 pins)	Under dash - driver's side Firewall - left side Under dash - driver's side	6 3 6	T10 T5				



BATTERY BUS

START - RUN BUS



LOCA'

	LOCATION ON VEHICLE	LOC FIG NO	TERM FIG NO	SYSTEM/ COMPONENT	LOCATION ON VEHICLE	LOC FIG NO	TERM FIG NO
NG	Center of console	1	T7				
	Right firewall under fuse bracket						
	Console, left side	2					
	Right firewall — aux. box						
	Right firewall — aux. box	3					
	Forward of AC blower						
	Mounted to heater control lever plate	4	T2				
	Below radio fuse						
	Left fender — aux. box						
	Thermostat housing						
	Right firewall	5					
	Under dash — driver's side	6	T4				
	Above brake pedal						
	Under dash — driver's side	6	T4				
	Under dash — driver's side	6	T14				
	Left fender — aux. box						
	Behind rear seat — right side	7					
	Under dash — driver's side	6	T5				
HER	Under dash — driver's side	6	T10				
	Firewall — left side	3					
	Under dash — driver's side	6	T5				

 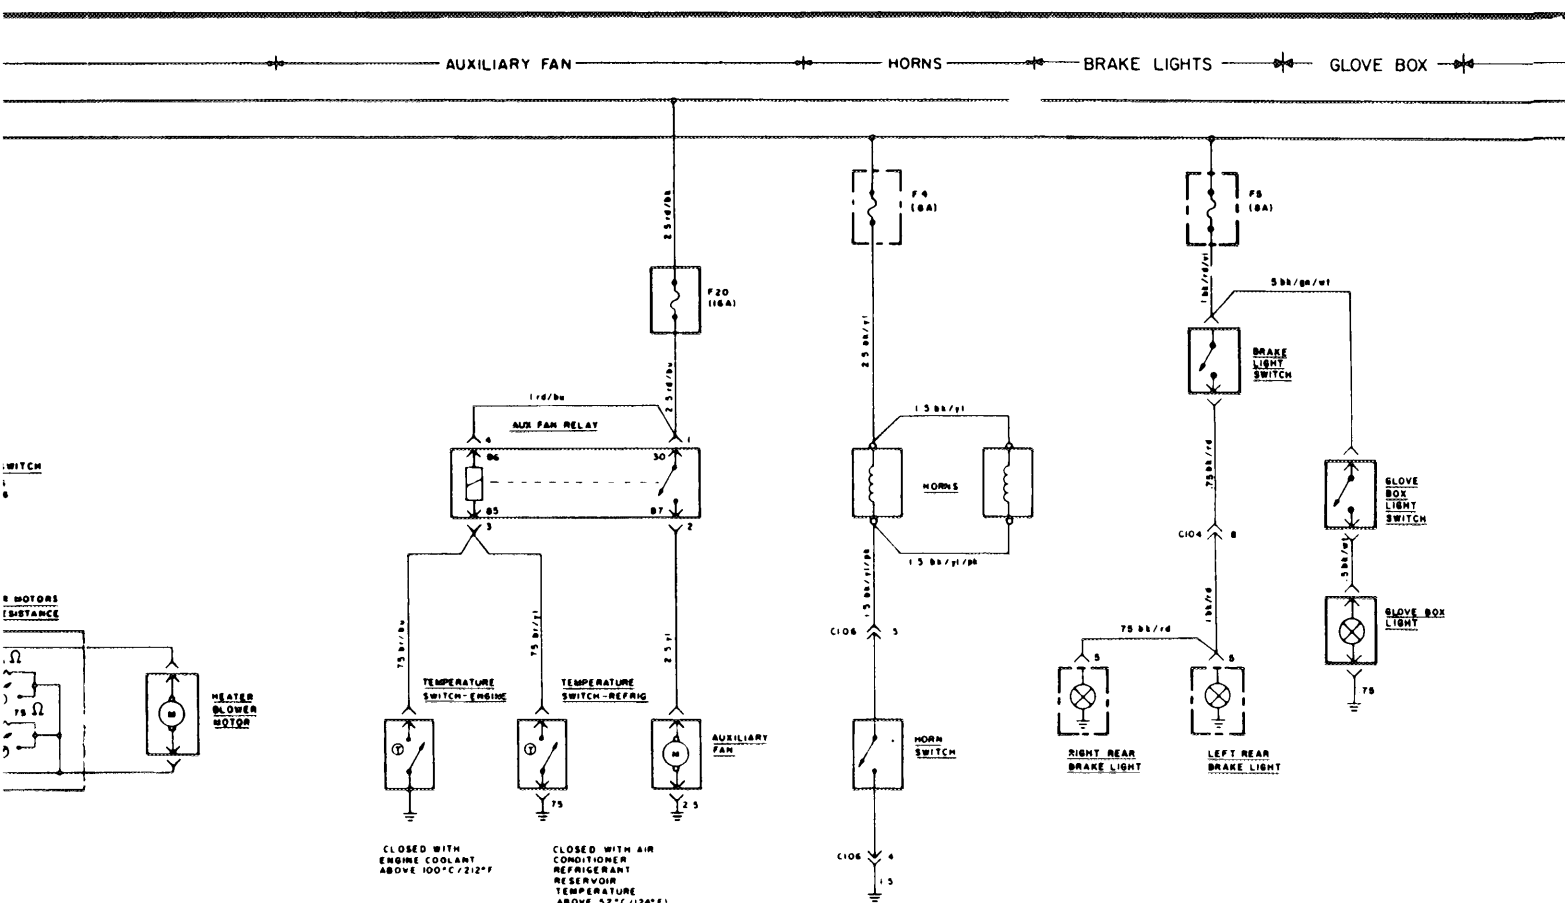

LOCATION FIGURES




FUSE DATA

Fuse 1 (8 amps) Clock Flasher Interior lights Key Buzzer Trunk light	Fuse 8 (8 amps) Front standing parking (left) Left tail light	Fuse 20 (16 amps) Auxiliary fan motor Auxiliary fan relay
Fuse 2 (16 amps) Cigar lighter Windshield wiper/washer Radio	Fuse 9 (8 amps) High beam indicator Right head lights, high beam	Fuse 21 (8 amps) A/C Blower motor
Fuse 3 (5 amps) Heater blower motor A/C control light	Fuse 10 (8 amps) Left headlight, high beam	Fuse 22 (5 amps) Air conditioner clutch
Fuse 4 (8 amps) Turn signal Horns	Fuse 11 (8 amps) Fog lights Right head light, low beam	
Fuse 5 (8 amps) Backup lights Brake lights Glove box light Instrument cluster Seat belt warning Window control	Fuse 12 (8 amps) Left head light, low beam	
Fuse 6 (8 amps) Kickdown circuit	Fuse 13 (8 amps) Not used	
Fuse 7 (8 amps) A/C thermostat illumination Flasher illumination Front standing/parking (right) Instrument cluster lights Left and right marker lights License plate light Tail light (right) Ash tray light	Fuse 14 (8 amps) Not used	
	Fuse 15 (16 amps) Heated rear window	
	Fuse 16 Not used	
	Fuse 17 (16 amps) Left front window Right rear window	
	Fuse 18 (16 amps) Left rear window Right front window	
	Fuse 19 (16 amps) Sliding roof	

1975 300D

AIR CONDITIONING CONTROL	L5
AUXILIARY FAN	L10
BLOWER MOTOR CONTROL	L6
CHARGE	B8
CIGAR LIGHTER	C6
CLOCK	F12
COOLANT TEMPERATURE GAUGE	F12
FUEL GAUGE	F11
HEATED REAR WINDOW	L15
HEATER CONTROL	L6
HORNS	K11
KICKDOWN	B23
LIGHT CIRCUITS	
AIR CONDITIONING THERMOSTAT	D16
BACKUP	L16
BRAKE	L12
BRAKE SYSTEM WARNING	F10
CIGAR LIGHTER	D17
FOG	D21
GLOVE BOX	L13
HEAD	D22
INSTRUMENT CLUSTER	D16
INTERIOR	F11
LOW FUEL WARNING	F11
MARKER	D17/D19
PARKING	D20
STANDING	D20
TAIL	D19
TRUNK	H9
PREGLOW	C11
RADIO	C7
SEAT BELT WARNING	B3
SLIDING ROOF	F2
START	B5/B9
TURN SIGNAL/FLASHER	B14
WINDOWS	F4
WINDSHIELD WIPER/WASHER	L3
POWER BUS DETAILS	L18
SPECIAL GROUNDING CIRCUITS	L20

SPECIAL GROUNDING CIRCUITS

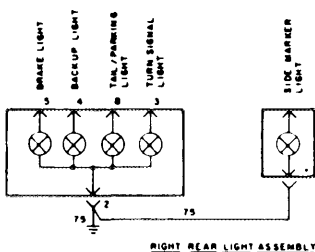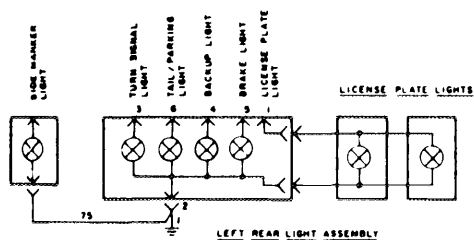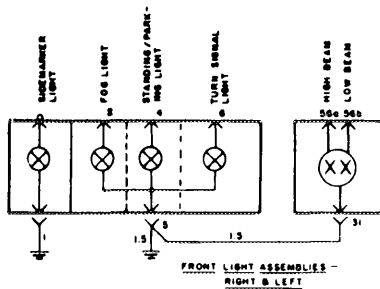

J

K

L

M