

| | | | | | | | | | |
|-------|--|-----|-------|---|------------|--|---|--|------------------|
| A1 | Instrument cluster | 3A | F1-5 | Fuse 5, circuit 15 | 12B | <p>Grounds not indicated, components are connected on engine block or bodywork</p> | | | |
| A1e8 | Instrument illumination | 3A | F1-9 | Fuse 9, circuit 30 | 11B | | | | |
| A1h1 | Warning buzzer | 4A | K5 | Power seat relay module (USA) | 14M | | X6/1 | Terminal block (circuit 58d) (1- or 2-pole) | 1E 16E 22H |
| A1r1 | Instrument illumination rheostat | 4A | K24 | CF relay module | 9M | | | | |
| A2/4 | Radio control module | 4M | M11 | Automatic antenna (radio/telephone) (USA) | 27M | | | | |
| A12 | Tailgate closing assist | 19A | N2/4 | Seat belt warning module (USA) | 11M | | X8 | Terminal block (tailgate) | 22B 23G |
| A12s1 | Tailgate closing assist switch | 21A | N7 | Exterior lamp failure monitoring module | 6A | | | | |
| A12s2 | Tailgate lock switch | 20A | N26 | ATA control module | 13M 18M | | X30 | Accessory equipment connector block | 26A |
| A12x1 | Tailgate closing assist connector | 17D | N40 | Audio power amplifier (circuit 58D) | 2A | | X34 | Right front door contact switch intermediate connector | 14G |
| A12x2 | Tailgate microswitch connector | 19D | | | | | | | |
| E10/1 | Center air outlet illumination | 2M | R3 | Front cigar lighter (with ashtray illumination) | 5M | X42/6 | Left front door contact switch connector (ATA) | 20G | |
| E10/2 | Left air outlet illumination | 16A | R3e1 | Illumination | 4M | X42/7 | Right front door contact switch connector (ATA) | 14E | |
| E10/3 | Right air outlet illumination | 15A | R3r1 | Heating element | 5M | Z7 | Circuit 87/87E connector sleeve (feed from base module LH-SFI, N16/1, overvoltage protection relay CFI and HFM-SFI, K1, K1/1, K1/2) | 17G | |
| E13/2 | Glove compartment lamp with switch | 6M | R3x1 | Illuminated cigar lighter connector | 4K | | | | |
| E15/4 | Dome/reading lamp (with seat belt reminder lamp) | 10A | S1 | Exterior lamp switch | 7A | Z81 | Circuit 58d connector sleeve | 3E | |
| E17/3 | Left front door entrance/exit lamp | 16M | S6 | Hazard flasher switch | 3M | | | | |
| E17/4 | Right front door entrance/exit lamp | 15M | S8/2 | Warning buzzer contact (exterior lamps/CL) | 12A | | | | |
| E17/5 | Left rear door entrance/exit lamp | 17M | S17/3 | Left front door switch | 8M | | | | |
| E17/6 | Right rear door entrance/exit lamp | 19M | S17/4 | Right front door switch | 14A | | | | |
| E20 | Exterior lamp switch illumination | 17A | S17/5 | Left rear door switch | 18M | | | | |
| E25/1 | Left C-pillar interior lamp | 23M | S17/6 | Right rear door switch | 20M | | | | |
| E25/2 | Right C-pillar interior lamp | 26M | S18/1 | Rear dome lamp switch (with illumination) | 22M | | | | |
| E25/3 | Left D-pillar interior lamp | 24M | W1 | Main ground (behind instrument cluster) | | | | | |
| E25/4 | Right D-pillar interior lamp | 25M | W4 | Ground (front dome lamp) | | | | | |
| F1 | Fuse and relay box | | W6 | Ground (left wheelhousing in trunk) | | | | | |
| F1-C | Fuse C, circuit 30 | 25B | W8 | Ground (tailgate terminal block) | | | | | |
| F1-1 | Fuse 1, circuit 15R | 7L | W12 | Ground (center console) | | | | | |
| F1-3 | Fuse 3, circuit 58R | 7L | | | | | | | |

Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.

Explanations and Notes of Wiring Diagram see Section 00-A
Locations/Connections/Overview see Section 00-B/00-C

