

Removing and installing air injection/transmission shiftpoint retard 14-7253 relay

Operation no. of operation texts and work units or standard texts and flat rates:

14-7253.

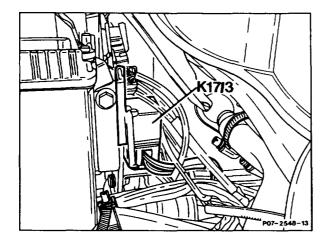

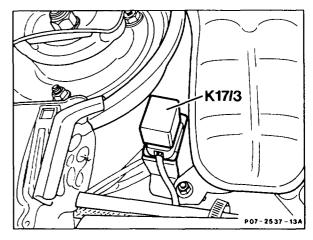

Model 124 Model 201

Ground cable at battery disconnect, connect.

Air injection/transmission shift point retard relay (K17/3) remove, insert.

Note

Air injection/transmission shiftpoint retard relay (K17/3) only for model 124/201 national version (CH) (N) (S) (DK) (SF) as of 1991.