
Operation no. of operation texts and work units or standard texts and flat rates: 15–2193.

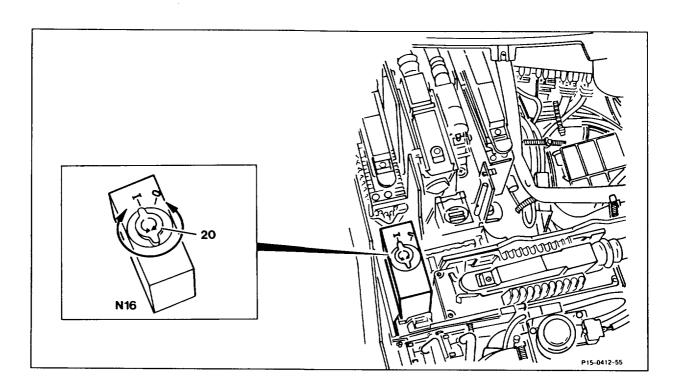

Removal

Rotary knob (20) turn to position "0." Engine systems control unit (N16) pull off upward.

Installation

Engine systems control unit (N16) insert from above into coupling. Rotary knob (20) turn to position "I."

Note

Check control unit is tightly seated.

Testing

See test program 07.3-0121.

Note Models 124, 126, 201 Software revision, storage of fault code 3 discontinued

Production breakpoint: July 1990

Model	Engine	Vehicle ident end no.	Basic version	Nation:	al version	0
124.026	103.940	B 312083	×	х	-	-
124.030	103.983	B 312083	×	х	-	_
124.230	103.985	B 312083	x	х	_	-
126.024/025	103.981	A 564914	x	x	_	_
201.029	103.942	F 759713	х	x	_	-