
Operation no. of operation texts and work units or standard texts and flat rates

A. Model 124 4MATIC

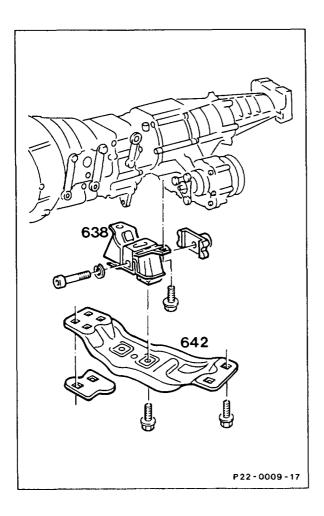


Transmission	support.
Engine carrier (642)	remove, install, (M8) 20 Nm, (M10) 40 Nm.
Engine mount (638)	remove, install.
Installation	in the reverse order.


Note

If the rear engine mount on 4MATIC models is replaced, the engine stop must be slackened after driving about 1000 km and 10000 km, respectively (22-2200).

B. Model 124

Model 124 USA (retrofitting)

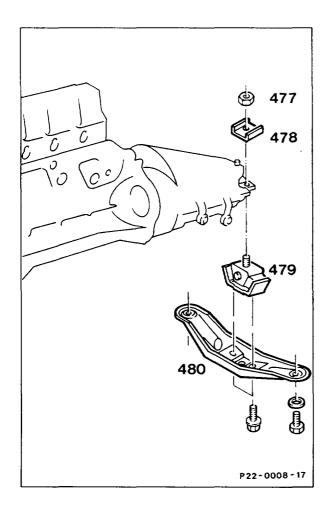


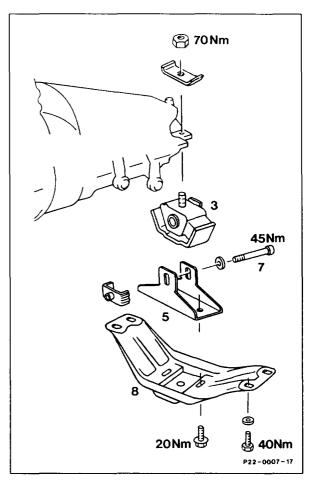

Note

If the rear engine mount with stop limiter (freeway-hop) is replaced the engine stop must be adjusted after driving about 1000 km and about 10000 km (22-2130).

C. Models 107, 126, 201

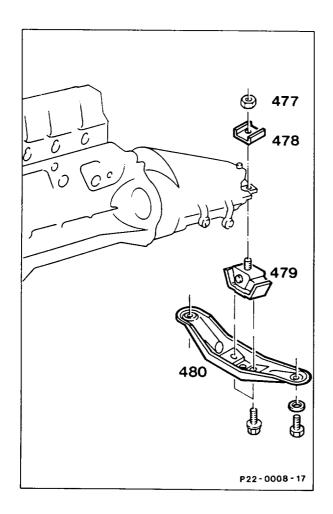


Transmission	 support.		
Engine carrier (480)	 remove, install,	(M8)	20 Nm,
	Models 107, 126	(M10)	45 Nm,
	Model 201	(M10)	40 Nm.
Engine mount (479)	 remove, install, nu	ıt (477)	70 Nm.

Notes

Modification to rear engine carrier

The sheet metal thickness of the rear engine carrier has been increased from 2 mm to 2.5 mm.

Identification: recess (arrows) on outer edge of engine carrier.

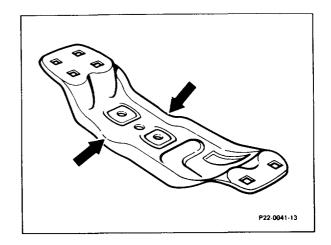


Thickness of engine carrier material, production breakpoint: 08/1987

Model	Engine	Engine end no.		Vehicle ident end no.	
		manual transmission	automatic transmission	A	F
124.226	103.940	*	*	*	*
124.230 124.290	103.983	•	*	552574	047874

not recorded

Different securing bolt for engine mount to rear engine carrier

 A bolt head with internal torx (previously hexagon socket) is used.




Internal torx securing bolt, production breakpoint: 10/1985

Model	Engine	Engine end no.		Vehicle i	Vehicle ident end no.	
		manual transmission	automatic transmission	A	F	
124.226	103.943	000385	000928	*	*	
124.230 124.290	103.985	001824	006698	*	*	

not recorded

D. Model 129

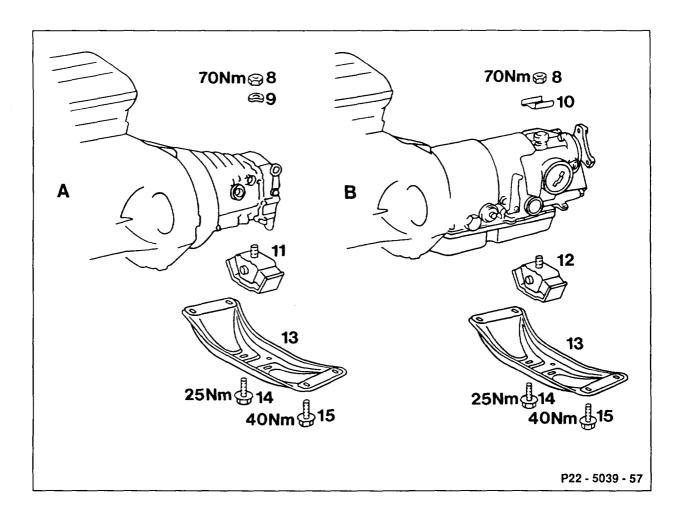

Α	Manual transmission
B	Automatic transmission

Transmission	support.		
Automatic transmission: cable straps of cable of kickdown switch at engine carrier (13)	slacken, tie.		
Engine carrier (13)	remove, install,		25 Nm, 40 Nm
Engine mount (11 or 12)	remove, install (70 Nm).		
Washer (9) or pad (10)	note.		