


## 07.3-1669 Removing and installing diaphragm pressure regulator

Operation No. of operation texts and work units or standard texts  
and flat rates:  
07-1669

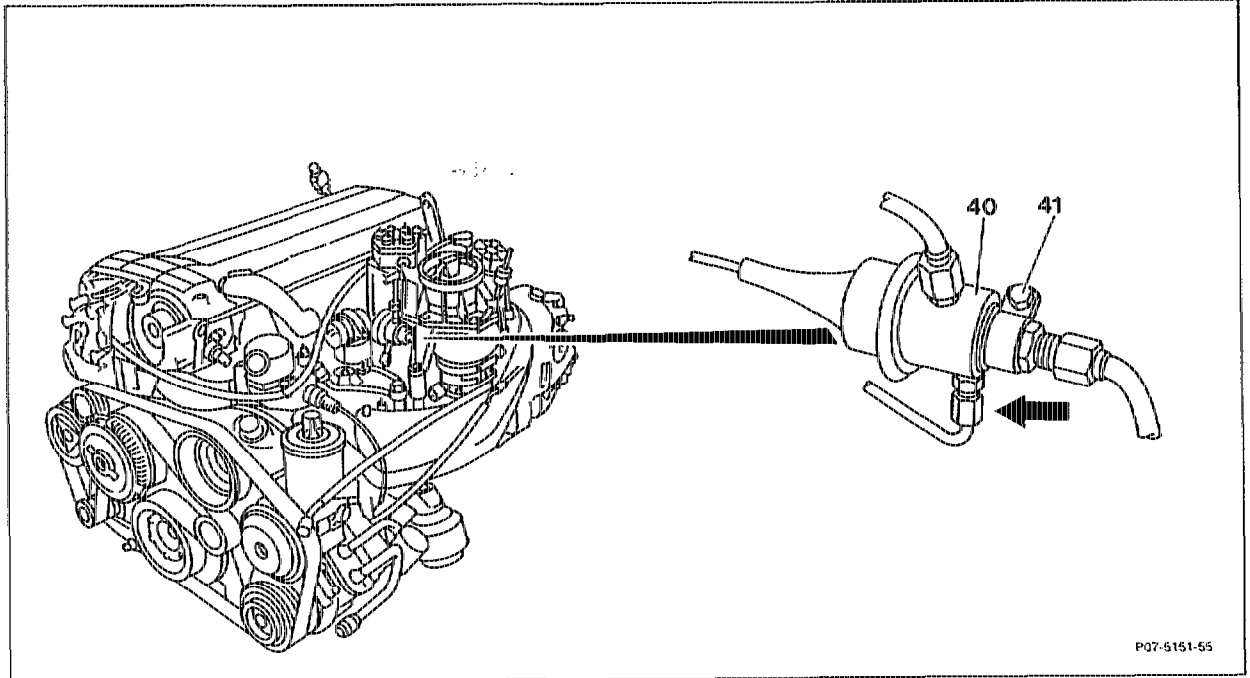

Vent line at crankcase ventilation moulded hose .....	pull off, fit on.
Fuel line (arrow) .....	disconnect, connect, collect fuel flowing out.
Fuel supply and return lines .....	disconnect, connect. Seal return line with rubber plug. Collect fuel flowing out.
Diaphragm pressure regulator (40) .....	remove, install by unscrewing bolt (41), screwing in.