


## 07.3-1688 Removing and installing overvoltage protection

Operation No. of operation texts and work units or standard texts  
and flat rates:  
07-1688

### A. Model 124

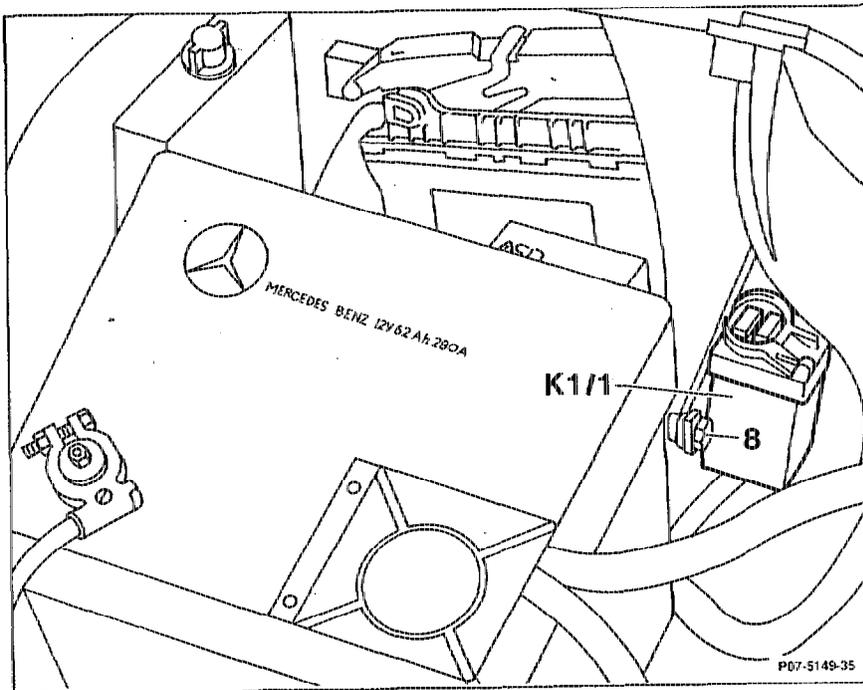


Ignition .....	switch off.
Component compartment cover .....	remove, install.
Bolt (8) .....	unscrew, screw in.
Overvoltage protection relay (K1/1) .....	pull off, fit on.
CIS-E control unit fault memory .....	read out, erase if necessary (see Diagnosis Manual Engine, Volume 2, Index 0).

#### Note

Stored faults which may originate from test work resulting from cables being disconnected or from a simulation, must be erased in the fault memory after completing the work.

## B. Model 129

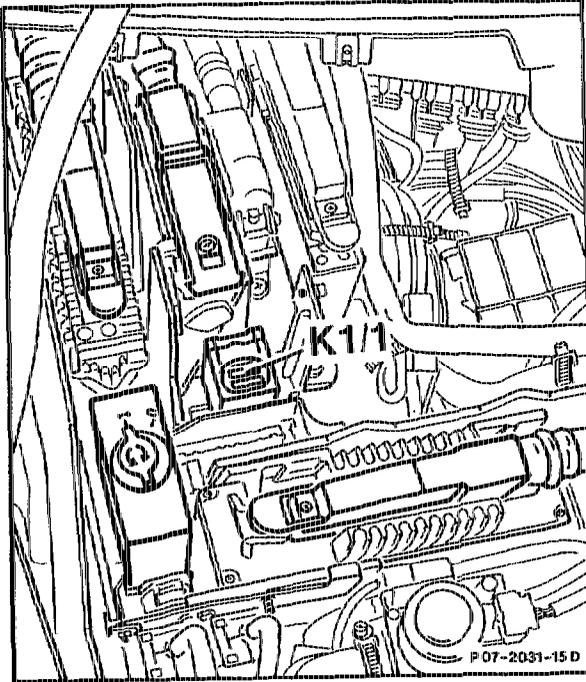

Ignition .....	switch off.
Component compartment cover .....	remove, install.
Overvoltage protection relay (K1/1) .....	pull off, fit on.
CIS-E control unit fault memory .....	read out, erase if necessary (see Diagnosis Manual Engine, Volume 2, Index 0).

### Note

Stored faults which may originate from test work resulting from cables being disconnected or from a simulation, must be erased in the fault memory after completing the work.