


20-2300 Removing and installing coolant pipe from heat exchanger to coolant pump

Preceding work:
Top part of resonance intake manifold removed
(AR09.20-1310D)

Operation no. of operation texts and work units or standard texts and flat rates

Engines with oil-coolant heat exchanger

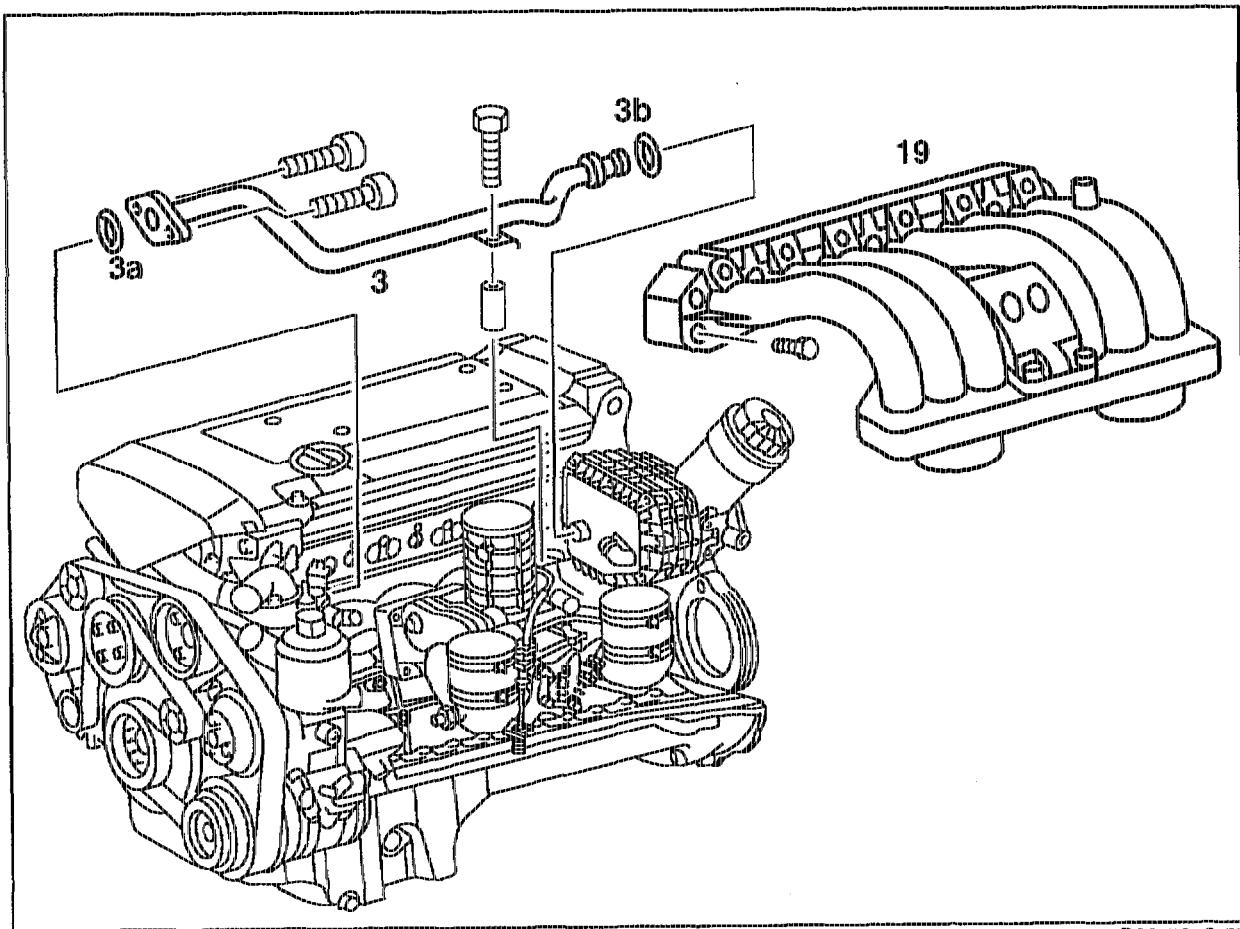

P20-5313-57

Coolant at crankcase drain (20-0100).

Coolant pipe (3) at coolant pump and at bottom part of resonance intake manifold unbolt, remove, install.

Note

Replace O-rings (3a) and (4a) at coolant pump and at heat exchanger.

Coolant pour in (20-0100).

Cooling system check for leaks (20-0170).

Top part of resonance intake manifold (19) install (AR09.20-1310D).