L3 AR30.10-P-3400D Re


Removing and installing throttle control cable

25.5.94

ENGINE 104.941 /942 /943 /944 /991 /992 /994, 111.920 /940 /941, 111.944 up to 31.8.96, 111.960 /961 /974, 111.975 up to 31.8.96

## Engine 104


<i>30</i>	Accelerator control cable
30/4	Plastic clip
<i>30/5</i>	Guide piece
<i>30/6</i>	Rubber grommet
32/3	Accelerator control lever bracket
33	Accelerator pedal lever
33/1	Restoring spring
Arrow	Accelerator control cable mount

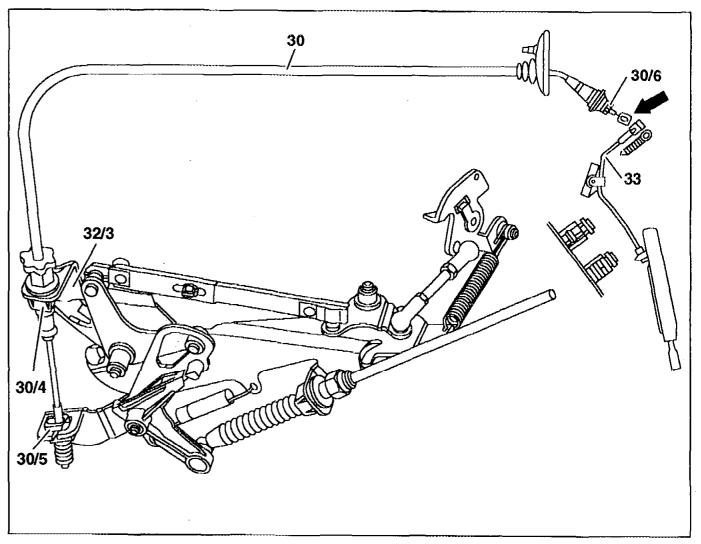


P30.10-0223-06

## Engine 111

30	Accelerator control cable
30/4	Plastic clip
<i>30/5</i>	Guide piece
30/6	Rubber grommet
32/3	Accelerator control lever bracket
33	Accelerator pedal lever
33/1	Restoring spring
Arrow	Accelerator control cable mount

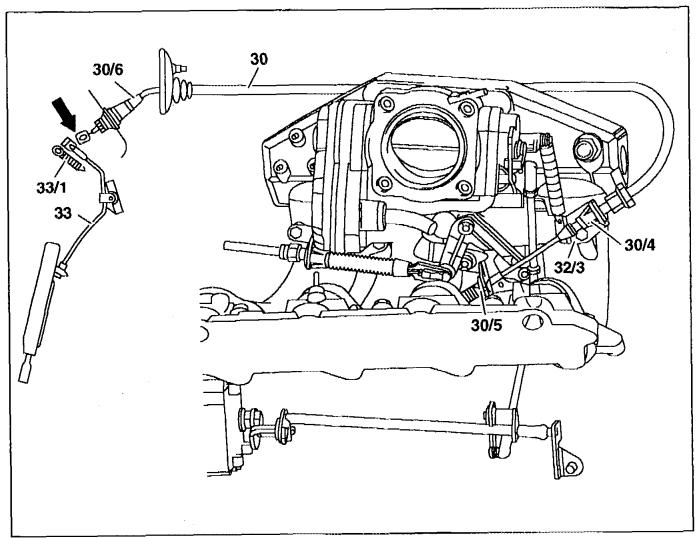

P30.10-0224-06

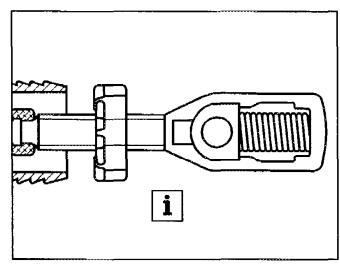

P30.10-0213-01

XX	Removing, installing		
1	Take out guide piece (30/5)	First of all, pull plastic nipple out of guide piece	
2	Compress plastic clip (30/4) and pull off bracket of accelerator control lever (32/3) together with accelerator control cable		
3	Detach accelerator control cable mount (arrow) at accelerator pedal lever (33)	Model 124 release restoring spring (33/1).  Model 129, 140, 202 take out bracket together with expanding pin	

		Accelerator cable with spring in accelerator control cable mount. At WOT stop, the accelerator pedal lever travel is increased by the spring being compressed. This enables the kickdown switch to operate.	
4	Press accelerator control cable (30) out, working from inside the car	Do not press out rubber grommet (30/6)	
5	Take out accelerator control cable (30) complete, working from engine compartment		
6	Install in the reverse order		
7	Grease accelerator control cable (30) between guide piece (30/5) and end piece with anti-corrosion grease		BR00.45-Z-1007-06A
8	Check accelerator control, adjust		AR30.10-P-1010D <b>J1</b>

## Repair products

	Designation	Order number
BR00.45-Z-1007-06A	Anti-corrosion grease	001 989 37 51 10