


07.1-5713 Removing and Installing Fuel Pump

Preceding work:

Operation no. of operation texts and work units or standard texts
and flat rates: 07-5713

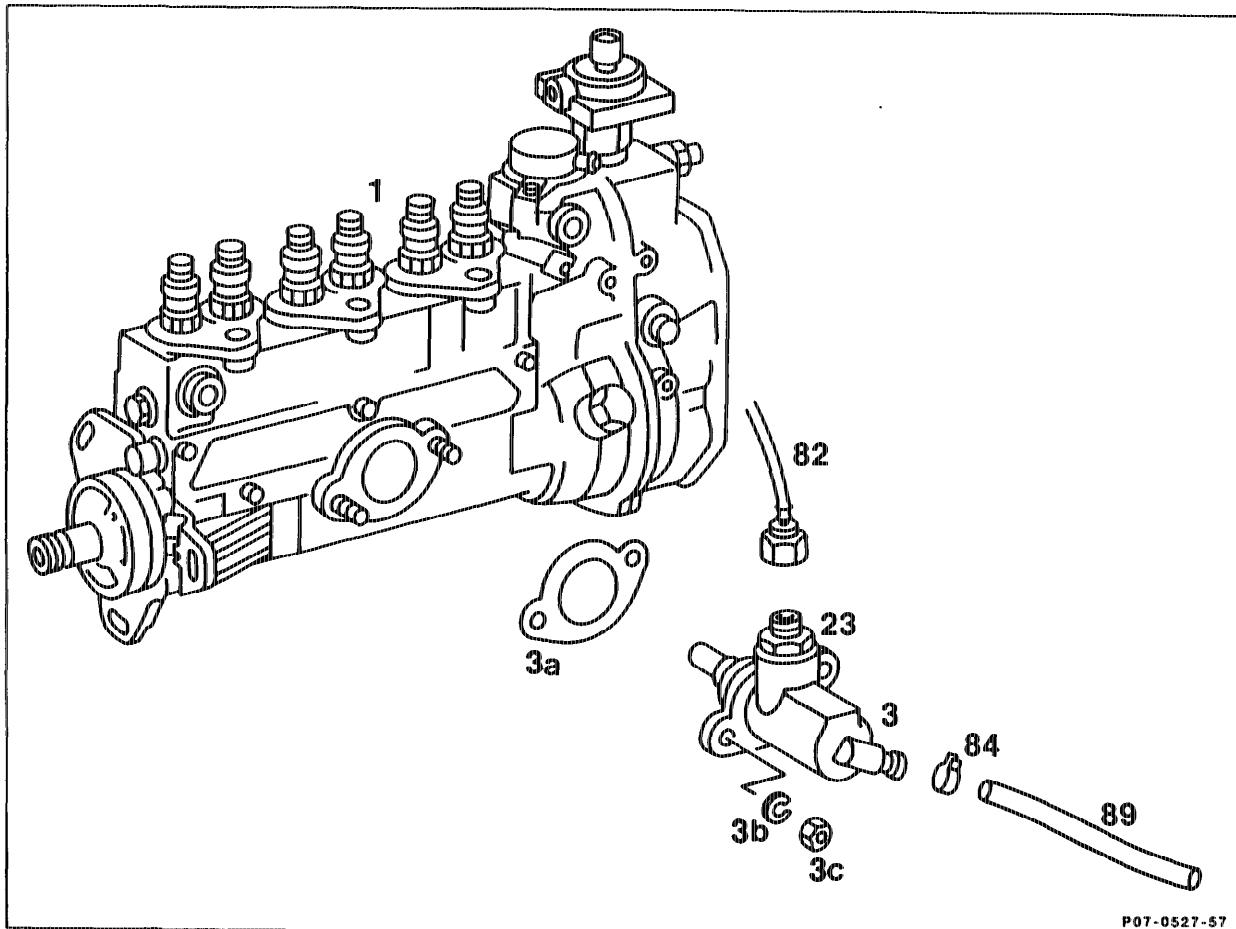

Clip (84)	open, close.
Suction line (89)	detach, fit on.
Fuel filter inlet (82)	disconnect and connect.
Nuts (3c)	remove, install.
Washers (3b)	remove, install.
Fuel pump (3)	remove, install, collect engine oil flowing out when removing.
Gasket (3a)	renew.
Inlet connector (23)	remove, install when replacing the fuel pump.

