


# 14-0100 Removing, Installing Trap Oxidizer (USA)

Preceding work:

Operation no. of operation texts and work units or standard texts and flat rates:

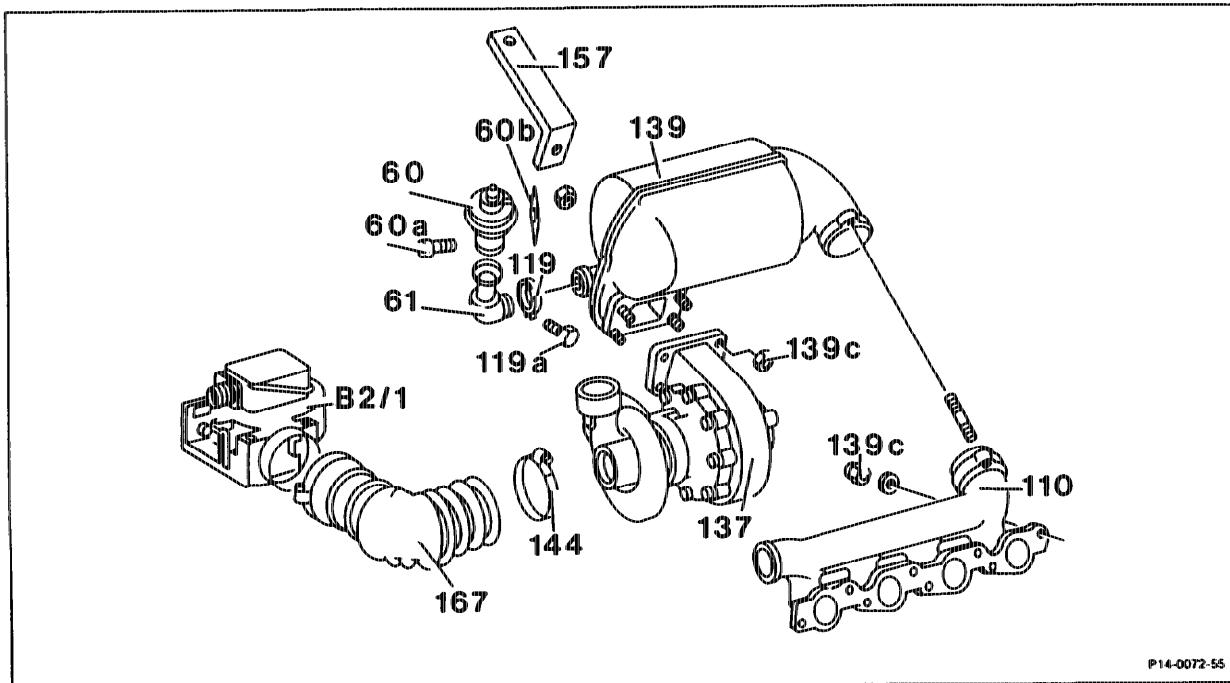

P14-0072-55

Vehicle .....	drive onto inspection platform or pit.
Bottom section of noise encapsulation .....	attach, detach (Model 124 only).
Air cleaner .....	remove, install (09-1051).
Hose clip (144) .....	slacken at air flow sensor (B2/1) and detach intake hose (167), fit on.
Partition wall between trap oxidizer and air cleaner .....	remove, install (9 bolts) of which 6 accessible from above, 3 accessible from below (refer to instruction).
Vacuum line red/violet/brown on ARF valve (60) and red/violet/blue on air recirculation valve .....	detach, fit on.
Clip (119) on corrugated pipe (61) .....	slacken, tighten.
ARF valve (60) .....	remove, install.
Trap oxidizer (139) on exhaust manifold (110) ...	unscrew, screw on.
Supporting bracket .....	unscrew, screw on and remove at the same time as trap oxidizer.



Bracket (157) .....	remove, install.
Sealing surfaces .....	clean.
Gasket (60b) .....	renew.
Screw (60a) 2 off .....	install, tightening torque 25 Nm.
Bolt for clip (119 a)	
Nut (139c, 6 off M10) .....	install, tightening torque 45 Nm.

#### Note

Remove, install partition wall (A) (9 bolts), of which 6 accessible from above and 3 accessible from below.

