



ENGINE 601, 602, 603 (except 601.913, 602.982)

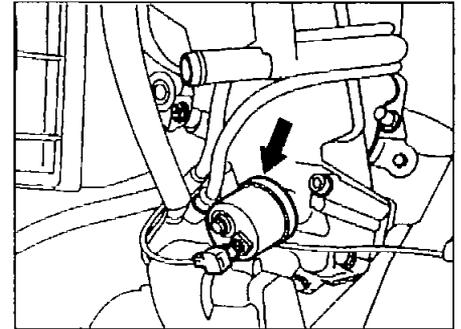

P18.00-0404-01

 GF	Position		GF18.40-P-1101-01A GF18.40-P-1101A/1
	Function	When ignition is switched on, voltage is supplied to the gage in the instrument cluster. Ground is switched to the gage in the pressure sensor at the oil filter housing (arrow). Any change in oil pressure results in different electrical resistances in the pressure sensor and thus in changed pressures indicated in the gage.	

The oil pressure sensor (arrow) is bolted to the oil filter housing.

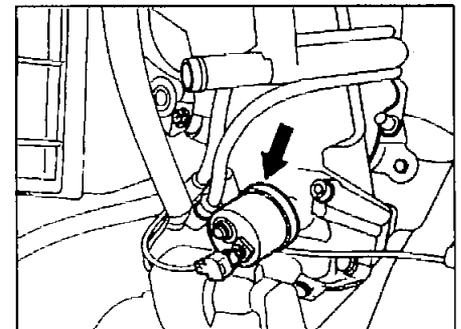

P18.00-0404-01