


D2


AR01.00-P-2410D

Disconnecting, connecting engine wiring harness

17.2.95

ENGINE 604, 605, 606 in MODEL 210 up to 31.5.96

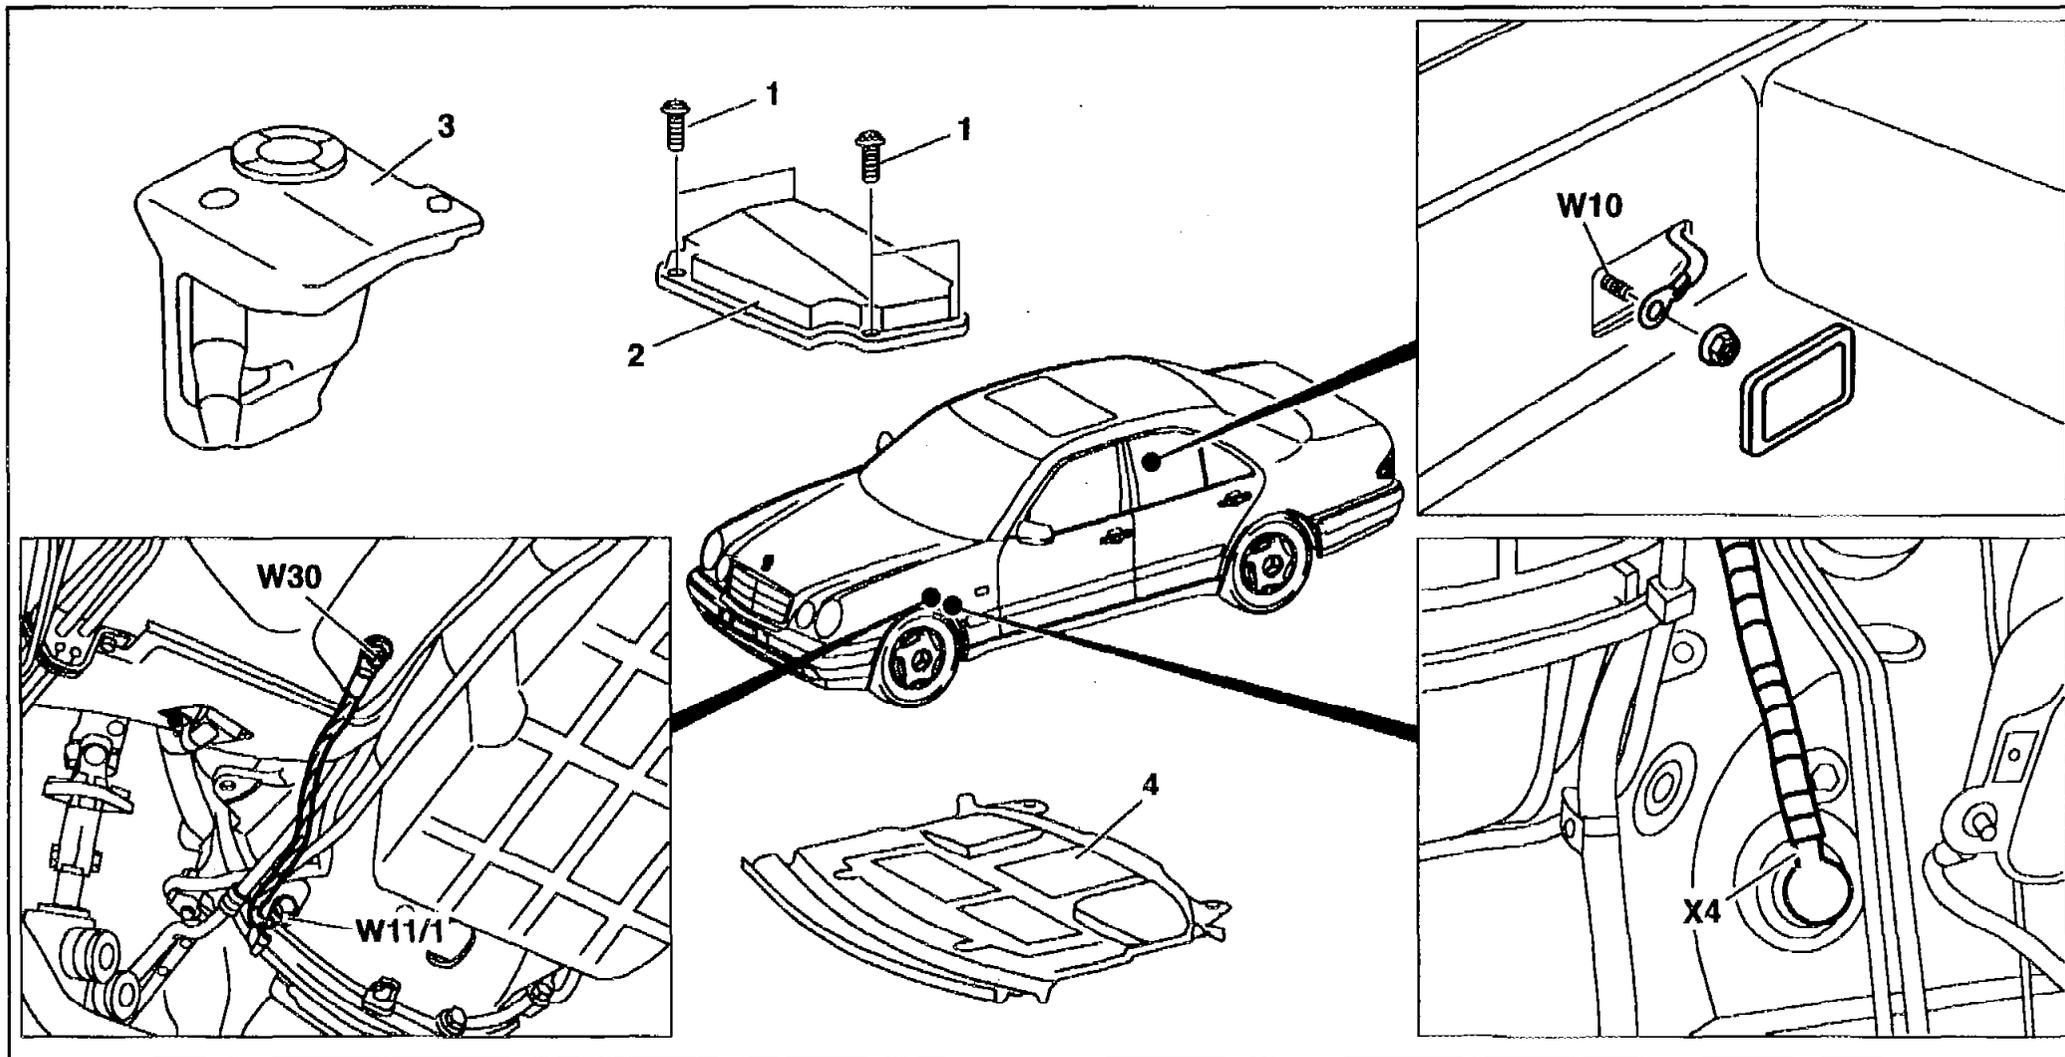

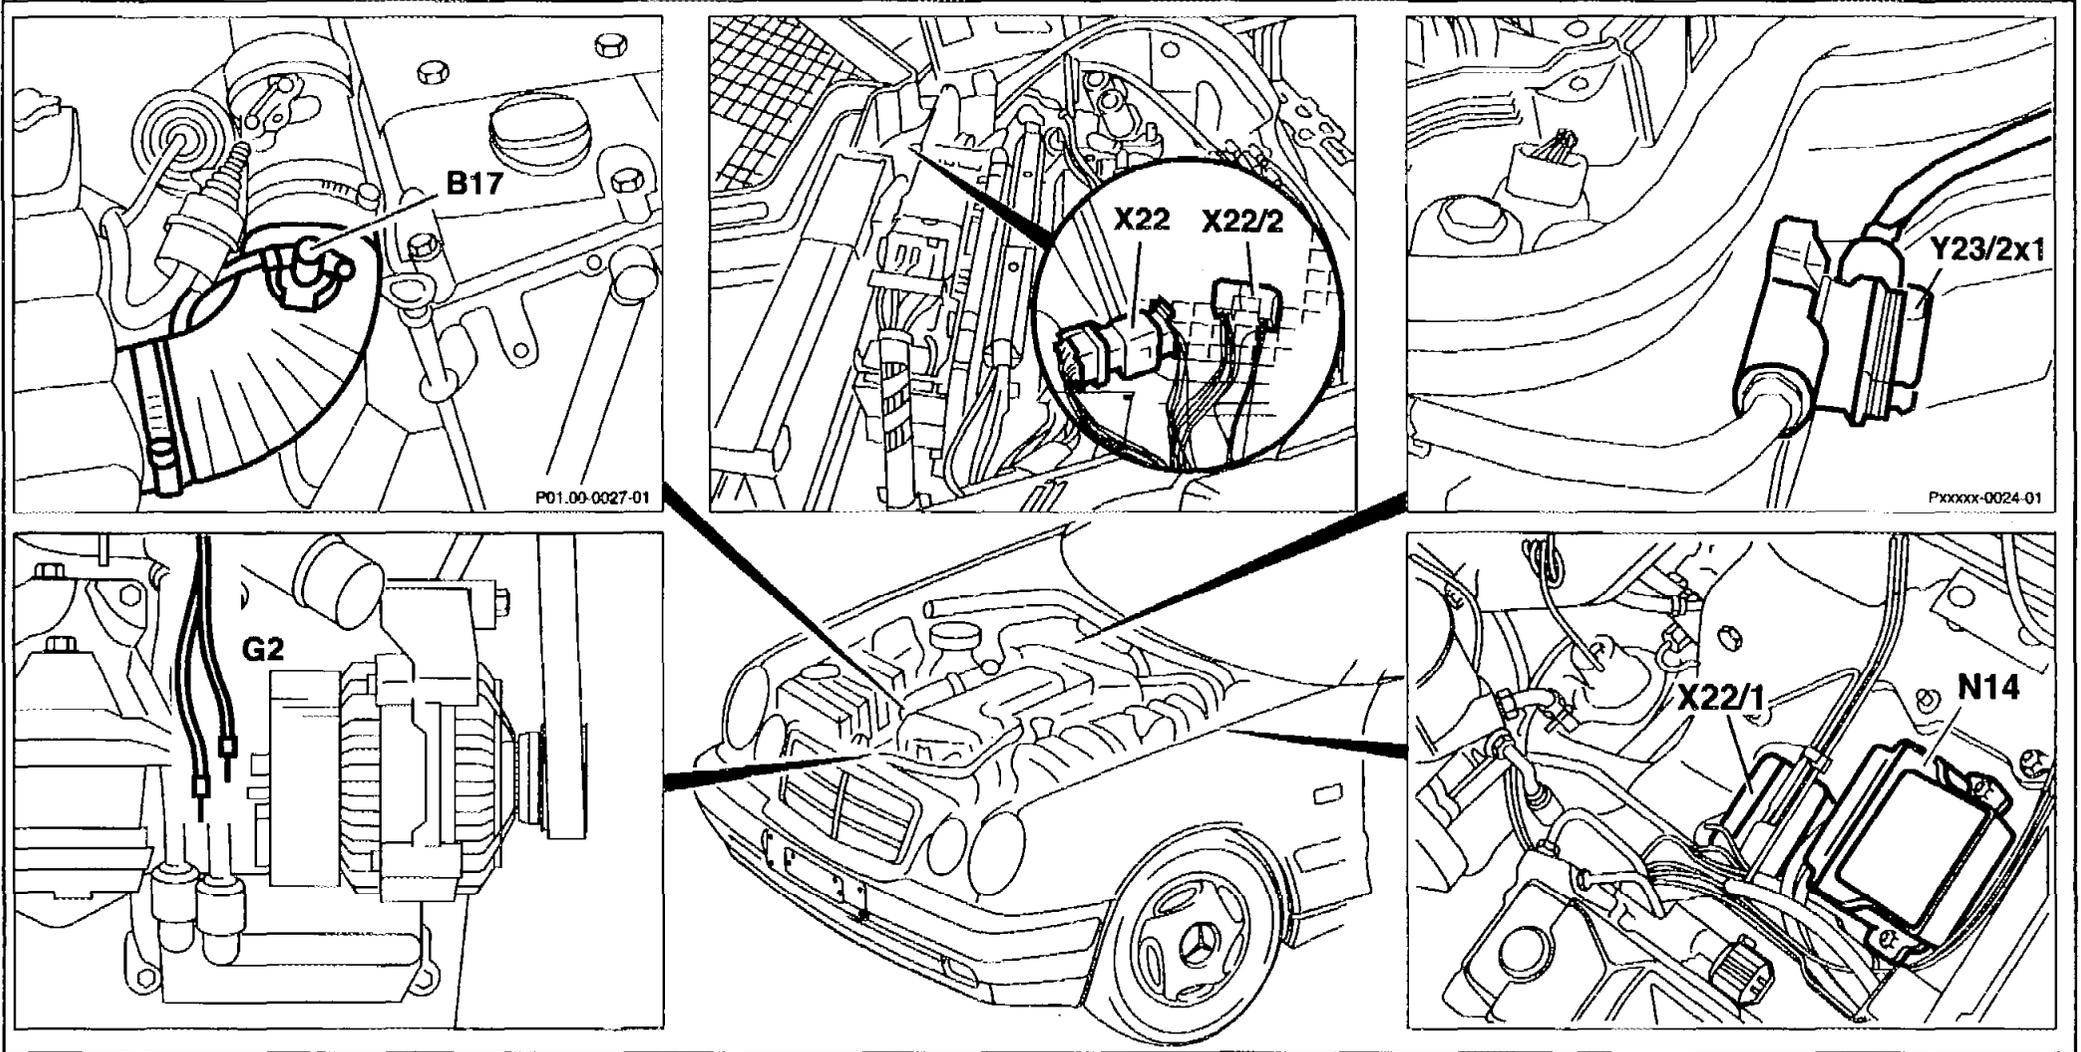



1 Component compartment cover
 B17 Intake air temperature sensor
 G2 Generator wiring harness
 N14 Pre-glow time relay
 W10 Battery ground below rear seat
 W11/1 Engine ground (ground strap)

X4 Connector terminal 30, left footwell
 X22 Engine compartment/transmission connector
 X22/1 Engine compartment/engine connector, autom. transm.
 X22/2 Engine compartment/engine connector, terminal 50
 Y23/2x1 EDFI distributor-type injection pump connector

Fig. item, etc.	Work instructions		
W10	Battery ground	disconnect	AR54.10-P-0003A
N14x1	Preglow time relay	Unplug connector (arrow).	
2	Remove component compartment cover		
X22, X22/2	Unplug connectors in right of component compartment	Pay attention to fuses of plug connections!	
B17x1	Unplug intake air temperature sensor connector		
X22/1	Unplug engine compartment/engine connector AG		
Y23/2x1	Unplug EDFI distributor injection pump connector		
X4	Connector terminal 30 left footwell	Unbolt cable on outside of body.	
G2	Disconnect generator wiring harness		
W11/1	Unbolt engine ground (ground strap)		
	Unplug AC compressor connector	If AC fitted	