M7


AR20.10-P-2460HA

Removing and engine installing coolant thermostat

2.4.93

ENGINE 602.982, 604, 605, 606 / (except, 606.964)

- 17 Coolant thermostat housing
- 19 O-ring
- 20 Coolant thermostat

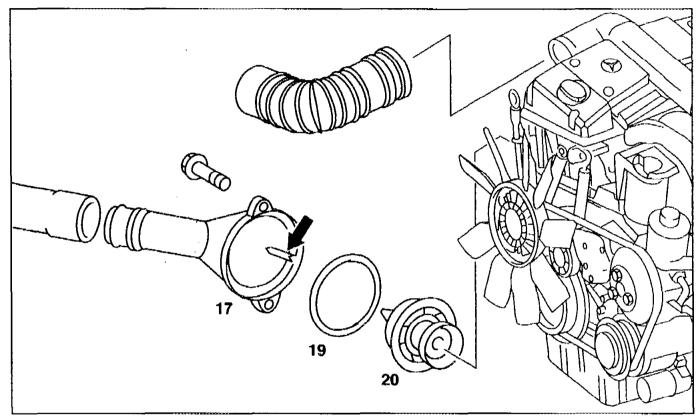

P20.10-0204-05

RA SA		
	Removing, installing	

⚠Danger!	Risk of injury to skin and eyes from scalding from hot coolant which splashes out. Risk of poisoning from swallowing coolant	Do not open the expansion reservoir cap or radiator cap unless the coolant temperature is below 90°C. Unscrew cap carefully up to the first pre-dentent or slowly approx. 1/2 turns. Wear protective clothes.	AS20.00-Z-0001-01A J17
1	Drain coolant	at radiator and crankcase	AR20.00-P-1142HW D6
2	Remove coolant thermostat housing (17)		WH58.30-Z-1001-06A WH58.30-Z-1002-06A
3	Remove coolant thermostat (20)	Installation: The indentation on the coolant thermostat (20) must align with the rib on the coolant thermostat housing (17) (arrow). Replace O-ring (19).	
4	Install in reverse order	Check cooling system for leaks	AR20.00-P-1010HA P5

Commercially-available tool

Number	Designation	Company (e.g.)	Order number
WH58.30-Z-1001-06A	6 mm socket wrench hexagon on flexible shaft for hose clamps with worm-gear drive	Hazet Güldenwerther Bahnhofstraße 25-28 D-42857 Remscheid	426-6
WH58.30-Z-1002-06A	7 mm socket wrench hexagon on flexible shaft for hose clamps with worm-gear drive	Hazet Güldenwerther Bahnhofstraße 25-28 D-42857 Remscheid	426-7