

## 30-580 Wiring diagrams


### A. General

These repair instructions only include wiring diagrams for the models 124 and 201 up to 08/89 or model year 89. Wiring diagrams for models 129 and 140 as of 09/89 or model year 90, refer to the file "Electric wiring diagrams".

A new cruise control amplifier with reference resistor is installed in the models 201.029/128. On the other models it will be phased in.


The new cruise control amplifier has no influence on the cabling and therefore also not on the wiring diagrams.

N4

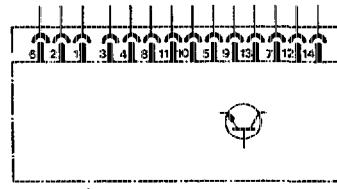


N4 Cruise control amplifier

N4/2

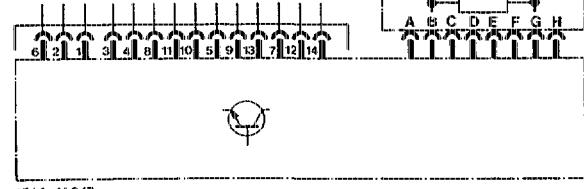

N4/2 Cruise control amplifier with reference resistor  
R29 Cruise control reference resistor

## B. Model 124 with automatic transmission

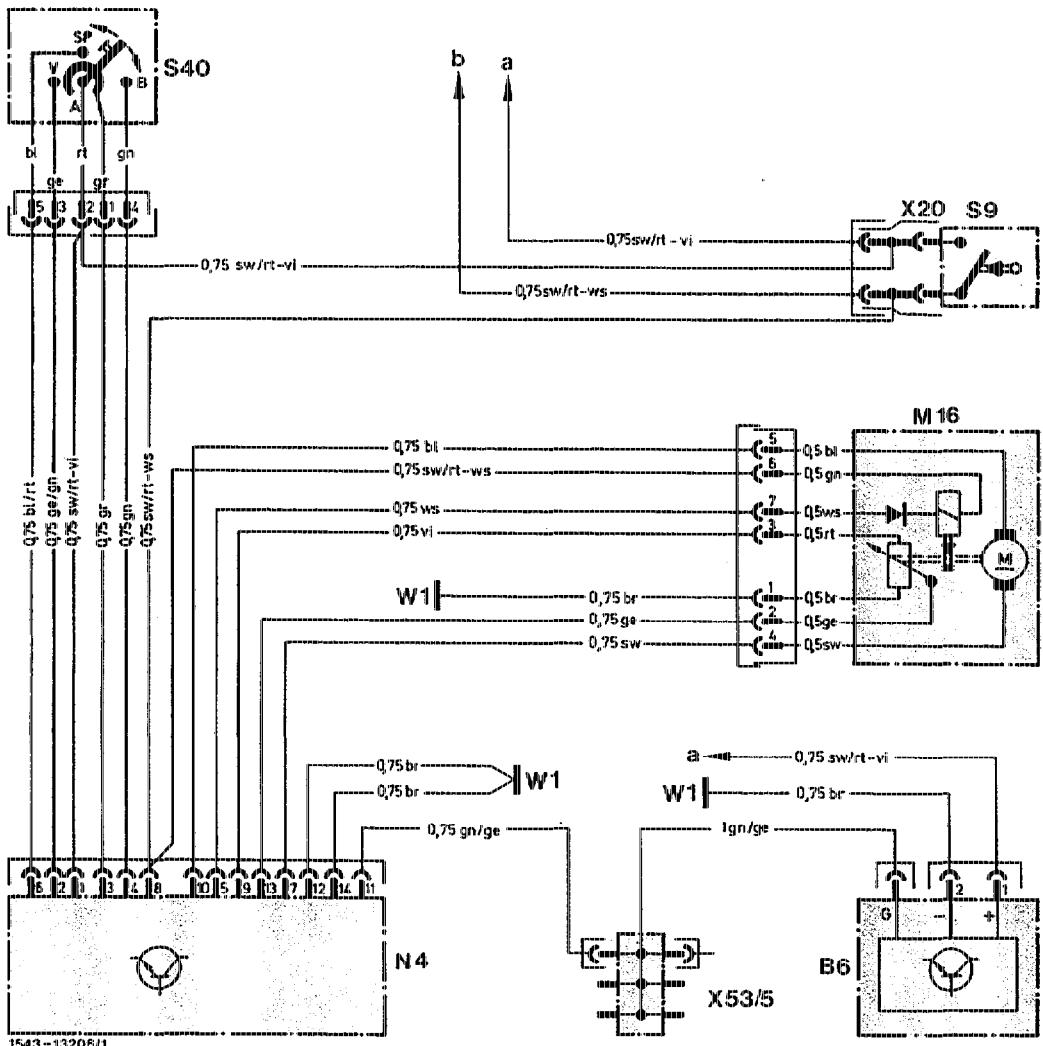


### Models

124.020/080/120/180, 124.125/130 up to vehicle ident. end no. A 087383 (except USA)

124.133/193/333/393 up to approx. 08/88


B6	Hall-effect speed sensor	W1	Main ground (behind instrument cluster)
M16	Cruise control actuator	X20	Connector, stop lamp switch
N4	Cruise control amplifier	X53/5	Multipoint connector, Hall-effect sensor
S9	Stop lamp switch	a	On fuse 5 terminal 15
S40	Cruise control switch	b	On N7 lamp monitoring device, line-up 15
V	Decelerate/set		
B	Accelerate/set		
SB	Resume		
A	Off		

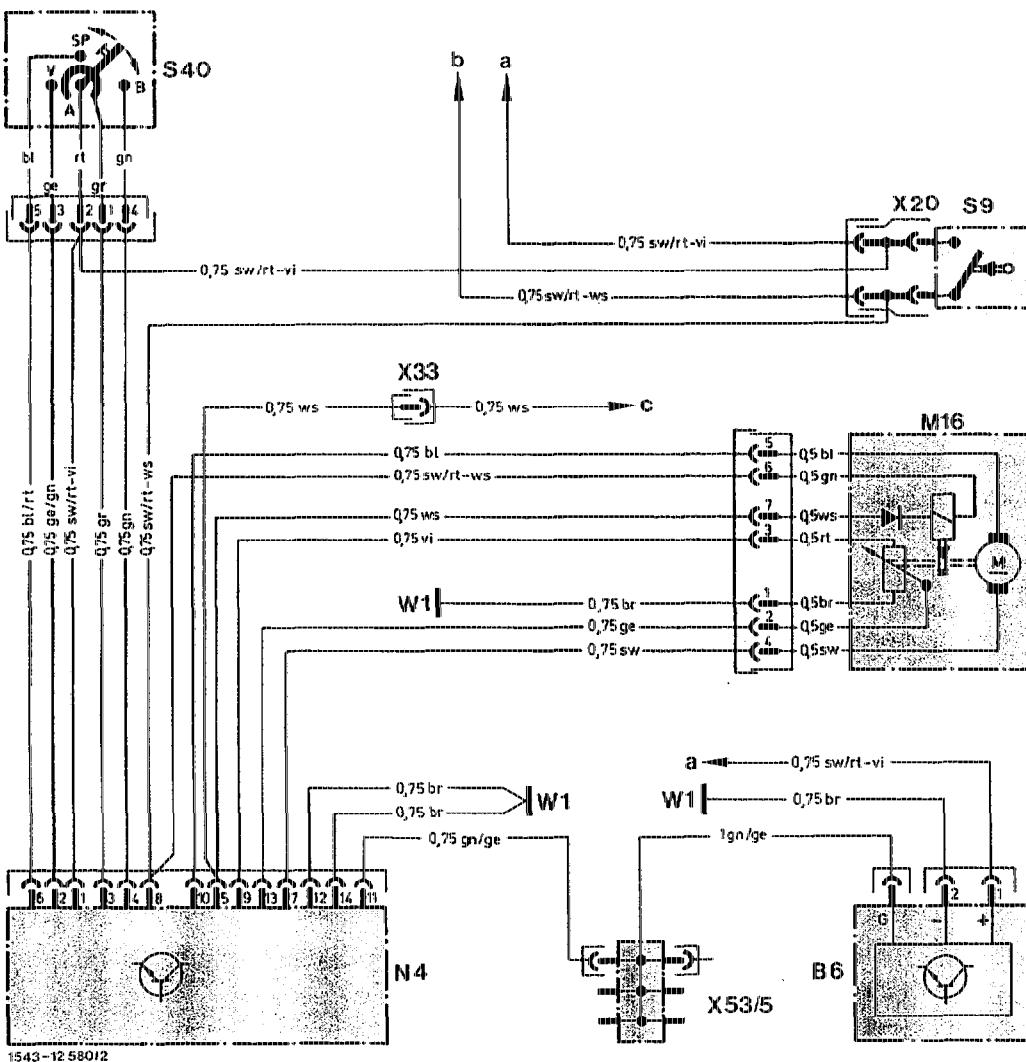

Models 124.023/026/03 up to approx. end of 08/85

B6	Hall-effect speed sensor	W1	Main ground (behind instrument cluster)
M16	Cruise control actuator	X20	Connector, stop lamp switch
N4	Cruise control amplifier	X33	Connector, CIS-E/cruise control (1pole)
S9	Stop lamp switch	X53/5	Multipoint connector, Hall-effect sensor
S40	Cruise control switch	a	On fuse 5 terminal 15
V	Decelerate/set	b	On N7 lamp monitoring device, line-up 15
B	Accelerate/set	c	On N3 control unit injection system line-up 6
SB	Resume		
A	Off		



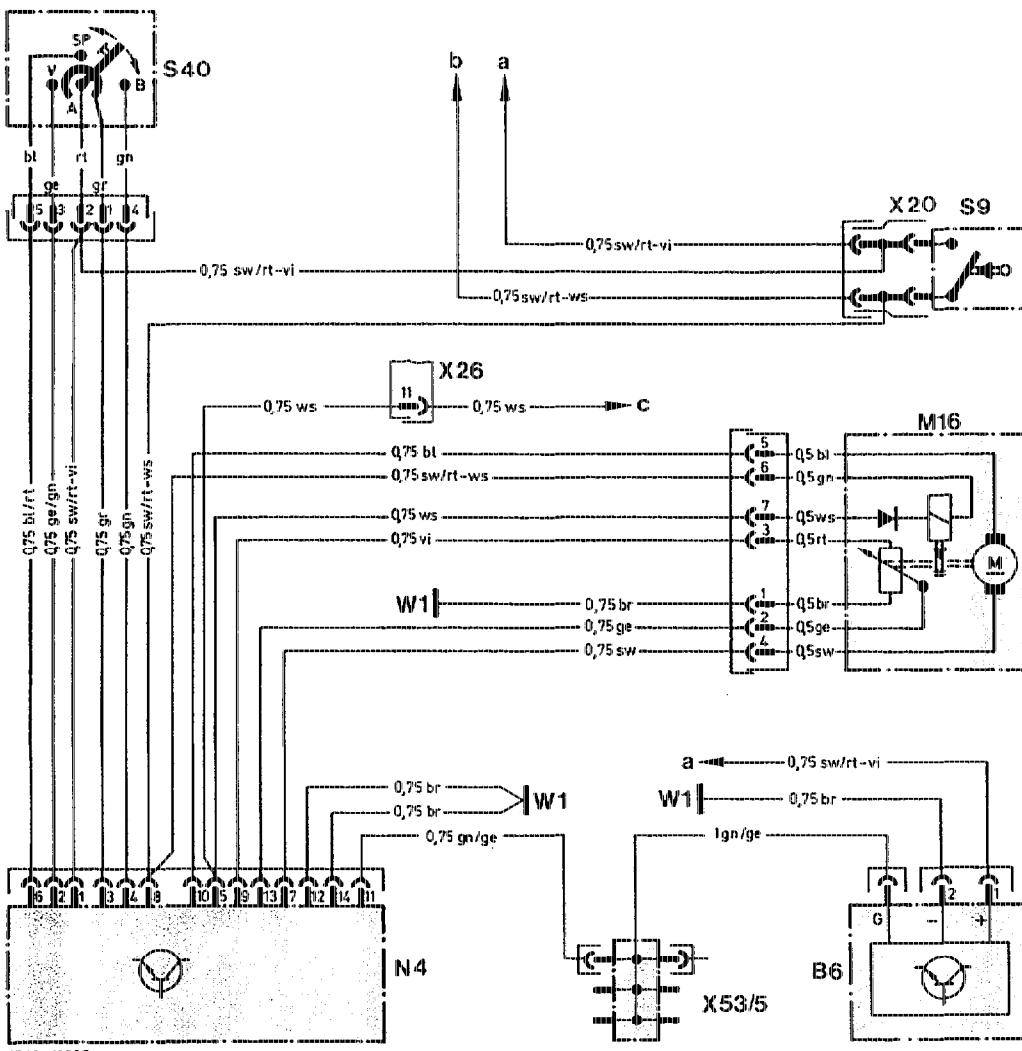


### Models

124.021/23 as of approx. 09/85 RÜF/CAT up to approx. 08/88,

124.026/03 as of approx. 09/85 RÜF/CAT up to approx. 08/87,

124.043/083 RÜF/CAT up to approx. 08/88, 124.090 and 124.2 RÜF/CAT up to approx. 08/87

B6	Hall-effect speed sensor	W1	Main ground (behind instrument cluster)
M16	Cruise control actuator	X20	Connector, stop lamp switch
N4	Cruise control amplifier	X26	Connector interior/engine, 12-pole
S9	Stop lamp switch	X53/5	Multipoint connector, Hall-effect sensor
S40	Cruise control switch	a	On fuse 5 terminal 15
V	Decelerate/set	b	On N7 lamp monitoring device, line-up 15
B	Accelerate/set	c	On N3 control unit injection system line-up 6
SB	Resume		
A	Off		

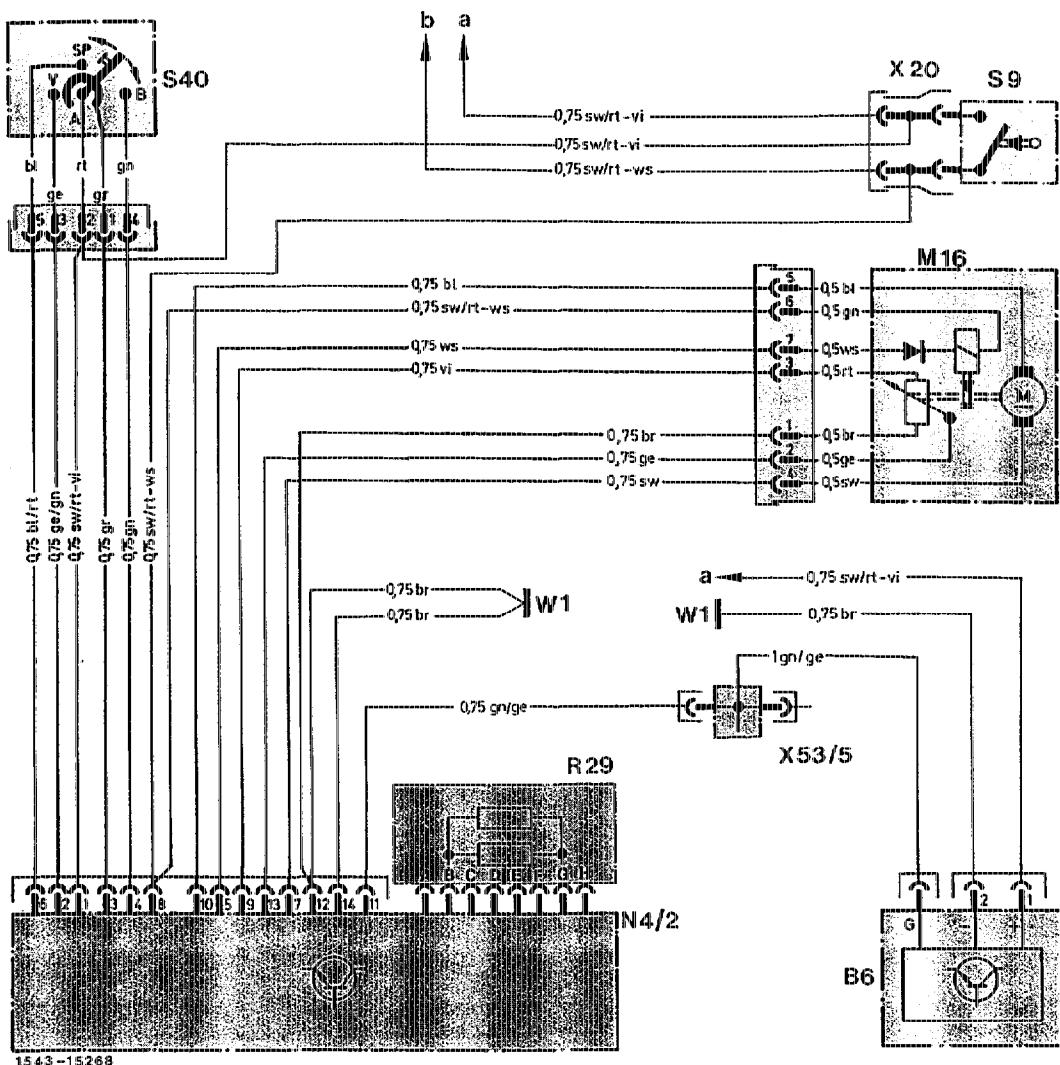


## Models

124.021/023/043/083 RÜF/CAT as of approx. 09/88, 124.026/03/09 and 124.2 RÜF/CAT as of approx. 09/87, 124.128/133/193/333/393 as of approx. 09/88 up to 08/89

B6	Hall-effect speed sensor	W1	Main ground (behind instrument cluster)
M16	Cruise control actuator	X20	Connector, stop lamp switch
N4/2	Cruise control amplifier with reference resistor	X53/5	Multipoint connector, Hall-effect sensor
R29	Cruise control reference resistor	a	On fuse 5 terminal 15
S9	Stop lamp switch	b	On N7 lamp monitoring device, line-up 15
S40	Cruise control switch		
V	Decelerate/set		
B	Accelerate/set		
SB	Resume		
A	Off		




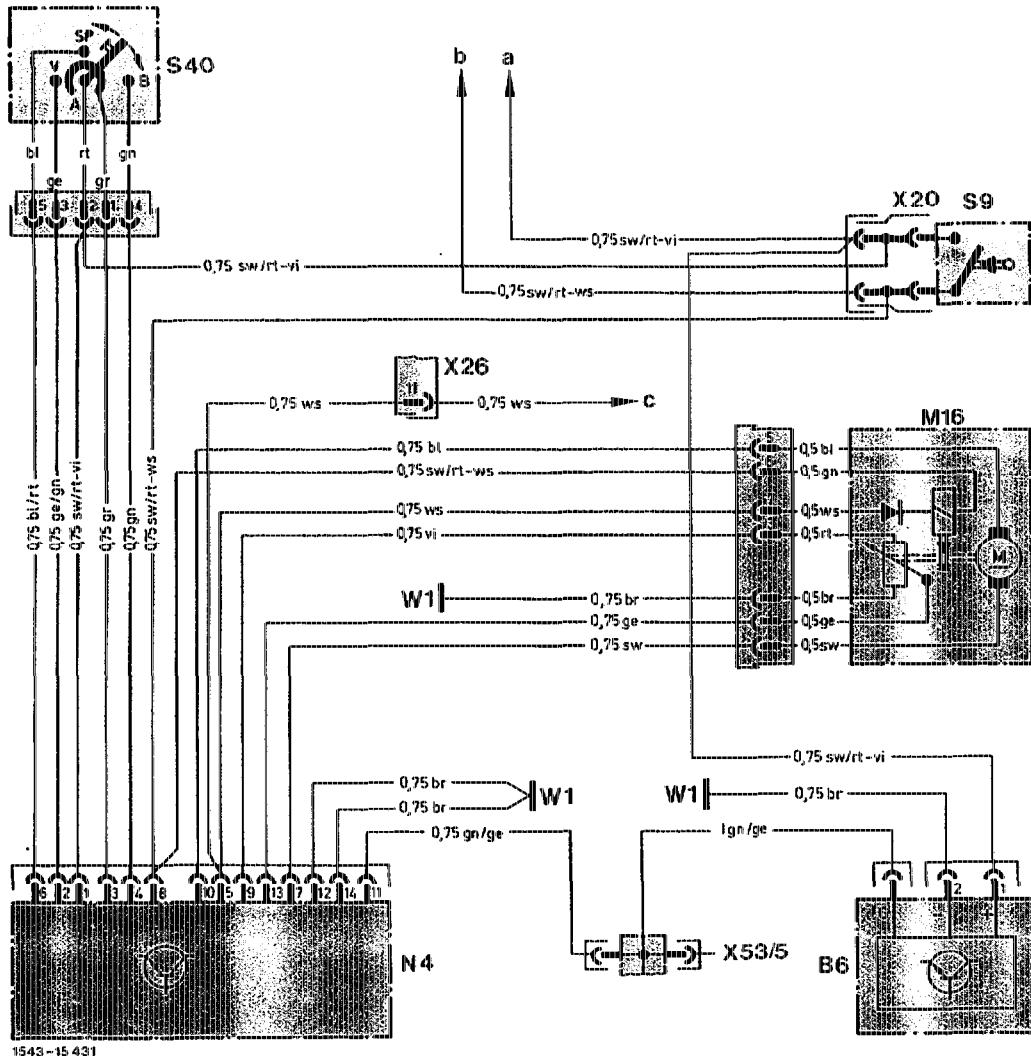

Models 124.026/030 (USA) 1986, 1987


B6	Hall-effect speed sensor	W1	Main ground (behind instrument cluster)
M16	Cruise control actuator	X20	Connector, stop lamp switch
N4	Cruise control amplifier	X26	Connector interior/engine, 12-pole
S9	Stop lamp switch	X53/5	Multipoint connector, Hall-effect sensor
S40	Cruise control switch	a	On fuse 5 terminal 15
V	Decelerate/set	b	On N7 lamp monitoring device, line-up 15
B	Accelerate/set	c	On N3 control unit injection system line-up 6
SB	Resume		
A	Off		



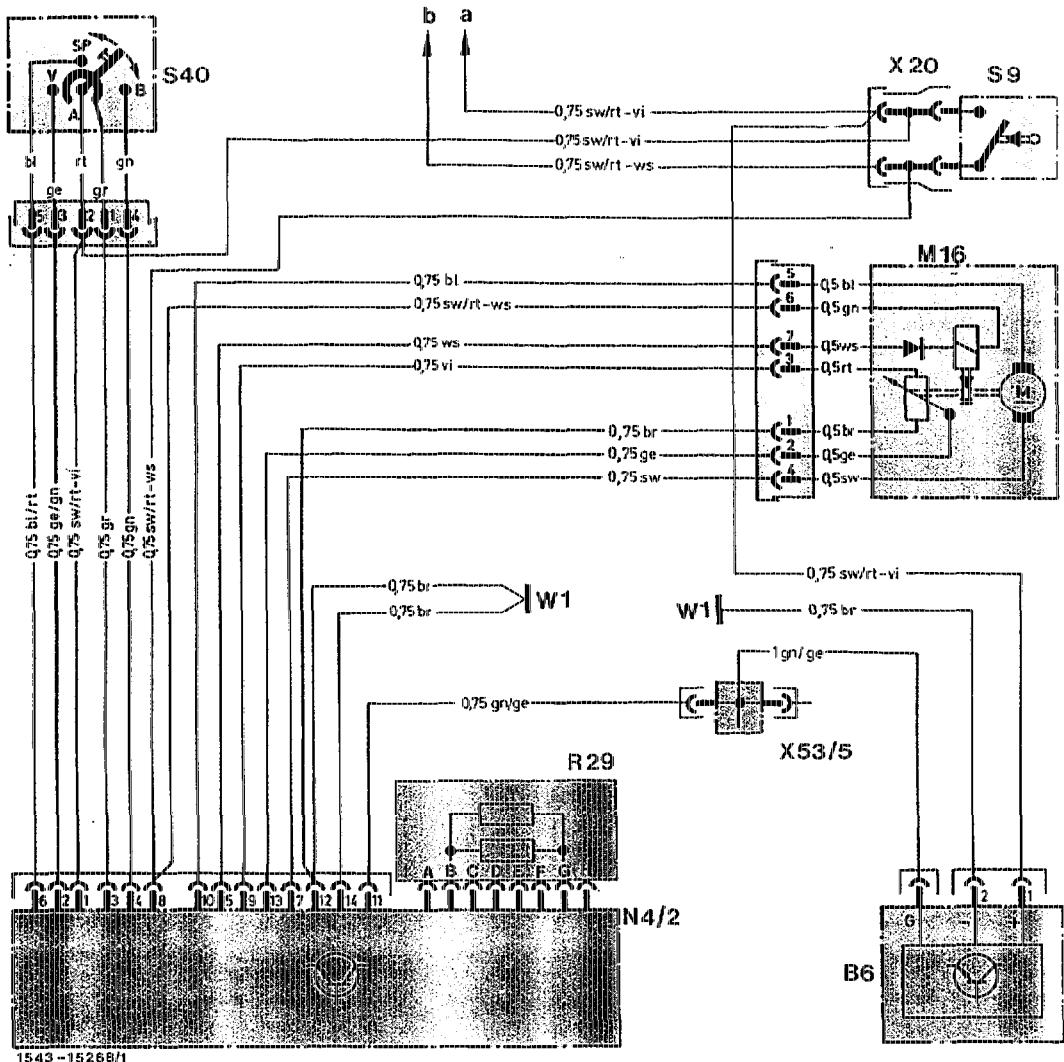

Models 124.026/030/050/090 (USA) as of 1988


B6	Hall-effect speed sensor	W1	Main ground (behind instrument cluster)
M16	Cruise control actuator	X20	Connector, stop lamp switch
N4/2	Cruise control amplifier with reference resistor	X26	Connector interior/engine, 12-pole
R29	Cruise control reference resistor	X53/5	Multipoint connector, Hall-effect sensor
S9	Stop lamp switch	a	On fuse 5 terminal 15
S40	Cruise control switch	b	On N7 lamp monitoring device, line-up 15
V	Decelerate/set	c	On N3 control unit injection system line-up 6
B	Accelerate/set		
SB	Resume		
A	Off		

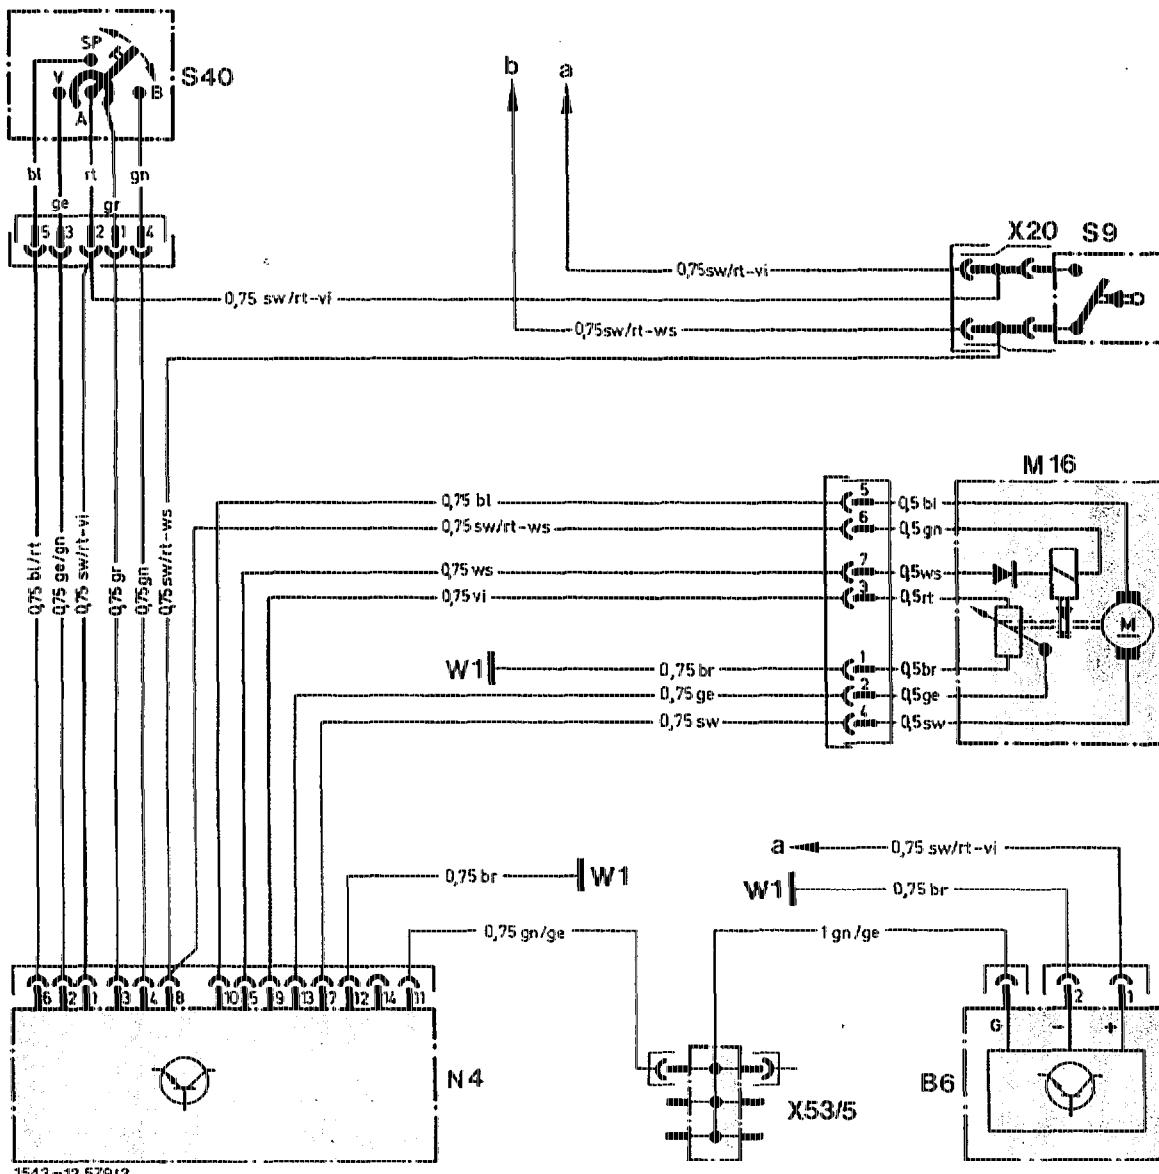

Models 124.125/130 as of vehicle ident. end no. A 187384 and models 124.185/190/330

B6	Hall-effect speed sensor	W1	Main ground (behind instrument cluster)
M16	Cruise control actuator	X20	Connector, stop lamp switch
N4	Cruise control amplifier	X53/5	Multipoint connector, Hall-effect sensor
S9	Stop lamp switch	a	On fuse 5 terminal 15
S40	Cruise control switch	b	On N7 lamp monitoring device, line-up 15
V	Decelerate/set		
B	Accelerate/set		
SB	Resume		
A	Off		



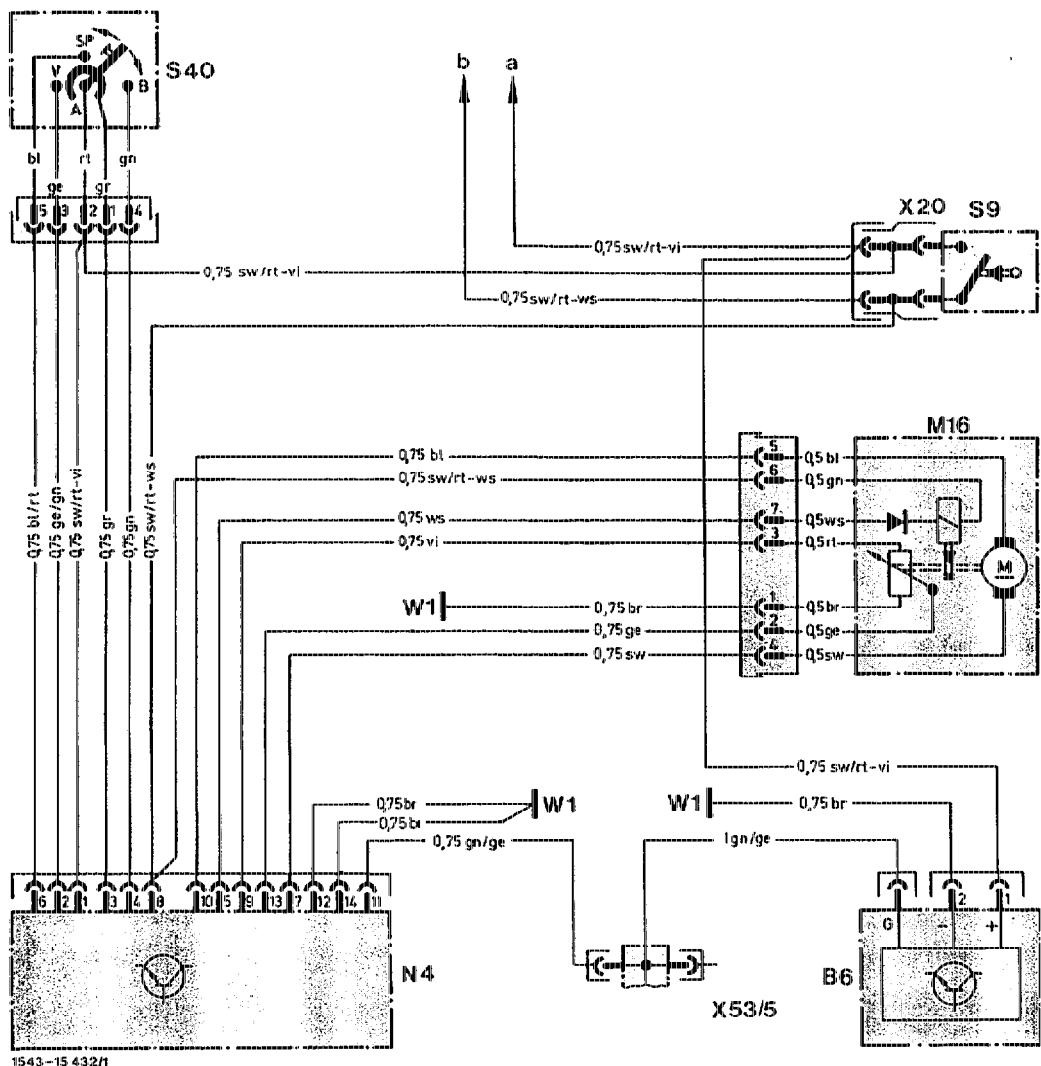


Models 124, 133/193 (USA) 1987

B6 Hall-effect speed sensor  
 M16 Cruise control actuator  
 N4 Cruise control amplifier  
 S9 Stop lamp switch  
 S40 Cruise control switch  
 V Decelerate/set  
 B Accelerate/set  
 SB Resume  
 A Off

W1 Main ground (behind instrument cluster)  
 X20 Connector, stop lamp switch  
 X53/5 Multipoint connector, Hall-effect sensor  
 a On fuse 5 terminal 15  
 b On N7 lamp monitoring device, line-up 15

### C. Model 124 with manual transmission

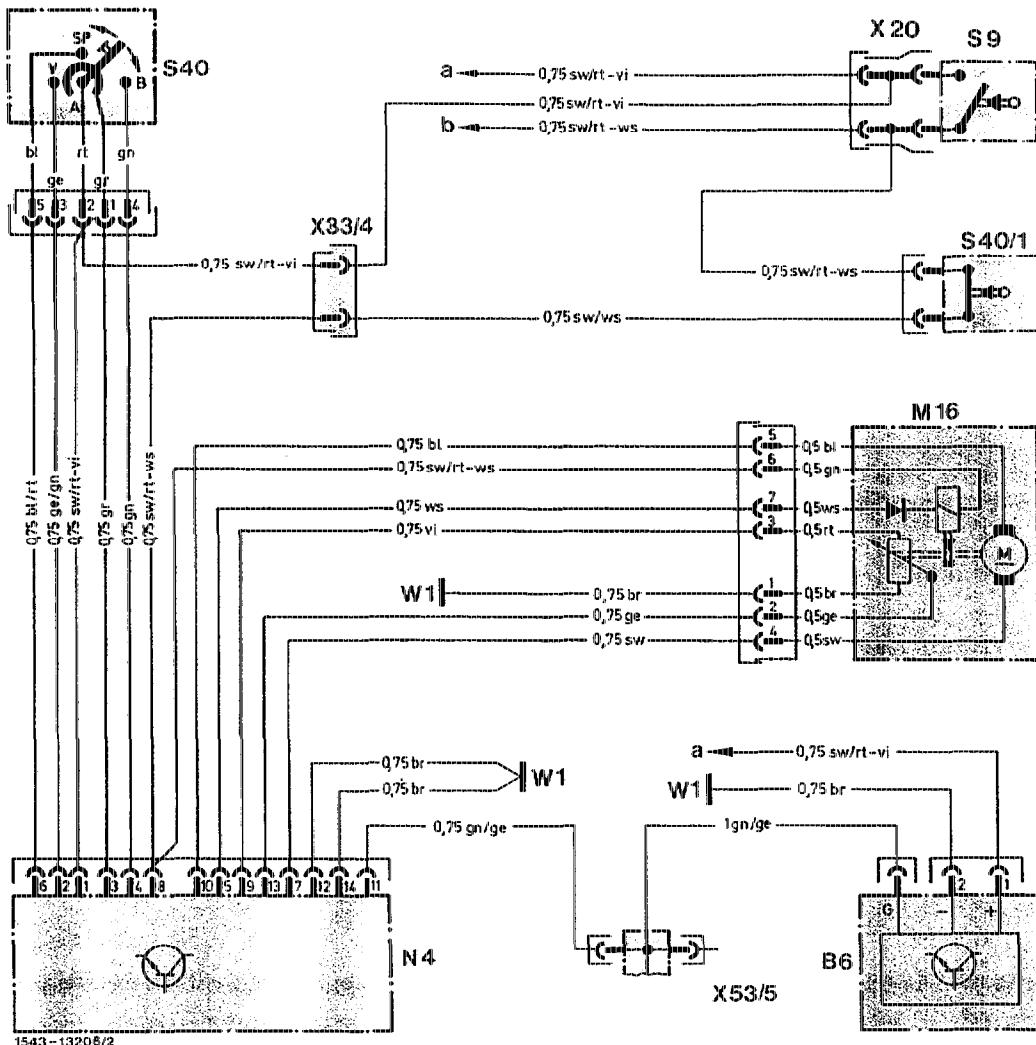


Model 124.020 (ZA)

B6	Hall-effect speed sensor
M16	Cruise control actuator
N4	Cruise control amplifier
S9	Stop lamp switch
S40	Cruise control switch
V	Decelerate/set
B	Accelerate/set
SB	Resume
A	Off
S40/1	Clutch pedal switch (cruise control)


W1	Main ground (behind instrument cluster)
X20	Connector, stop lamp switch
X33/4	Connector, cruise control (manual transmission, 2-pole)
X53/5	Multipoint connector, Hall-effect sensor
a	On fuse 5 terminal 15
b	On N7 lamp monitoring device, line-up 15



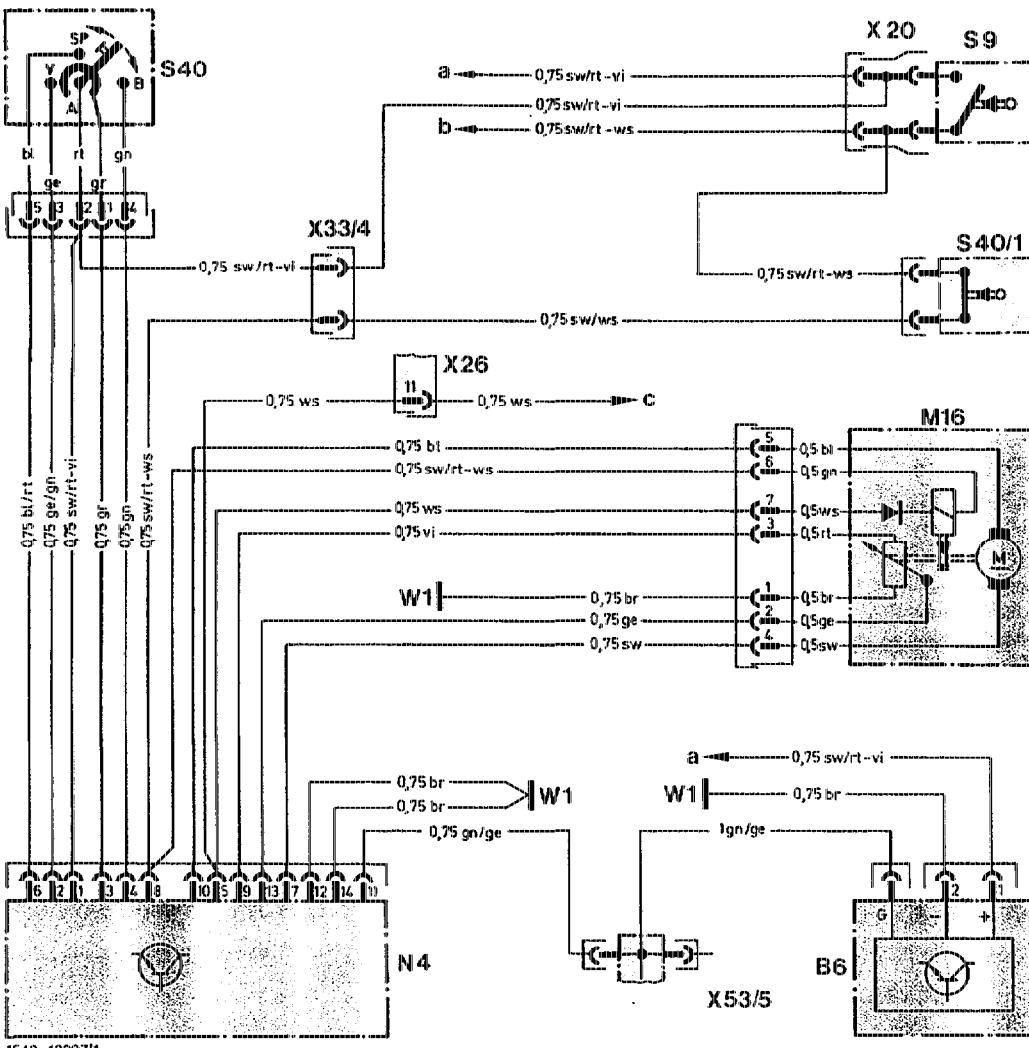

### Model 124.023/026/030 (ZA)


B6	Hall-effect speed sensor	W1	Main ground (behind instrument cluster)
M16	Cruise control actuator	X20	Connector, stop lamp switch
N4	Cruise control amplifier	X26	Connector interior/engine, 12-pole
S9	Stop lamp switch	X33/4	Connector, cruise control (manual transmission, 2-pole)
S40	Cruise control switch	X53/5	Multipoint connector, Hall-effect sensor
V	Decelerate/set	a	On fuse 5 terminal 15
B	Accelerate/set	b	On N7 lamp monitoring device, line-up 15
SB	Resume	c	On N3 control unit injection system line-up 6
A	Off		
S40/1	Clutch pedal switch (cruise control)		

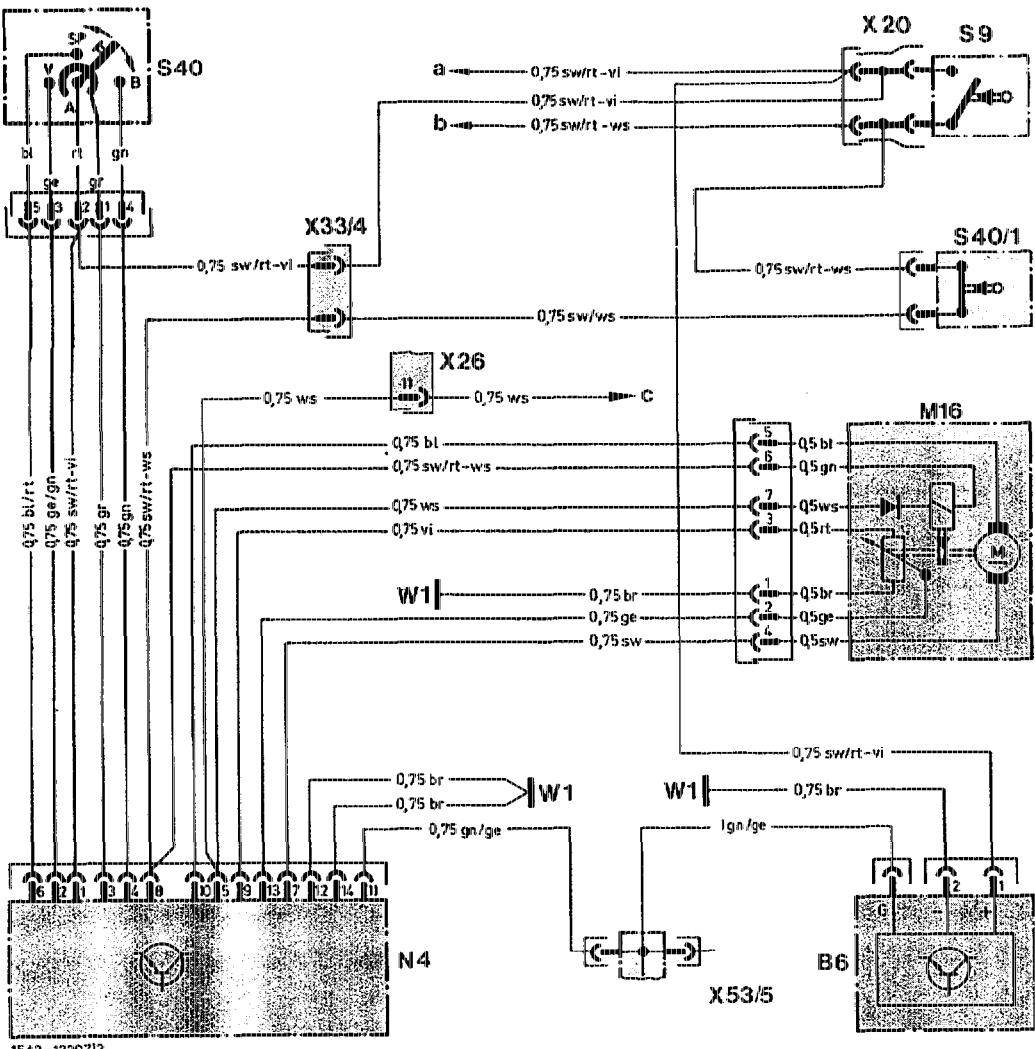

Model 124.026/030 (USA) 1986, 1987


B6	Hall-effect speed sensor
M16	Cruise control actuator
N4	Cruise control amplifier
S9	Stop lamp switch
S40	Cruise control switch
V	Decelerate/set
B	Accelerate/set
SB	Resume
A	Off
S40/1	Clutch pedal switch (cruise control)

W1	Main ground (behind instrument cluster)
X20	Connector, stop lamp switch
X26	Connector interior/engine, 12-pole
X33/4	Connector, cruise control (manual transmission, 2-pole)
X53/5	Multipoint connector, Hall-effect sensor
a	On fuse 5 terminal 15
b	On N7 lamp monitoring device, line-up 15
c	On N3 control unit injection system line-up 6

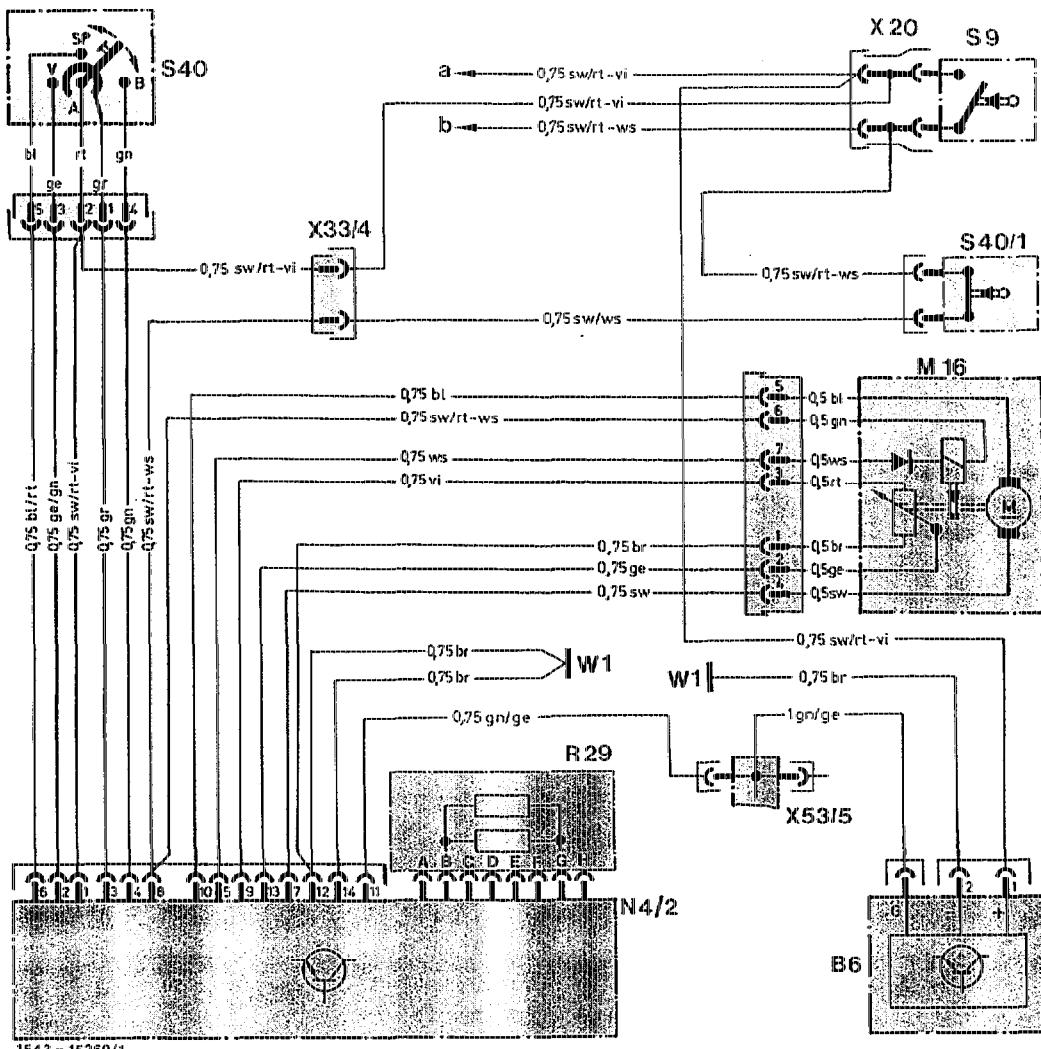

### Model 124.026/030 (USA) 1988


B6	Hall-effect speed sensor	W1	Main ground (behind instrument cluster)
M16	Cruise control actuator	X20	Connector, stop lamp switch
N4/2	Cruise control amplifier with reference resistor	X26	Connector interior/engine, 12-pole
R29	Cruise control reference resistor	X33/4	Connector, cruise control (manual transmission, 2-pole)
S9	Stop lamp switch	X53/5	Multipoint connector, Hall-effect sensor
S40	Cruise control switch	a	On fuse 5 terminal 15
V	Decelerate/set	b	On N7 lamp monitoring device, line-up 15
B	Accelerate/set	c	On N3 control unit injection system line-up 6
SB	Resume		
A	Off		
S40/1	Clutch pedal switch (cruise control)		

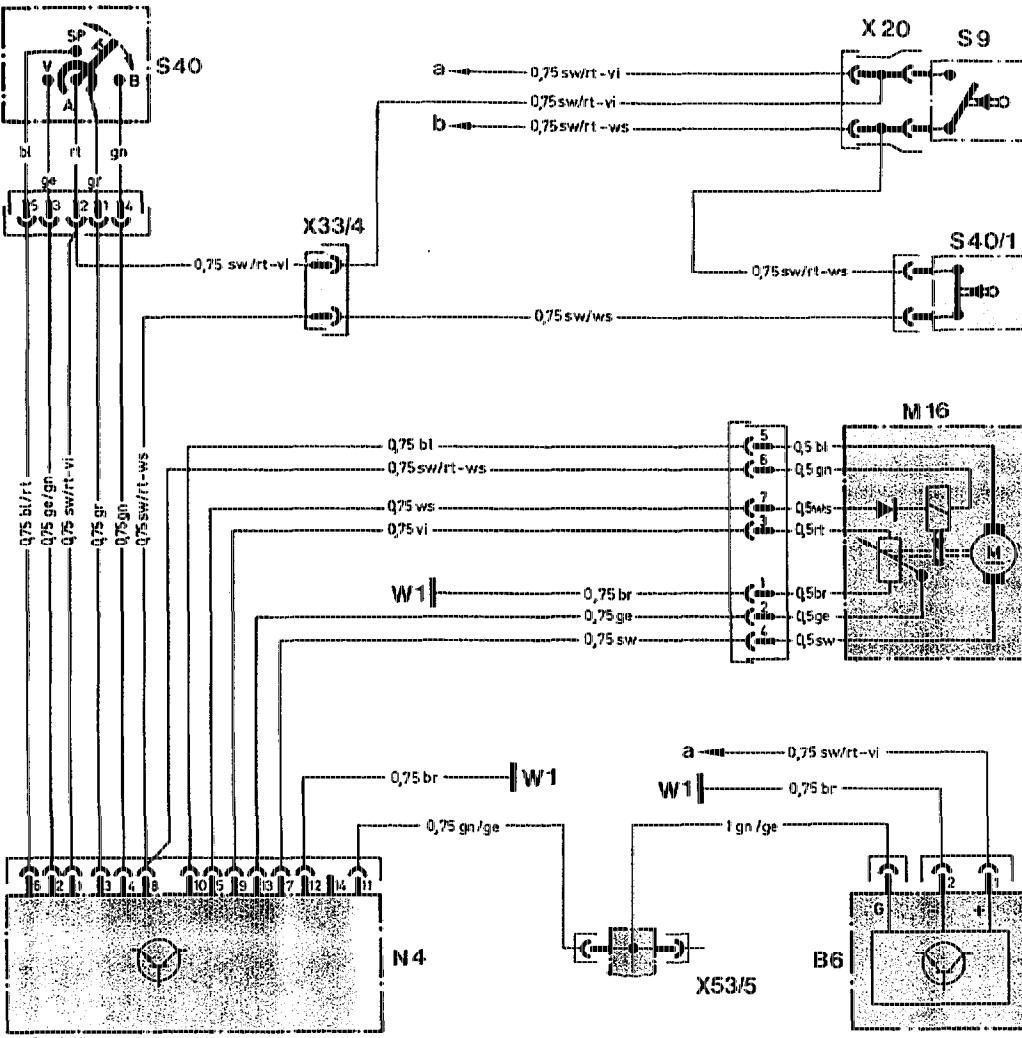

### Model 124.130 (ZA)

B6	Hall-effect speed sensor	W1	Main ground (behind instrument cluster)
M16	Cruise control actuator	X20	Connector, stop lamp switch
N4	Cruise control amplifier	X33/4	Connector, cruise control (manual transmission, 2-pole)
S9	Stop lamp switch	X53/5	Multipoint connector, Hall-effect sensor
S40	Cruise control switch	a	On fuse 5 terminal 15
V	Decelerate/set	b	On N7 lamp monitoring device, line-up 15
B	Accelerate/set		
SB	Resume		
A	Off		
S40/1	Clutch pedal switch (cruise control)		


## D. Model 201 with carburetor

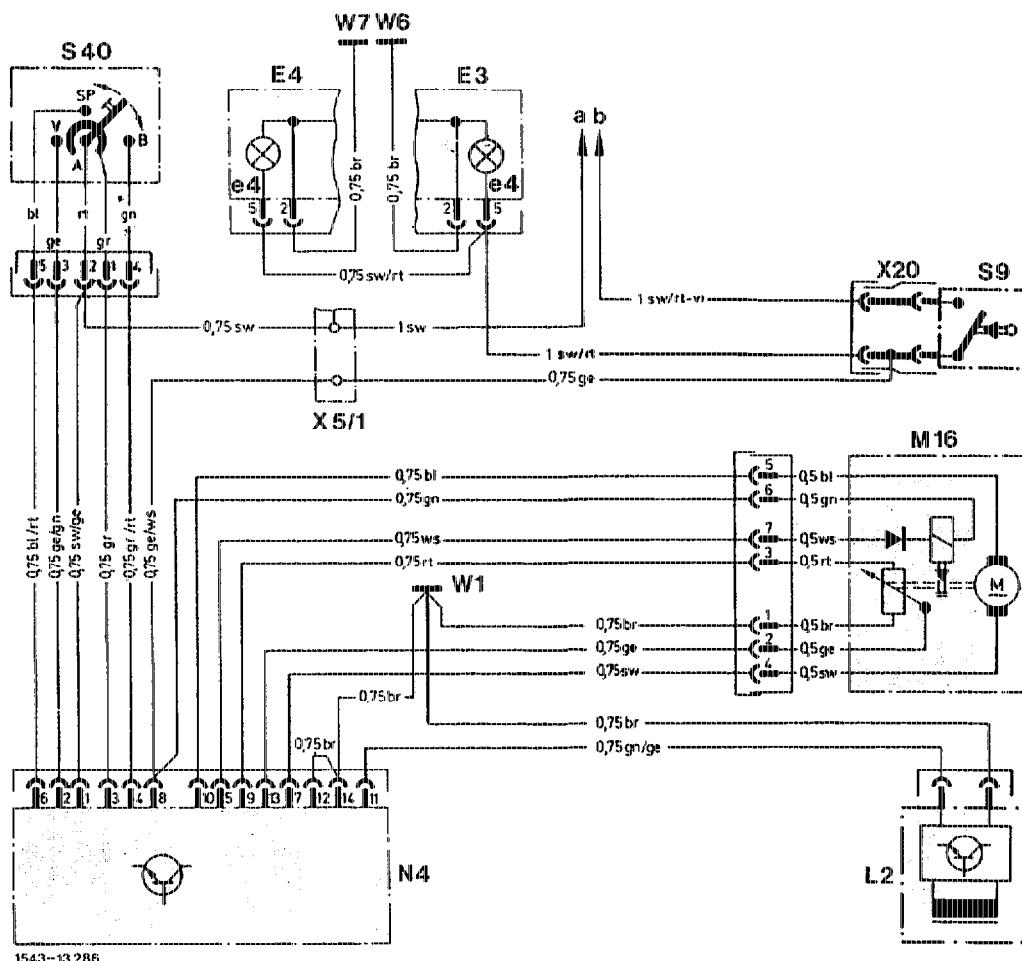

Model 201.022/023 up to approx. 08/85

E3	Left tail lamp unit
E3e4	Stop lamp
E4	Right tail lamp unit
E4e4	Stop lamp
L2	Road speed sensor
M16	Cruise control actuator
N4	Cruise control amplifier
S9	Stop lamp switch
S40	Cruise control switch
V	Decelerate/set
B	Accelerate/set
SB	Resume
A	Off


W1	Main ground (behind instrument cluster)
W6	Ground, left rear wheelhouse in trunk
W7	Ground, right rear wheelhouse in trunk
X5/1	Terminal block, interior (5-pole)
X20	Connector, stop lamp switch
a	On electrical center, coupling field L, line-up 1
b	On electrical center, coupling field C, line-up 1

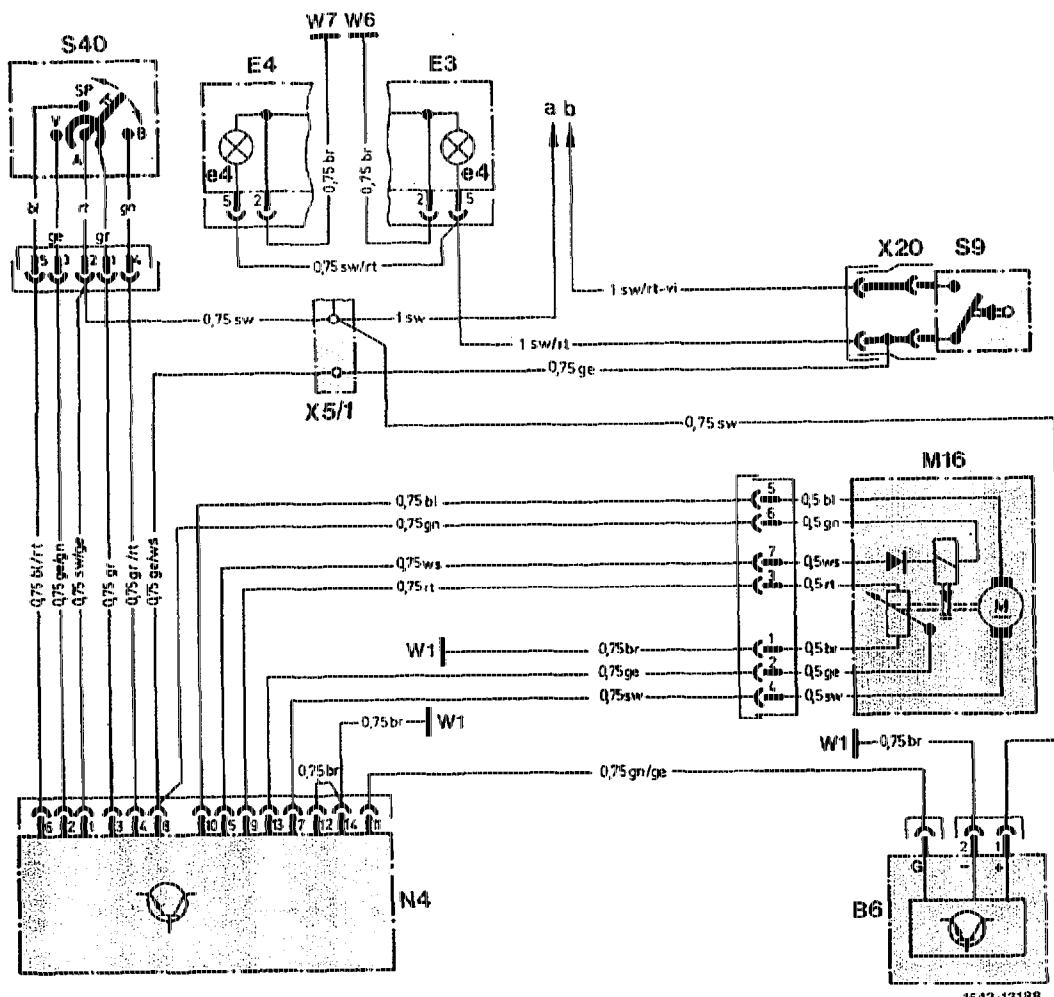

Model 201.023 as of 09/85 up to vehicle ident. end no. A 313825/F 229814


B6	Hall-effect speed sensor	W1	Main ground (behind instrument cluster)
E3	Left tail lamp unit	W6	Ground, left rear wheelhouse in trunk
E3e4	Stop lamp	W7	Ground, right rear wheelhouse in trunk
E4	Right tail lamp unit	X5/1	Terminal block, interior (5-pole)
E4e4	Stop lamp	X20	Connector, stop lamp switch
M16	Cruise control actuator	a	On electrical center, coupling field L, line-up 1
N4	Cruise control amplifier	b	On electrical center, coupling field C, line-up 1
S9	Stop lamp switch		
S40	Cruise control switch		
V	Decelerate/set		
B	Accelerate/set		
SB	Resume		
A	Off		



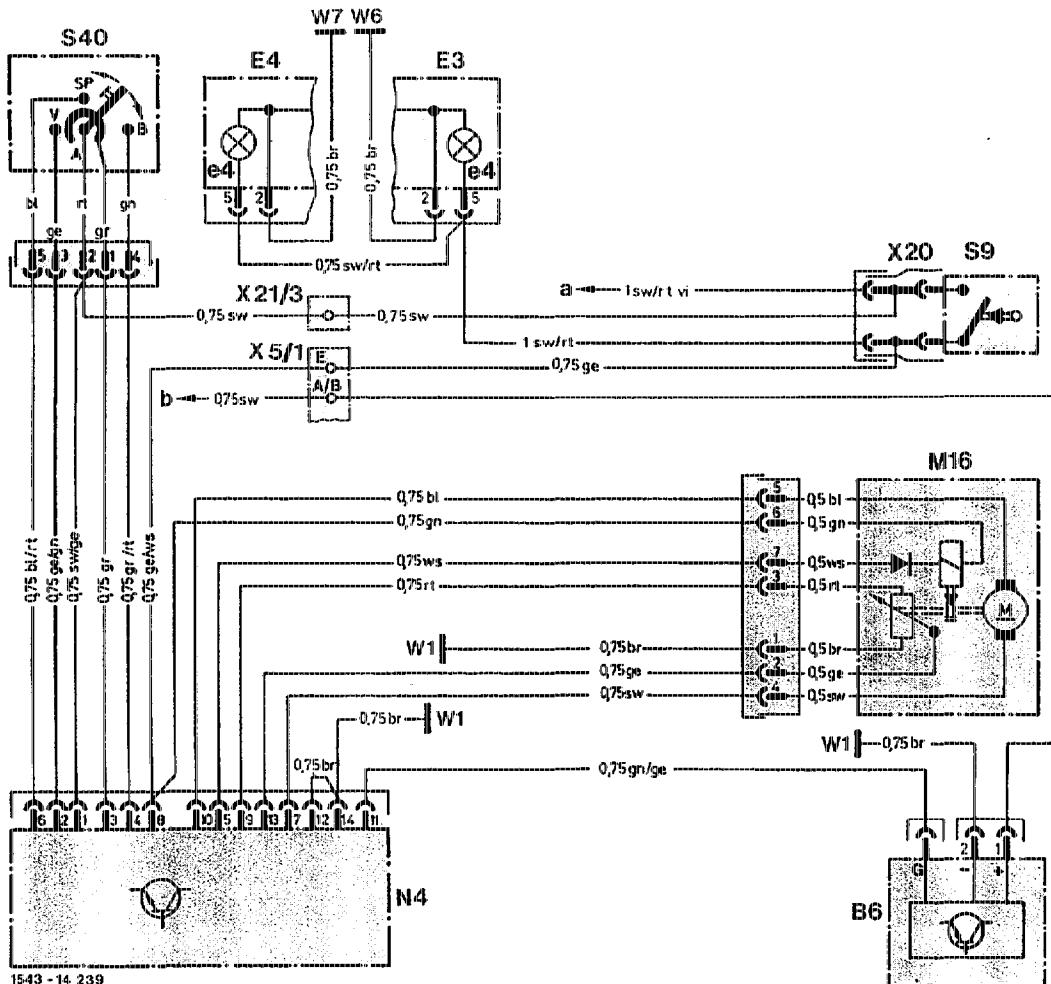

Model 201.023 as of vehicle ident. end no. A 313826/F 229815  
up to vehicle ident. end no. A 384359/F 286572


B6	Hall-effect speed sensor	W1	Main ground (behind instrument cluster)
E3	Left tail lamp unit	W6	Ground, left rear wheelhouse in trunk
E3e4	Stop lamp	W7	Ground, right rear wheelhouse in trunk
E4	Right tail lamp unit	X5/1	Terminal block, interior (5-pole)
E4e4	Stop lamp		A/B ident. colour, black
M16	Cruise control actuator		E ident. colour yellow
N4	Cruise control amplifier	X20	Connector, stop lamp switch
S9	Stop lamp switch	X21/3	Terminal block, stop lamp switch/cruise control (1-pole)
S40	Cruise control switch	a	On electrical center, coupling field L, line-up 1
V	Decelerate/set	b	On electrical center, coupling field C, line-up 1
B	Accelerate/set		
SB	Resume		
A	Off		

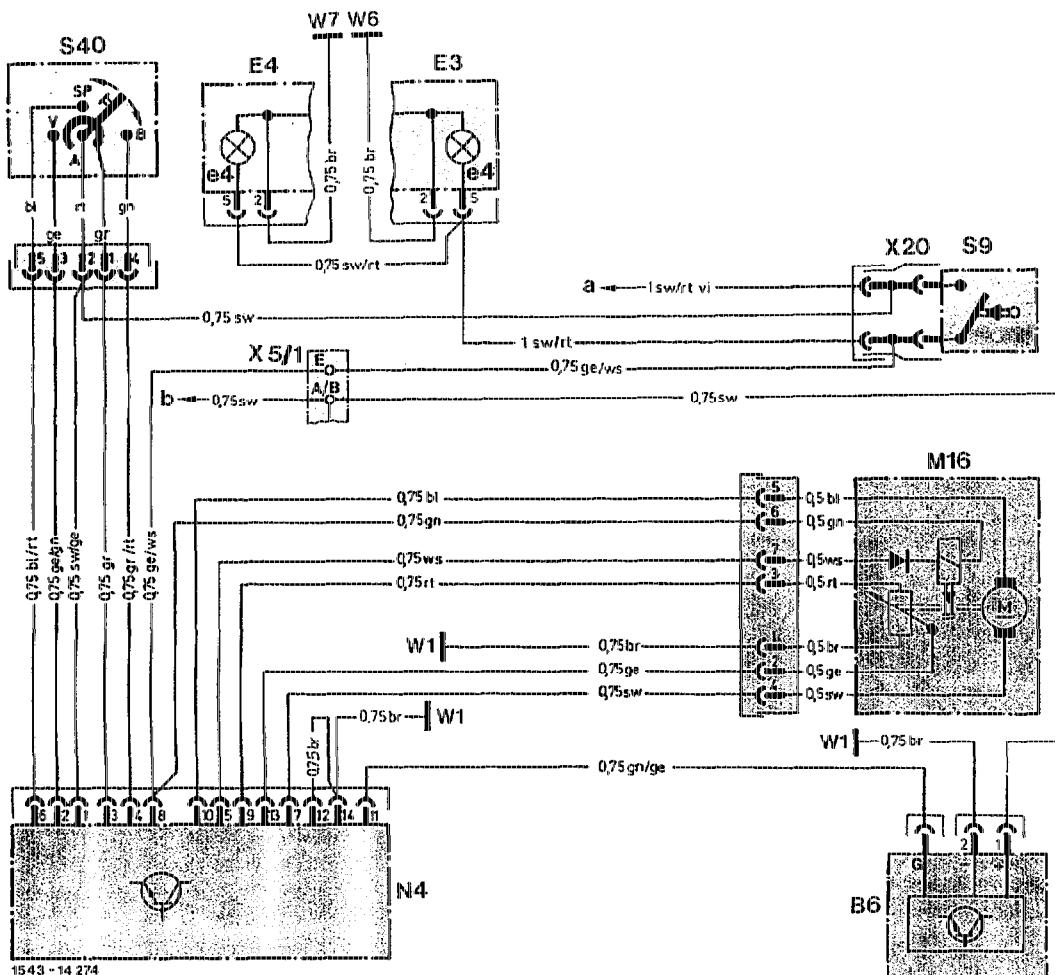

Model 201.023 as of vehicle ident end no. A 384360/F 286573

B6	Hall-effect speed sensor	W1	Main ground (behind instrument cluster)
E3	Left tail lamp unit	W6	Ground, left rear wheelhouse in trunk
E3e4	Stop lamp	W7	Ground, right rear wheelhouse in trunk
E4	Right tail lamp unit	X5/1	Terminal block, interior (5-pole)
E4e4	Stop lamp		A/B ident. colour, black
M16	Cruise control actuator		E ident. colour, yellow
N4	Cruise control amplifier	X20	Connector, stop lamp switch
S9	Stop lamp switch	a	On electrical center, coupling field L, line-up 1
S40	Cruise control switch	b	On electrical center, coupling field C, line-up 1
V	Decelerate/set		
B	Accelerate/set		
SB	Resume		
A	Off		

## E. Model 201 with CIS-E injection engine and automatic transmission

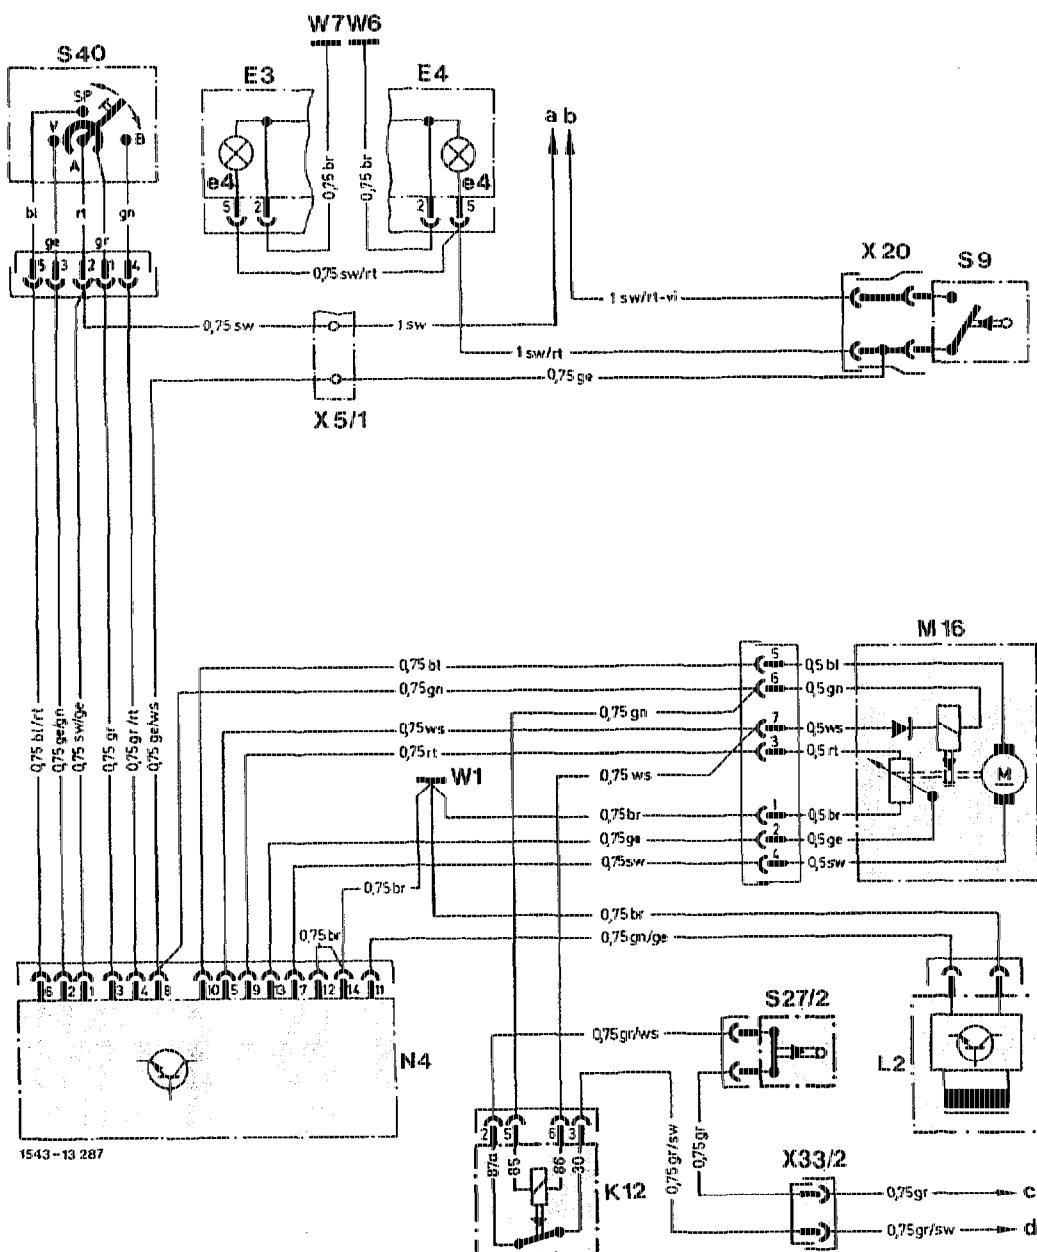


Model 201.024 up to approx. 08/85,

except: **(USA)** **(J)**, vehicles with air conditioning system as of approx. 10/84,

vehicles with RÜF or CAT


E3	Left tail lamp unit	W1	Main ground (behind instrument cluster)
E3e4	Stop lamp	W6	Ground, left rear wheelhouse in trunk
E4	Right tail lamp unit	W7	Ground, right rear wheelhouse in trunk
E4e4	Stop lamp	X5/1	Terminal block, interior (5-pole)
L2	Road speed sensor	X20	Connector, stop lamp switch
M16	Cruise control actuator	X33/2	Connector, CIS-E/cruise control (2-pole)
N4	Cruise control amplifier	a	On electrical center, coupling field L, line-up 1
K12	Deceleration fuel shut-off/cruise control relay	b	On electrical center, coupling field C, line-up 1
S9	Stop lamp switch	c	On throttle valve switch
S27/2	Deceleration shut-off microswitch	d	On CIS-E control unit, line-up 13
S40	Cruise control switch		
V	Decelerate/set		
B	Accelerate/set		
SB	Resume		
A	Off		



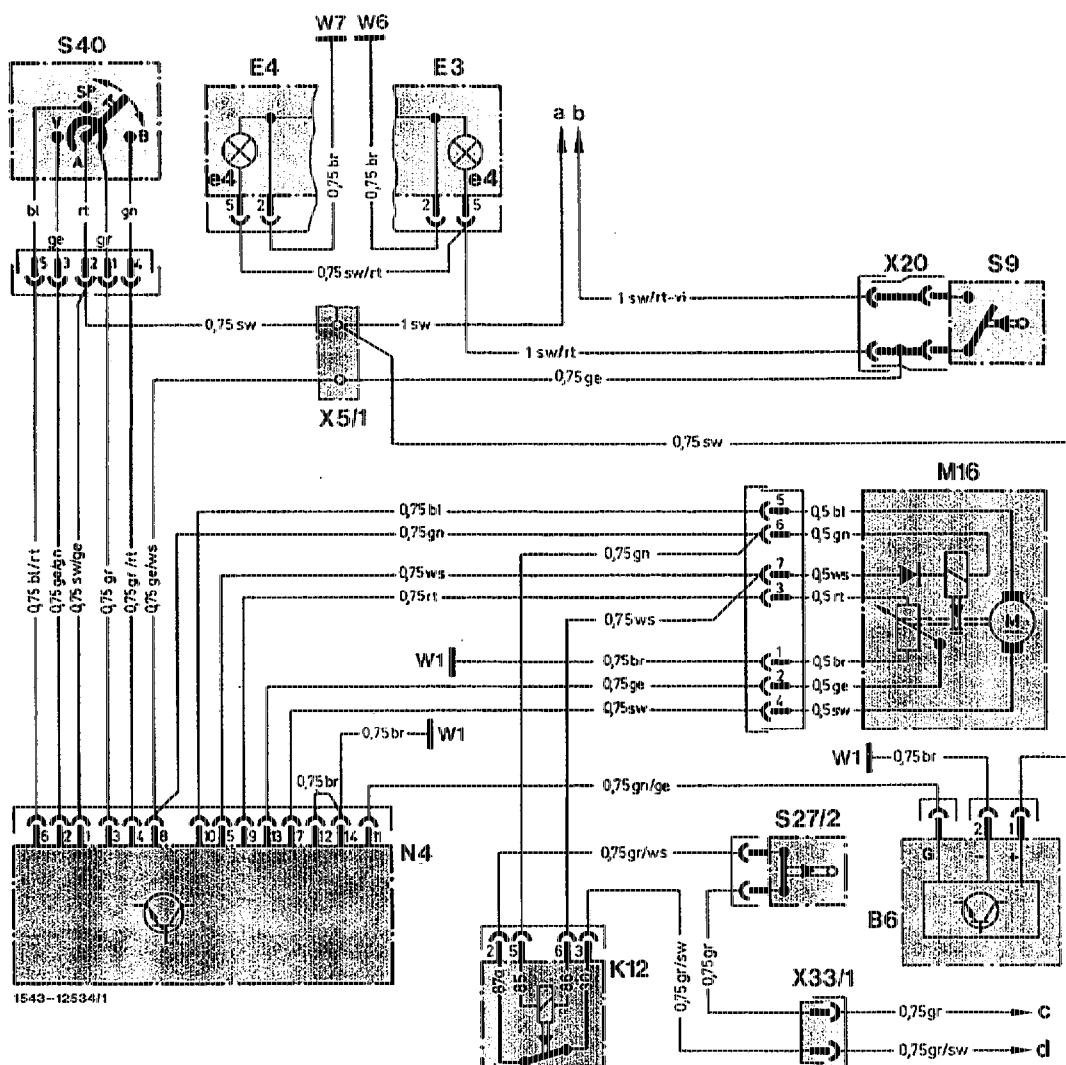

Model 201.024 as of approx. 09/85 up to vehicle ident. end no. A 313825/F 229814 except: **USA J**, vehicles with air conditioning system, vehicles with RÜF or CAT

B6	Hall-effect speed sensor	W1	Main ground (behind instrument cluster)
E3	Left tail lamp unit	W6	Ground, left rear wheelhouse in trunk
E3e4	Stop lamp	W7	Ground, right rear wheelhouse in trunk
E4	Right tail lamp unit	X5/1	Terminal block, interior (5-pole)
E4e4	Stop lamp	X20	Connector, stop lamp switch
M16	Cruise control actuator		
N4	Cruise control amplifier		
K12	Deceleration fuel shut-off/cruise control relay	X33/1	Connector, actuator/cruise control extension
S9	Stop lamp switch	a	On electrical center, coupling field L, line-up 1
S27/2	Deceleration shut-off microswitch	b	On electrical center, coupling field C, line-up 1
S40	Cruise control switch	c	On throttle valve switch
V	Decelerate/set	d	On CIS-E control unit, line-up 13
B	Accelerate/set		
SB	Resume		
A	Off		

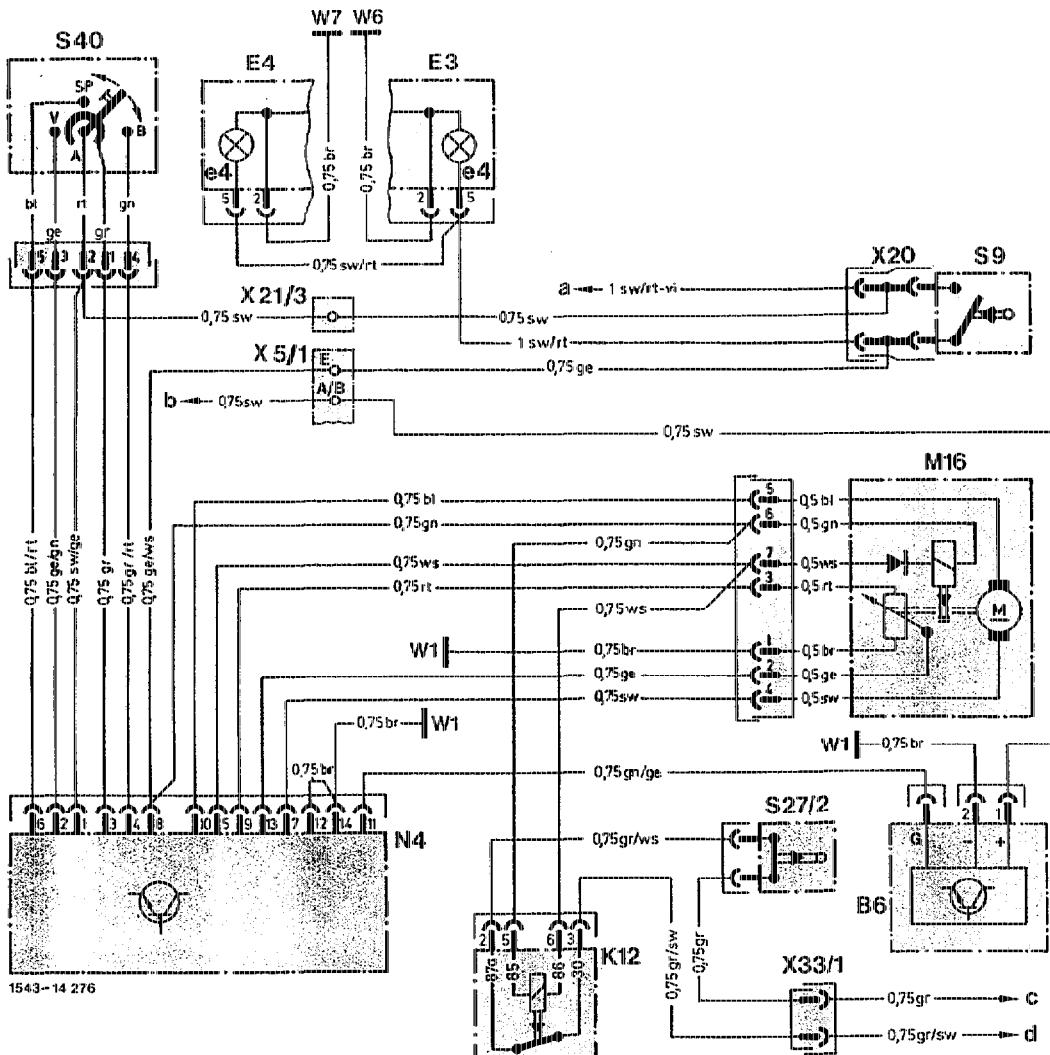


Model 201.024 as of vehicle ident. end no. A 313826/F 229815 up to vehicle ident. end no.

A 384359/F 286582 except: (USA) (J), vehicles with air conditioning system, vehicles with RÜF or CAT

B6	Hall-effect speed sensor	W1	Main ground (behind instrument cluster)
E3	Left tail lamp unit	W6	Ground, left rear wheelhouse in trunk
E3e4	Stop lamp	W7	Ground, right rear wheelhouse in trunk
E4	Right tail lamp unit	X5/1	Terminal block, interior (5-pole)
E4e4	Stop lamp		A/B ident. colour, black
M16	Cruise control actuator		E ident. colour, yellow
N4	Cruise control amplifier	X20	Connector, stop lamp switch
K12	Deceleration fuel shut-off/cruise control relay	X21/3	Terminal block, stop lamp switch/cruise control (1-pole)
S9	Stop lamp switch	X33/1	Connector, actuator/cruise control extension
S27/2	Deceleration shut-off microswitch	a	On electrical center, coupling field C, line-up 1
S40	Cruise control switch	b	On electrical center, coupling field L, line-up 1
V	Decelerate/set	c	On throttle valve switch
B	Accelerate/set	d	On CIS-E control unit, line-up 13
SB	Resume		
A	Off		




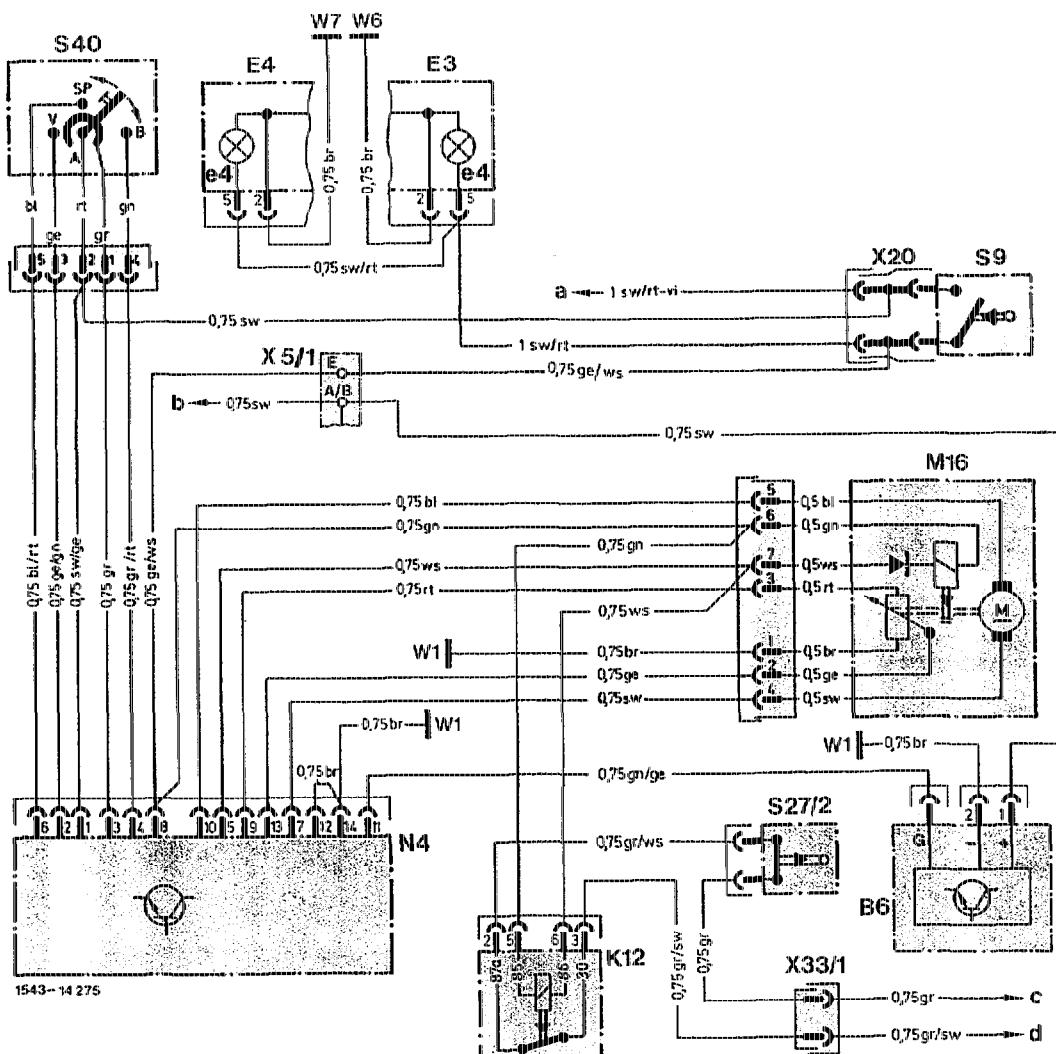

Model 201.024 as of vehicle ident end no. A 384360/F 286573

except: **(USA)** **(J)** vehicles with air conditioning system, vehicles with RÜF or CAT

B6	Hall-effect speed sensor	W1	Main ground (behind instrument cluster)
E3	Left tail lamp unit	W6	Ground, left rear wheelhouse in trunk
E3e4	Stop lamp	W7	Ground, right rear wheelhouse in trunk
E4	Right tail lamp unit	X5/1	Terminal block, interior (5-pole)
E4e4	Stop lamp		A/B ident. colour, black
M16	Cruise control actuator		E ident. colour, yellow
N4	Cruise control amplifier	X20	Connector, stop lamp switch
K12	Deceleration fuel shut-off/cruise control relay	X33/1	Connector, actuator/cruise control extension
S9	Stop lamp switch	a	On electrical center, coupling field C, line-up 1
S27/2	Deceleration shut-off microswitch	b	On electrical center, coupling field L, line-up 1
S40	Cruise control switch	c	On throttle valve switch
V	Decelerate/set	d	On CIS-E control unit, line-up 13
B	Accelerate/set		
SB	Resume		
A	Off		

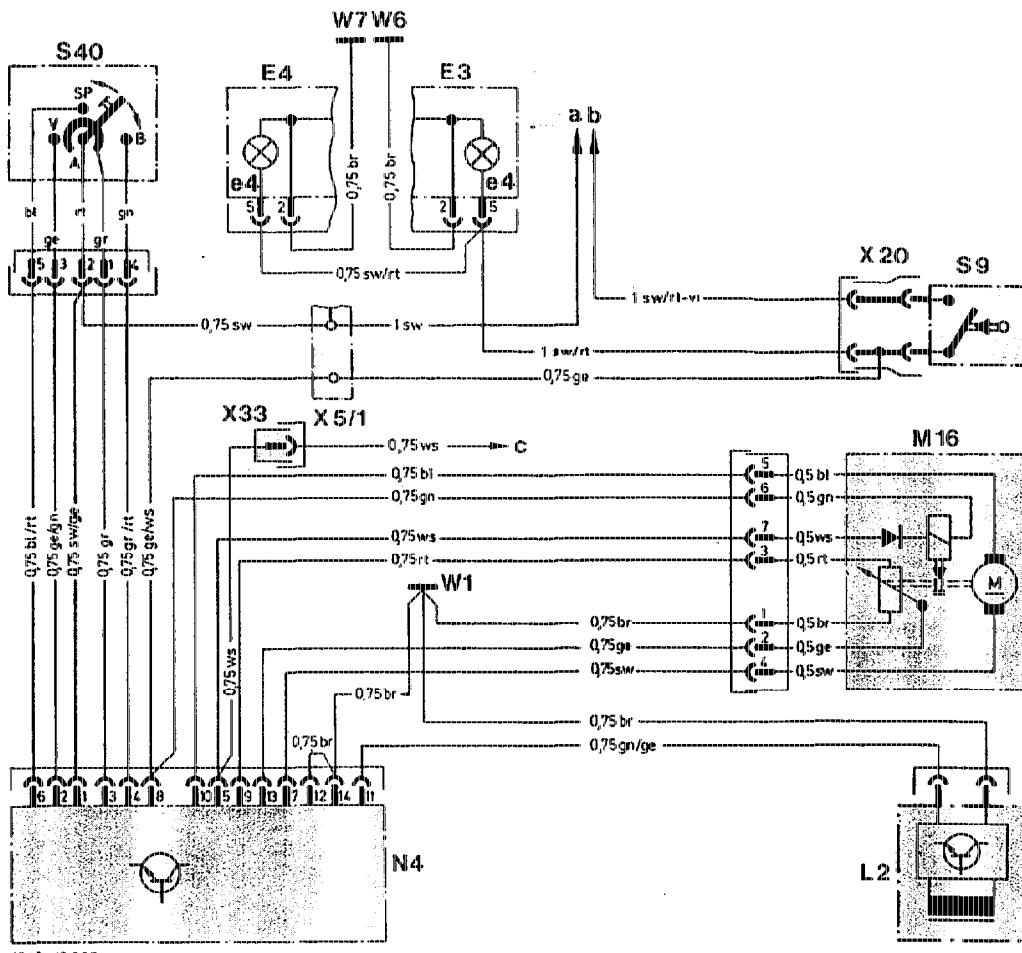


Model 201.024 Vehicles with air conditioning system as of approx. 10/84 up to approx. 08/85,  
 (USA) (J) up to 1985

E3	Left tail lamp unit
E3e4	Stop lamp
E4	Right tail lamp unit
E4e4	Stop lamp
L2	Road speed sensor
M16	Cruise control actuator
N4	Cruise control amplifier
S9	Stop lamp switch
S40	Cruise control switch
V	Decelerate/set
B	Accelerate/set
SB	Resume
A	Off

W1	Main ground (behind instrument cluster)
W6	Ground, left rear wheelhouse in trunk
W7	Ground, right rear wheelhouse in trunk
X5/1	Terminal block, interior (5-pole)
X20	Connector, stop lamp switch
X33	Connector, CIS-E/cruise control (1-pole)
a	On electrical center, coupling field L, line-up 1
b	On electrical center, coupling field C, line-up 1
c	On CIS-E control unit, line-up 6




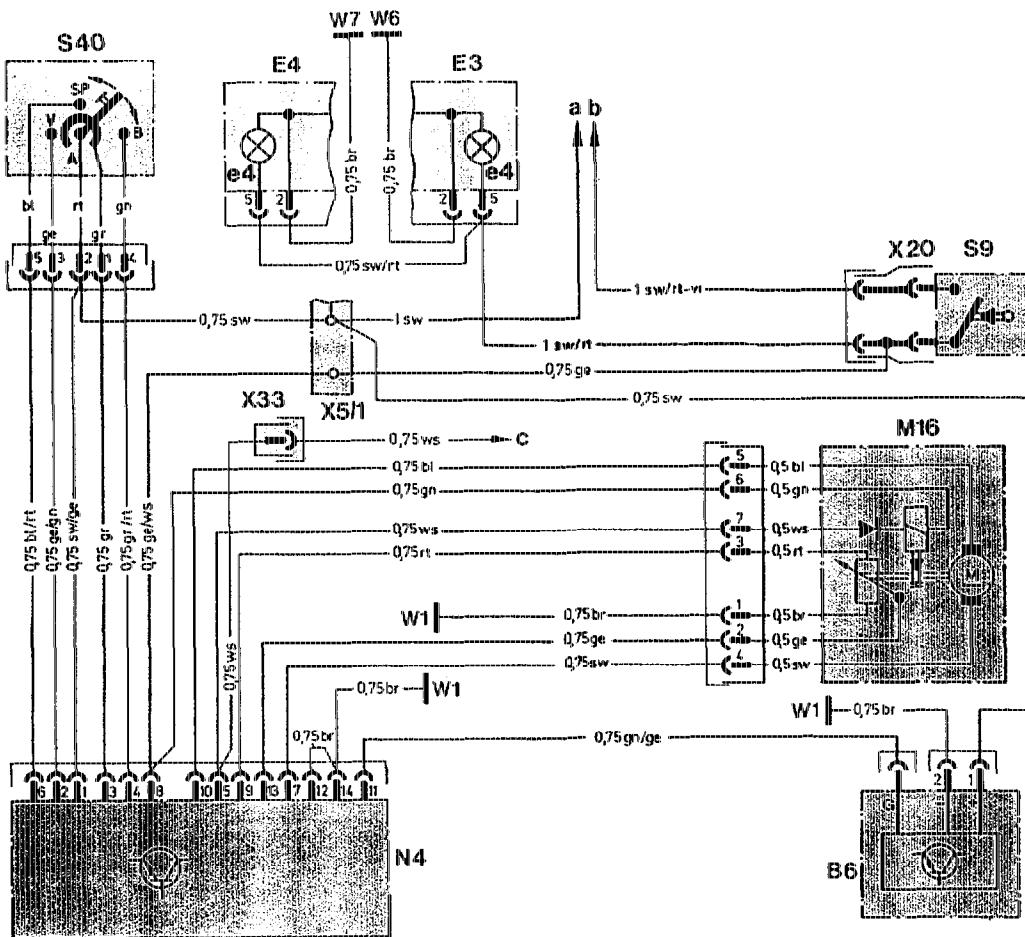

1543-11 850/3

Model 201.024/034 Vehicles with air conditioning system, vehicles with RÜF or CAT  
as of approx. 09/85 up to vehicle ident. end no. A 313825/F 229814, (USA) (J) 1986


B6	Hall-effect speed sensor	W1	Main ground (behind instrument cluster)
E3	Left tail lamp unit	W6	Ground, left rear wheelhouse in trunk
E3e4	Stop lamp	W7	Ground, right rear wheelhouse in trunk
E4	Right tail lamp unit	X5/1	Terminal block, interior (5-pole)
E4e4	Stop lamp	X20	Connector, stop lamp switch
M16	Cruise control actuator	X33	Connector, CIS-E/cruise control (1-pole)
N4	Cruise control amplifier	a	On electrical center, coupling field L, line-up 1
S9	Stop lamp switch	b	On electrical center, coupling field C, line-up 1
S40	Cruise control switch	c	On CIS-E control unit, line-up 6
V	Decelerate/set		
B	Accelerate/set		
SB	Resume		
A	Off		

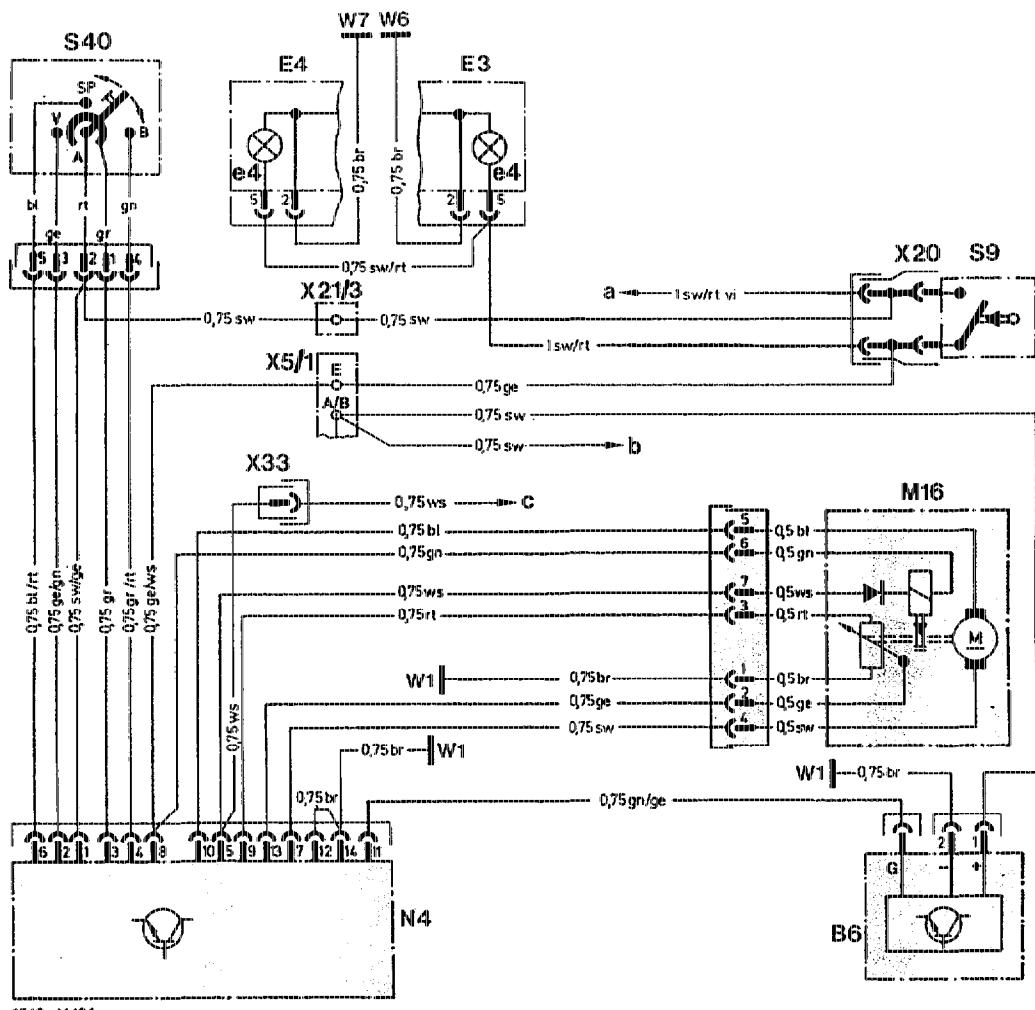

Model 201.024/028/034 Vehicles with air conditioning system, vehicles with RÜF or CAT  
as of vehicle ident. end no. A 313826/F 229815 up to vehicle ident. end no. A 384359/

F 286572, (USA) (J) 1986, 1987


B6	Hall-effect speed sensor	W1	Main ground (behind instrument cluster)
E3	Left tail lamp unit	W6	Ground, left rear wheelhouse in trunk
E3e4	Stop lamp	W7	Ground, right rear wheelhouse in trunk
E4	Right tail lamp unit	X5/1	Terminal block, interior (5-pole)
E4e4	Stop lamp		A/B ident. colour black
M16	Cruise control actuator		E ident. colour yellow
N4	Cruise control amplifier	X20	Connector, stop lamp switch
S9	Stop lamp switch	X21/3	Terminal block, stop lamp switch/cruise control (1-pole)
S40	Cruise control switch	X33	Connector, CIS-E/cruise control (1-pole)
V	Decelerate/set	a	On electrical center, coupling field C, line-up 1
B	Accelerate/set	b	On electrical center, coupling field L, line-up 1
SB	Resume	c	On CIS-E control unit, line-up 6
A	Off		

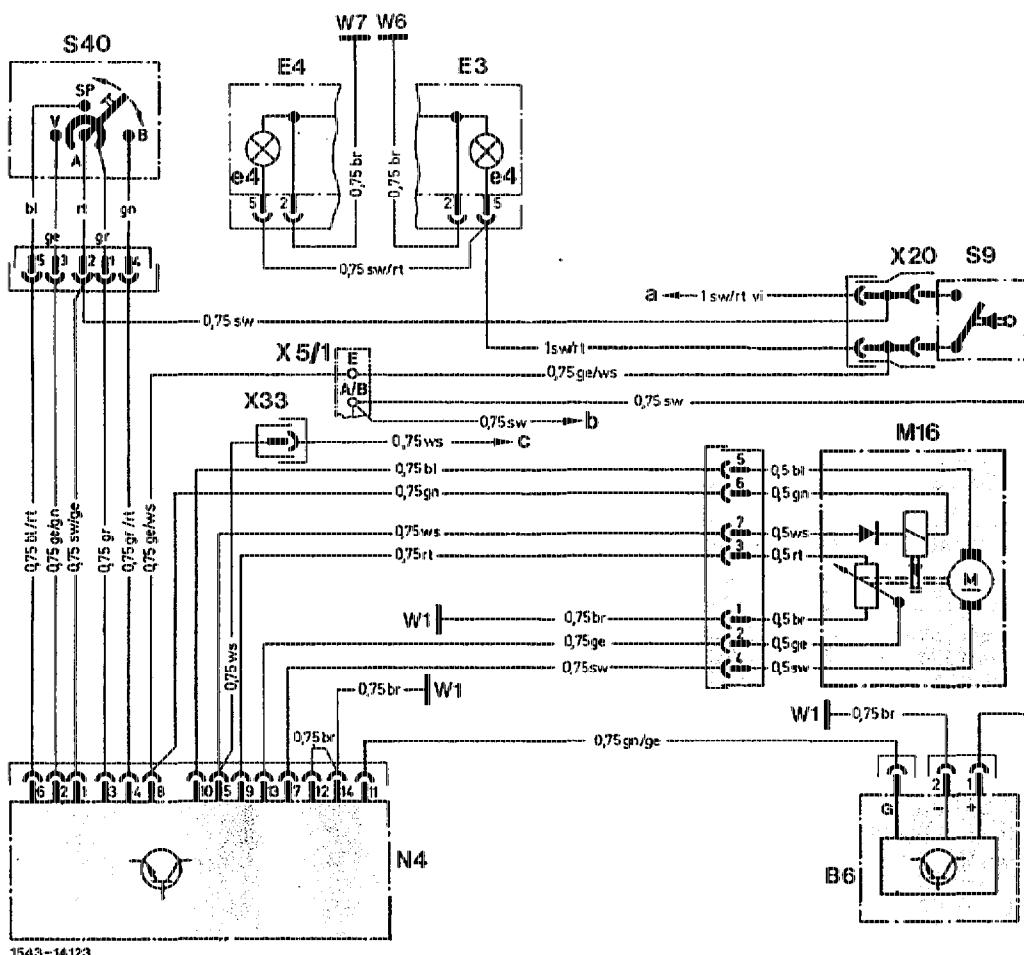

Model 201.024/028/034 Vehicles with air conditioning system, vehicles with RÜF or CAT  
as of vehicle ident end no. A 384360/F 286573 up to 08/ 88

(USA) (J) 1987, 1988 (201.028) (USA) 1987)


B6	Hall-effect speed sensor	W1	Main ground (behind instrument cluster)
E3	Left tail lamp unit	W6	Ground, left rear wheelhouse in trunk
E3e4	Stop lamp	W7	Ground, right rear wheelhouse in trunk
E4	Right tail lamp unit	X5/1	Terminal block, interior (5-pole)
E4e4	Stop lamp		A/B ident. colour black
M16	Cruise control actuator		E ident. colour yellow
N4	Cruise control amplifier	X20	Connector, stop lamp switch
S9	Stop lamp switch	X33	Connector, CIS-E/cruise control (1-pole)
S40	Cruise control switch	a	On electrical center, coupling field C, line-up 1
V	Decelerate/set	b	On electrical center, coupling field L, line-up 1
B	Accelerate/set	c	On CIS-E control unit, line-up 6
SB	Resume		
A	Off		

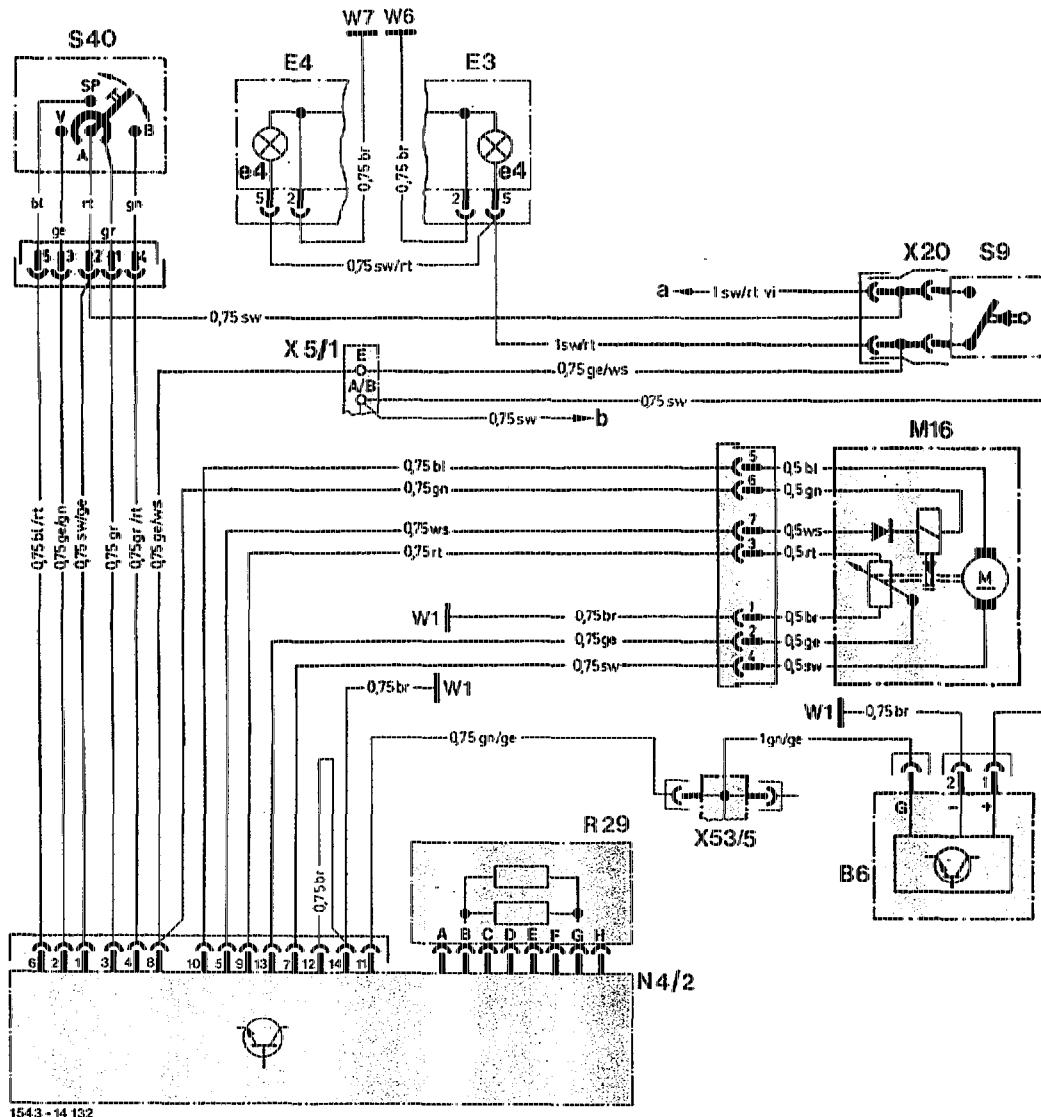

### Model 201.028 (USA) 1988, 201.029 up to 08/88, (USA) 1987, 1988

B6	Hall-effect speed sensor	W1	Main ground (behind instrument cluster)
E3	Left tail lamp unit	W6	Ground, left rear wheelhouse in trunk
E3e4	Stop lamp	W7	Ground, right rear wheelhouse in trunk
E4	Right tail lamp unit	X5/1	Terminal block, interior (5-pole)
E4e4	Stop lamp		A/B ident. colour black
M16	Cruise control actuator		E ident. colour yellow
N4/2	Cruise control amplifier with reference resistor 1)	X20	Connector, stop lamp switch
R29	Cruise control reference resistor	X53/5	Multipoint connector, Hall-effect sensor
S9	Stop lamp switch	a	On electrical center, coupling field C, line-up 1
S40	Cruise control switch	b	On electrical center, coupling field L, line-up 1
V	Decelerate/set		
B	Accelerate/set		
SB	Resume		
A	Off		


1) Cruise control amplifier N4 without reference resistor on model 201.028.

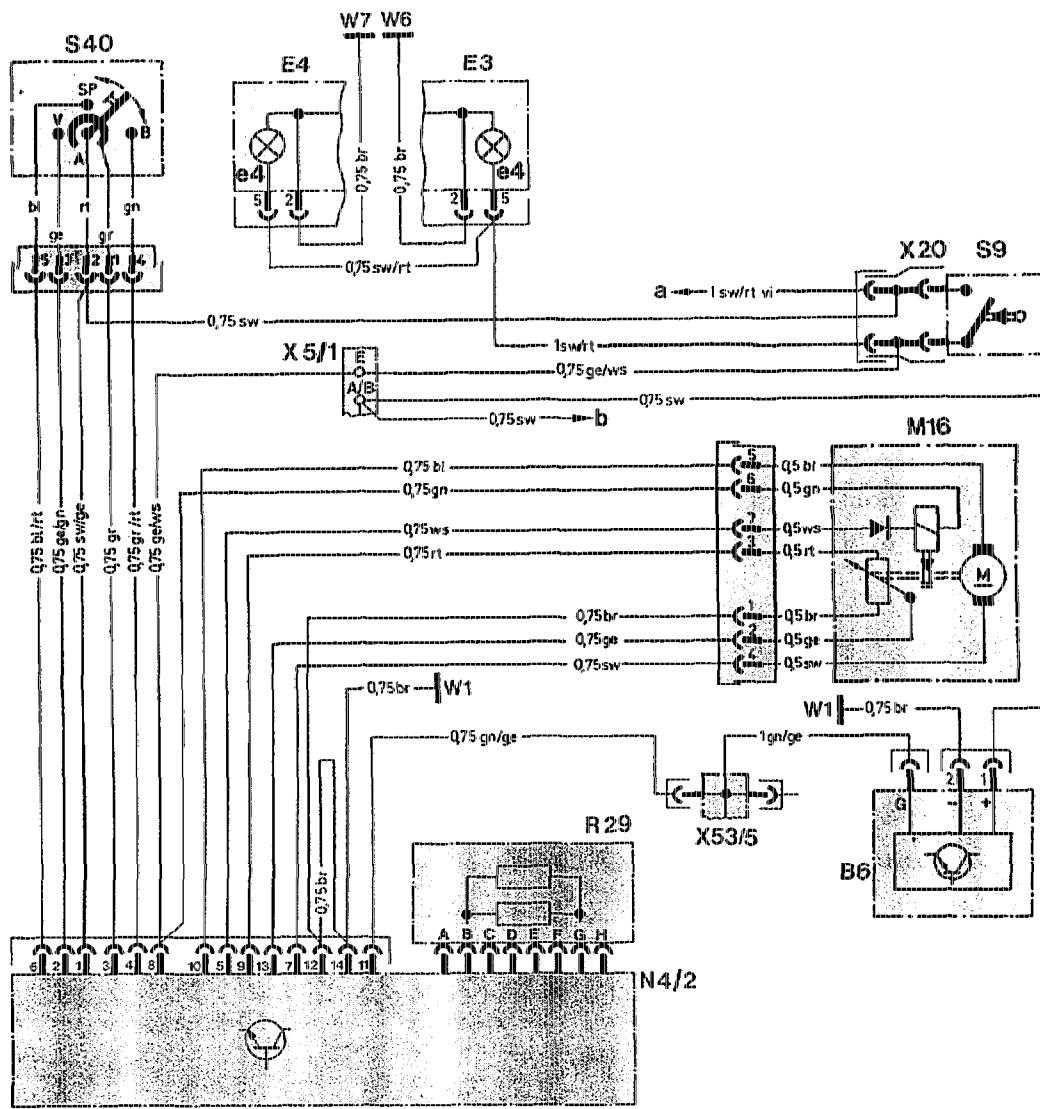

Model 201.024/028/029/035 RÜF/CAT as of 09/88, (USA) as of 1989


B6	Hall-effect speed sensor	W1	Main ground (behind instrument cluster)
E3	Left tail lamp unit	W6	Ground, left rear wheelhouse in trunk
E3e4	Stop lamp	W7	Ground, right rear wheelhouse in trunk
E4	Right tail lamp unit	X5/1	Terminal block, interior (5-pole)
E4e4	Stop lamp	A/B	ident. colour black
M16	Cruise control actuator	E	ident. colour yellow
N4/2	Cruise control amplifier with reference resistor	X20	Connector, stop lamp switch
R29	Cruise control reference resistor	X53/5	Multipoint connector, Hall-effect sensor
S9	Stop lamp switch	a	On electrical center, coupling field C, line-up 1
S40	Cruise control switch	b	On electrical center, coupling field L, line-up 1
V	Decelerate/set		
B	Accelerate/set		
SB	Resume		
A	Off		

## F. Model 201 with CIS-E injection engine and manual transmission

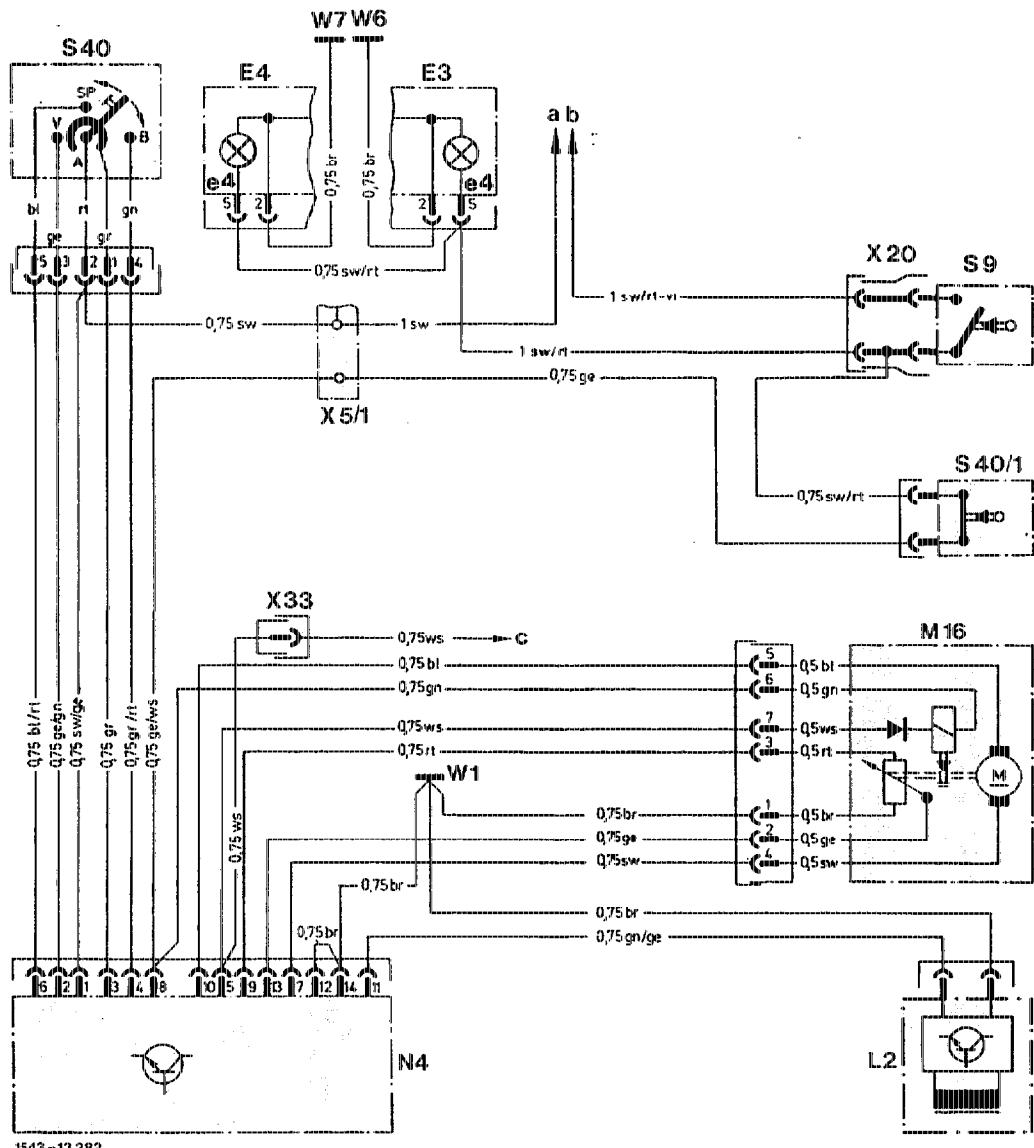


Model 201.024 (USA) 1984, 1985, up to vehicle ident. end no. A 209722/F 089773

E3	Left tail lamp unit	S40/1	Clutch pedal switch (cruise control)
E3e4	Stop lamp	W1	Main ground (behind instrument cluster)
E4	Right tail lamp unit	W6	Ground, left rear wheelhouse in trunk
E4e4	Stop lamp	W7	Ground, right rear wheelhouse in trunk
L2	Road speed sensor	X5/1	Terminal block, interior (5-pole)
M16	Cruise control actuator	X20	Connector, stop lamp switch
N4	Cruise control amplifier	X33	Connector, CIS-E/cruise control (1-pole)
S9	Stop lamp switch	a	On electrical center, coupling field L, line-up 1
S40	Cruise control switch	b	On electrical center, coupling field C, line-up 1
V	Decelerate/set	c	On CIS-E control unit, line-up 6
B	Accelerate/set		
SB	Resume		
A	Off		

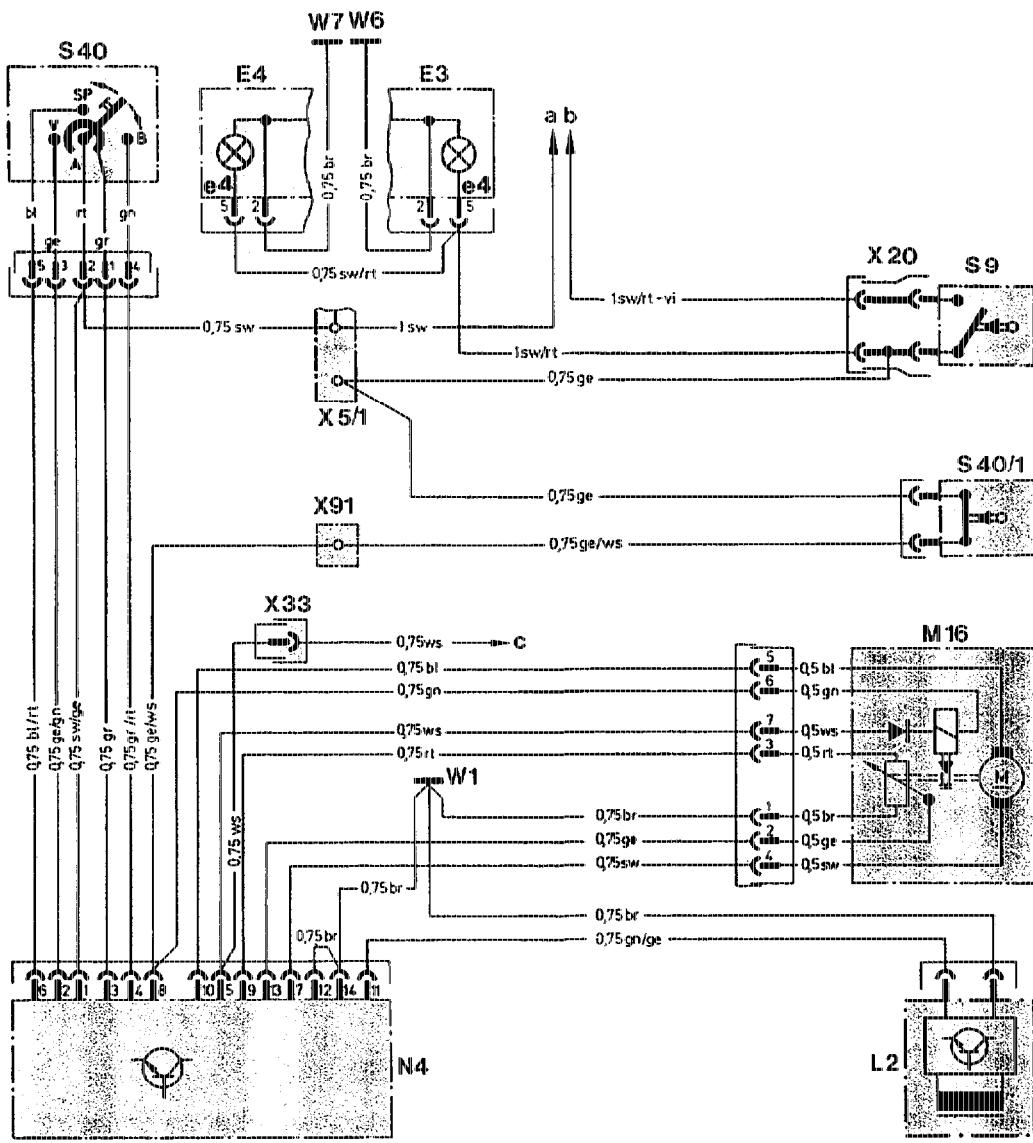


Model 201.024 (USA) 1985, as of vehicle ident end no. A 209723/F 089774

E3	Left tail lamp unit	S40/1	Clutch pedal switch (cruise control)
E3e4	Stop lamp	W1	Main ground (behind instrument cluster)
E4	Right tail lamp unit	W6	Ground, left rear wheelhouse in trunk
E4e4	Stop lamp	W7	Ground, right rear wheelhouse in trunk
L2	Road speed sensor	X5/1	Terminal block, interior (5-pole)
M16	Cruise control actuator	X20	Connector, stop lamp switch
N4	Cruise control amplifier	X33	Connector, CIS-E/cruise control (1-pole)
S9	Stop lamp switch	X91	Terminal block, clutch pedal/cruise control 1-pole
S40	Cruise control switch	a	On electrical center, coupling field L, line-up 1
V	Decelerate/set	b	On electrical center, coupling field C, line-up 1
B	Accelerate/set	c	On CIS-E control unit, line-up 6
SB	Resume		
A	Off		

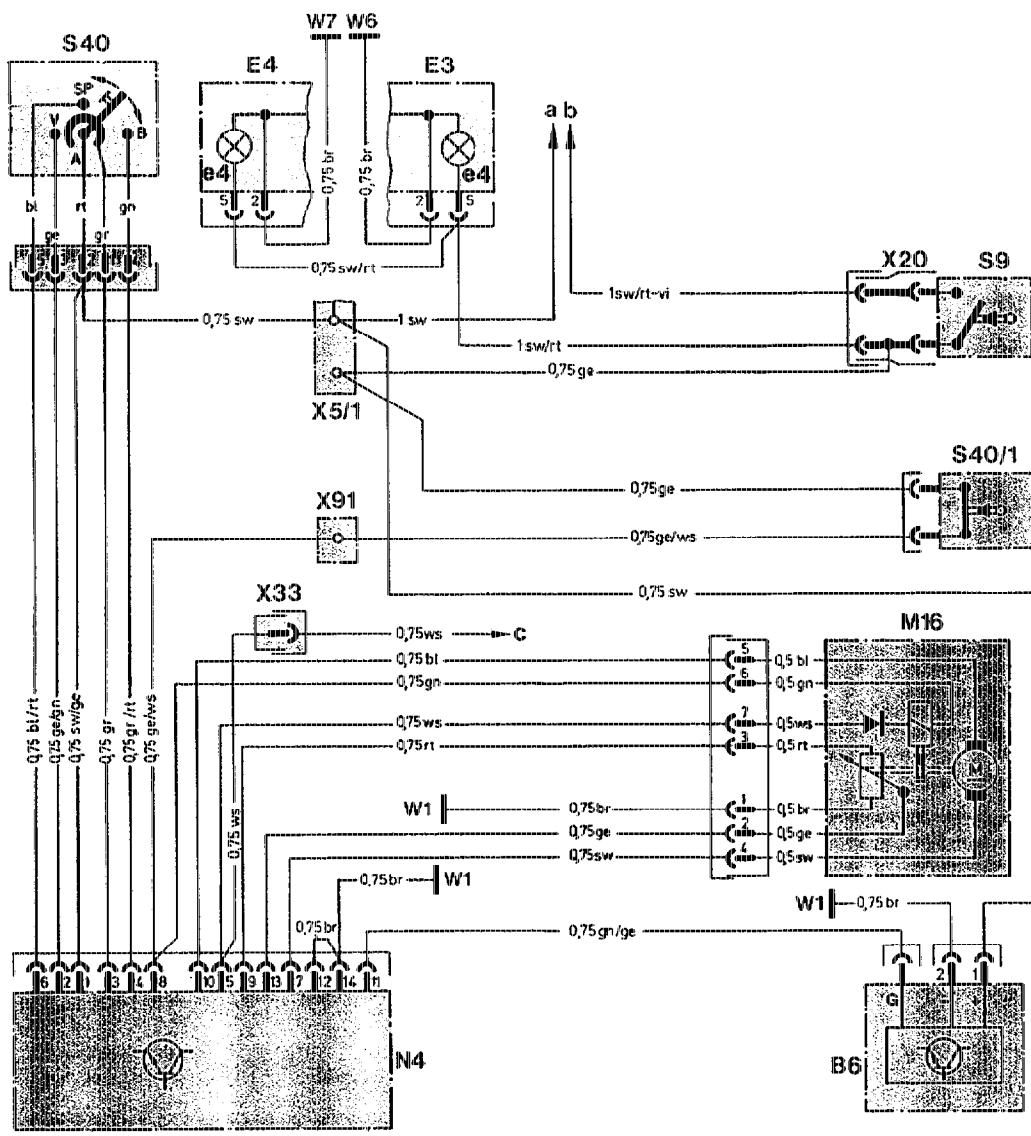


Model 201.024/034 (USA) 1986, up to vehicle ident. end no. F 229814

B6	Hall-effect speed sensor	S40/1	Clutch pedal switch (cruise control)
E3	Left tail lamp unit	W1	Main ground (behind instrument cluster)
E3e4	Stop lamp	W6	Ground, left rear wheelhouse in trunk
E4	Right tail lamp unit	W7	Ground, right rear wheelhouse in trunk
E4e4	Stop lamp	X5/1	Terminal block, interior (5-pole)
M16	Cruise control actuator	X20	Connector, stop lamp switch
N4	Cruise control amplifier	X33	Connector, CIS-E/cruise control (1-pole)
S9	Stop lamp switch	X91	Terminal block, clutch pedal/cruise control 1-pole
S40	Cruise control switch	a	On electrical center, coupling field L, line-up 1
V	Decelerate/set	b	On electrical center, coupling field C, line-up 1
B	Accelerate/set	c	On CIS-E control unit, line-up 6
SB	Resume		
A	Off		

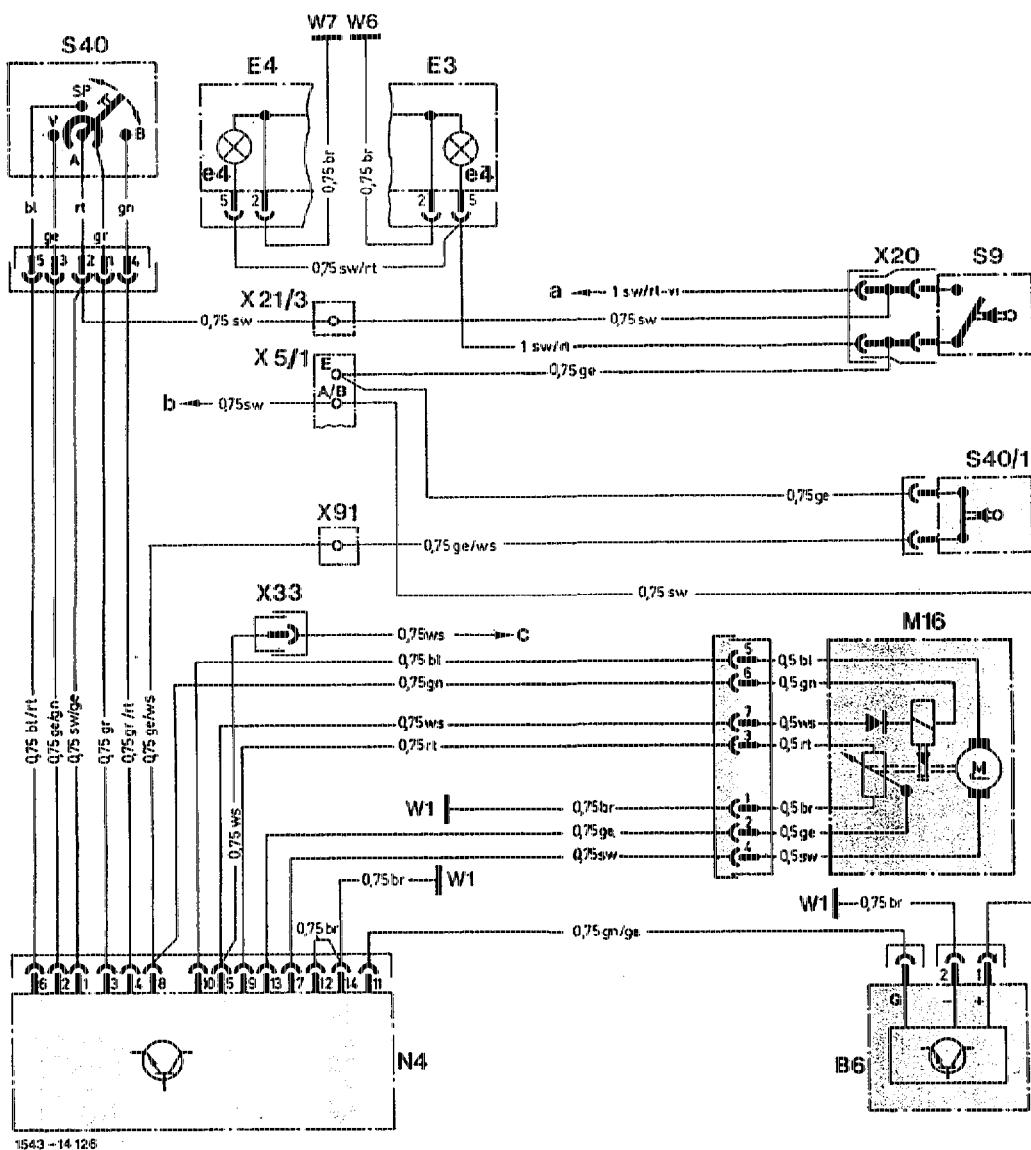


Model 201.024/028/034 (USA), 1986, 1987, as of vehicle ident end no. F 229815  
up to vehicle ident. end no. F 286572


B6	Hall-effect speed sensor	W6	Ground, left rear wheelhouse in trunk
E3	Left tail lamp unit	W7	Ground, right rear wheelhouse in trunk
E3e4	Stop lamp	X5/1	Terminal block, interior (5-pole)
E4	Right tail lamp unit		A/B ident colour black
E4e4	Stop lamp		E ident colour yellow
M16	Cruise control actuator	X20	Connector, stop lamp switch
N4	Cruise control amplifier	X21/3	Terminal block, stop lamp switch/cruise control (1-pole)
S9	Stop lamp switch	X33	Connector, CIS-E/cruise control (1-pole)
S40	Cruise control switch	X91	Terminal block, clutch pedal/cruise control 1-pole
V	Decelerate/set	a	On electrical center, coupling field C, line-up 1
B	Accelerate/set	b	On electrical center, coupling field L, line-up 1
SB	Resume	c	On CIS-E control unit, line-up 6
A	Off		
S40/1	Clutch pedal switch (cruise control)		
W1	Main ground (behind instrument cluster)		

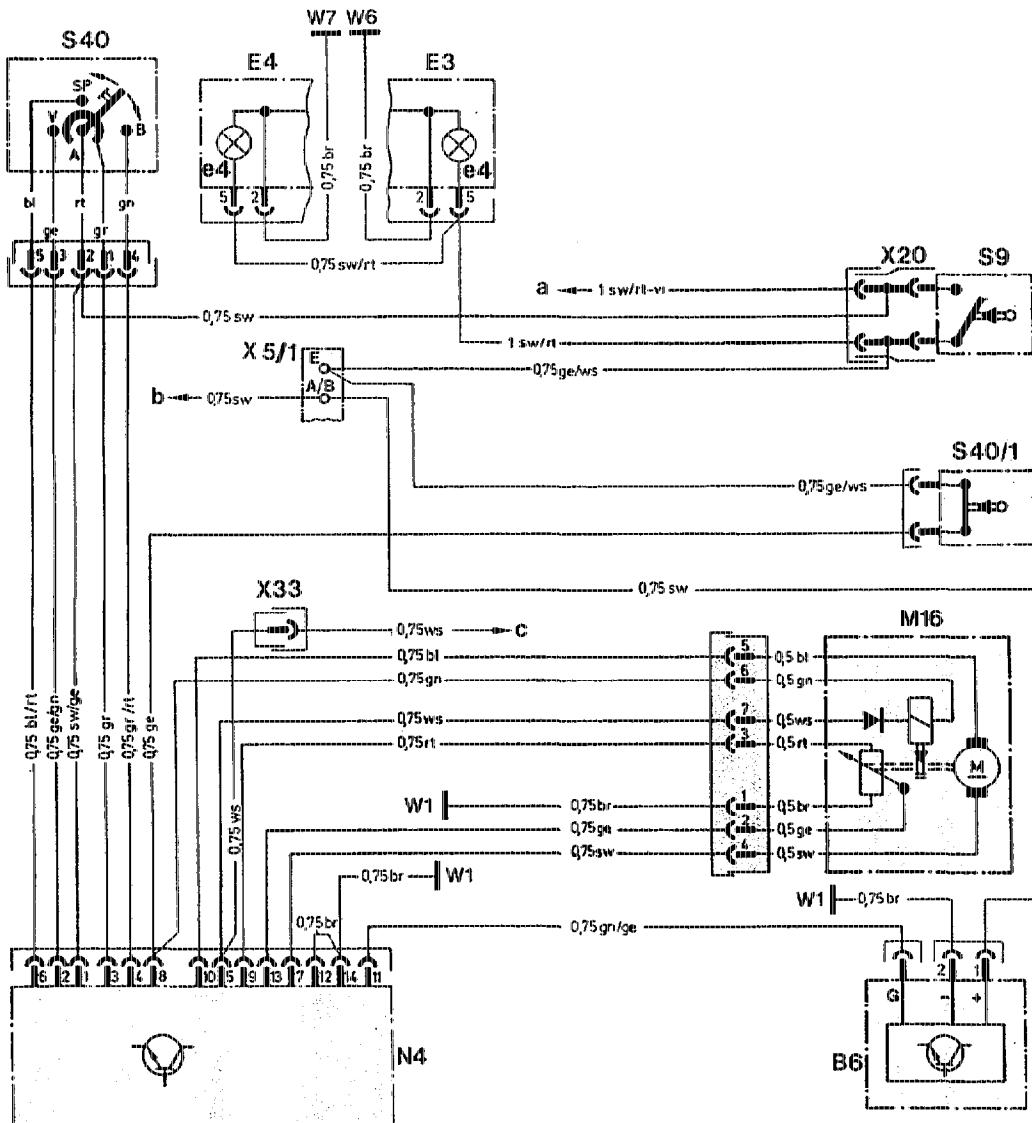

Model 201.028/034 (USA) 1987, as of vehicle ident end no. F 286573

B6	Hall-effect speed sensor	W1	Main ground (behind instrument cluster)
E3	Left tail lamp unit	W6	Ground, left rear wheelhouse in trunk
E3e4	Stop lamp	W7	Ground, right rear wheelhouse in trunk
E4	Right tail lamp unit	X5/1	Terminal block, interior (5-pole)
E4e4	Stop lamp		A/B ident colour black
M16	Cruise control actuator		E ident colour yellow
N4	Cruise control amplifier	X20	Connector, stop lamp switch
S9	Stop lamp switch	X33	Connector, CIS-E/cruise control (1-pole)
S40	Cruise control switch	X91	Terminal block, clutch pedal/cruise control 1-pole
V	Decelerate/set	a	On electrical center, coupling field C, line-up 1
B	Accelerate/set	b	On electrical center, coupling field L, line-up 1
SB	Resume	c	On CIS-E control unit, line-up 6
A	Off		
S40/1	Clutch pedal switch (cruise control)		

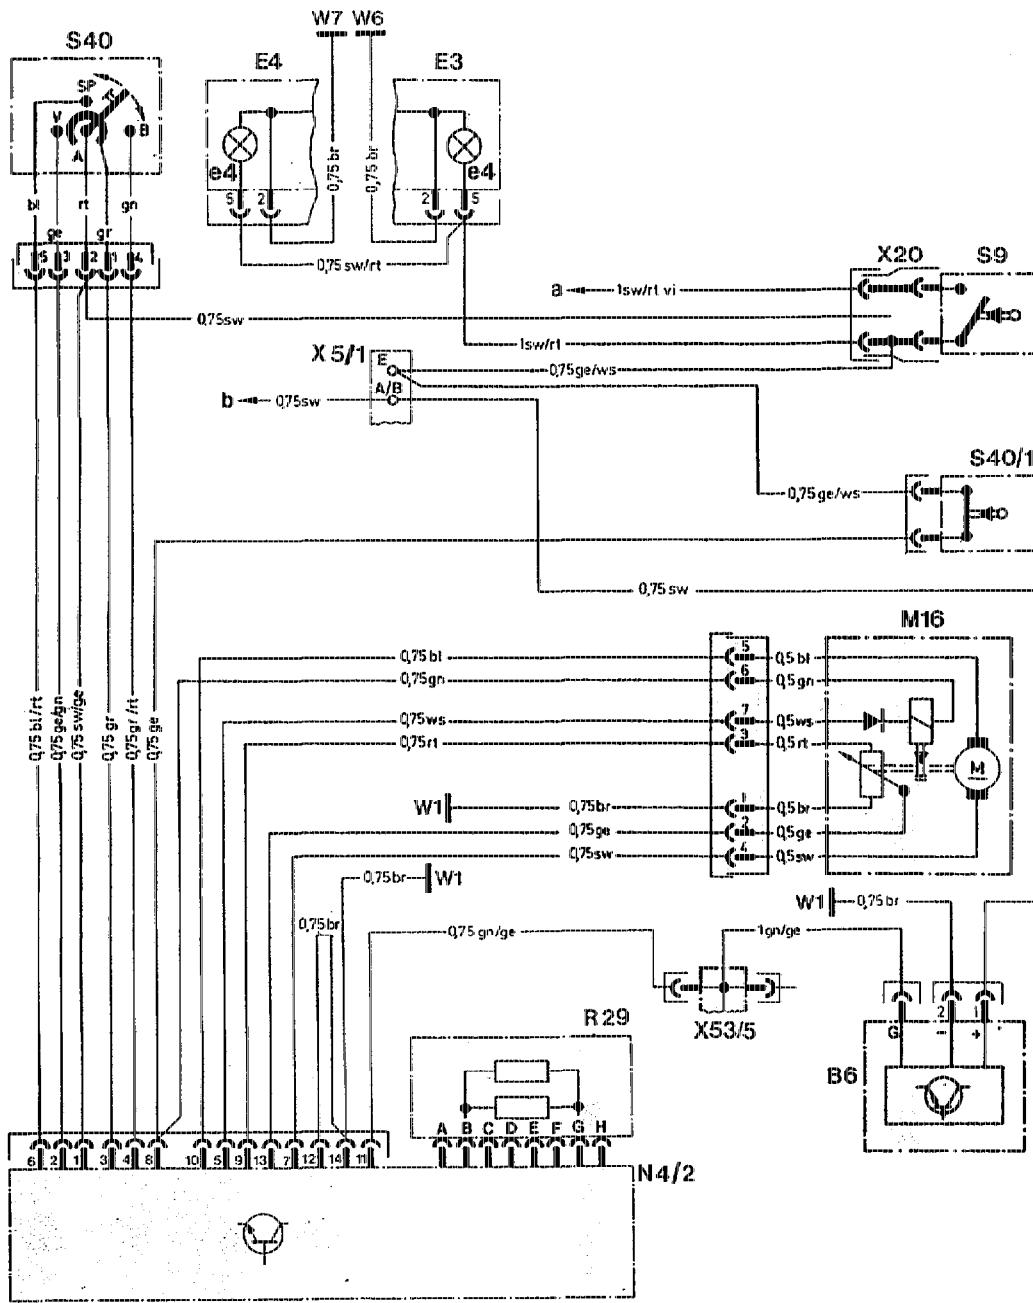


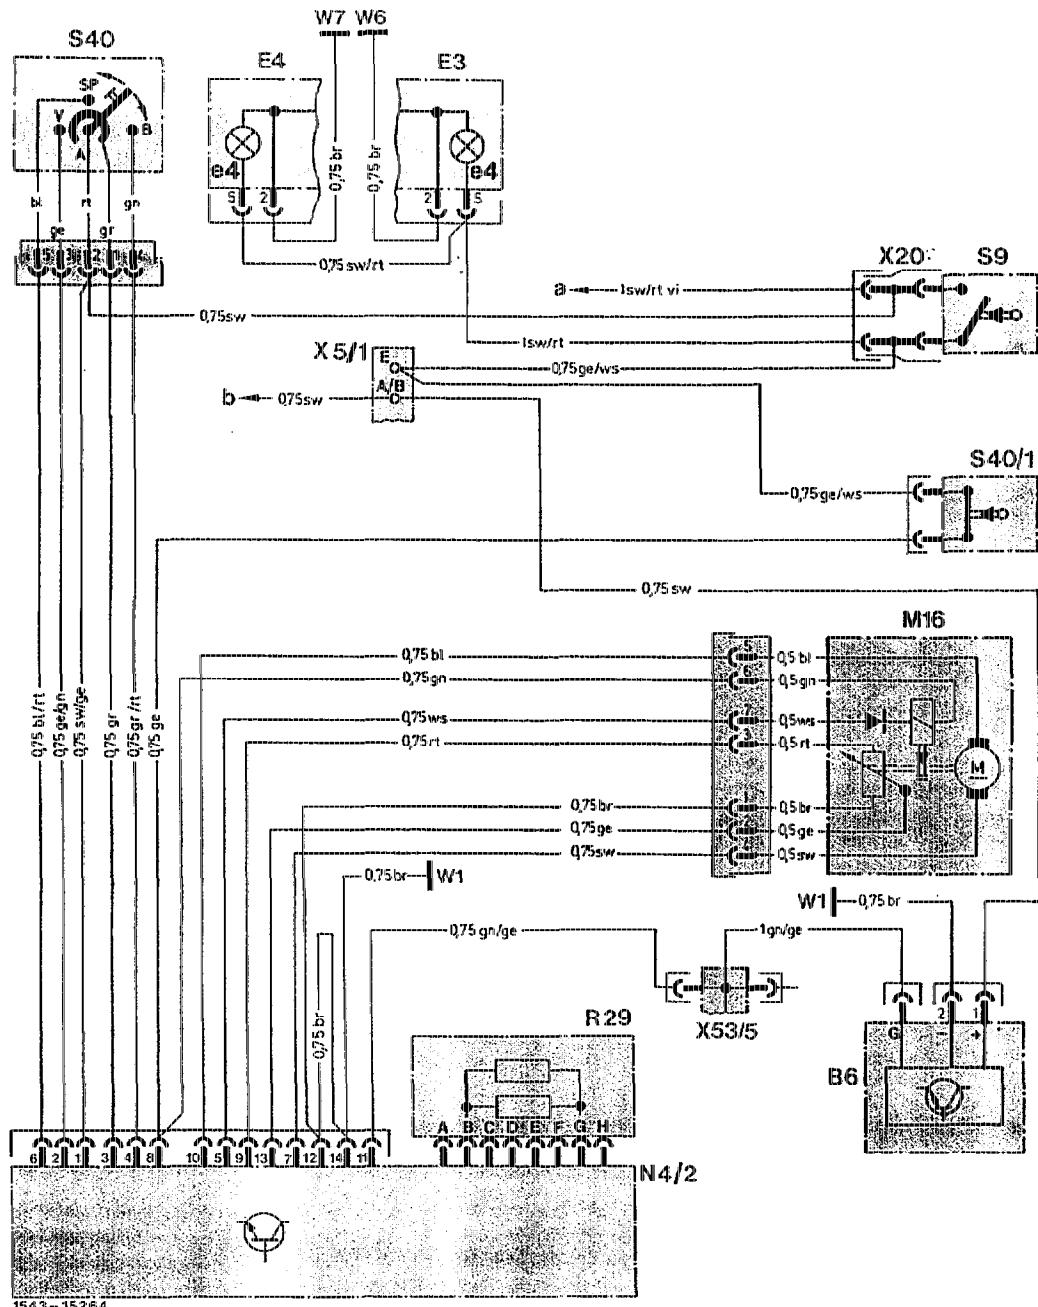

Model 201.028 (USA) 1988, 201.029 (USA) as of 1988

B6	Hall-effect speed sensor	S40/1	Clutch pedal switch (cruise control)
E3	Left tail lamp unit	W1	Main ground (behind instrument cluster)
E3e4	Stop lamp	W6	Ground, left rear wheelhouse in trunk
E4	Right tail lamp unit	W7	Ground, right rear wheelhouse in trunk
E4e4	Stop lamp	X5/1	Terminal block, interior (5-pole)
M16	Cruise control actuator		A/B ident. colour black
N4/2	Cruise control amplifier with reference resistor	a	E ident. colour yellow
R29	Cruise control reference resistor	X20	Connector, stop lamp switch
S9	Stop lamp switch	X53/5	Multipoint connector, Hall-effect sensor
S40	Cruise control switch	b	On electrical center, coupling field C, line-up 1
V	Decelerate/set		On electrical center, coupling field L, line-up 1
B	Accelerate/set		
SB	Resume		
A	Off		

## G. Model 201 with diesel engine and automatic transmission

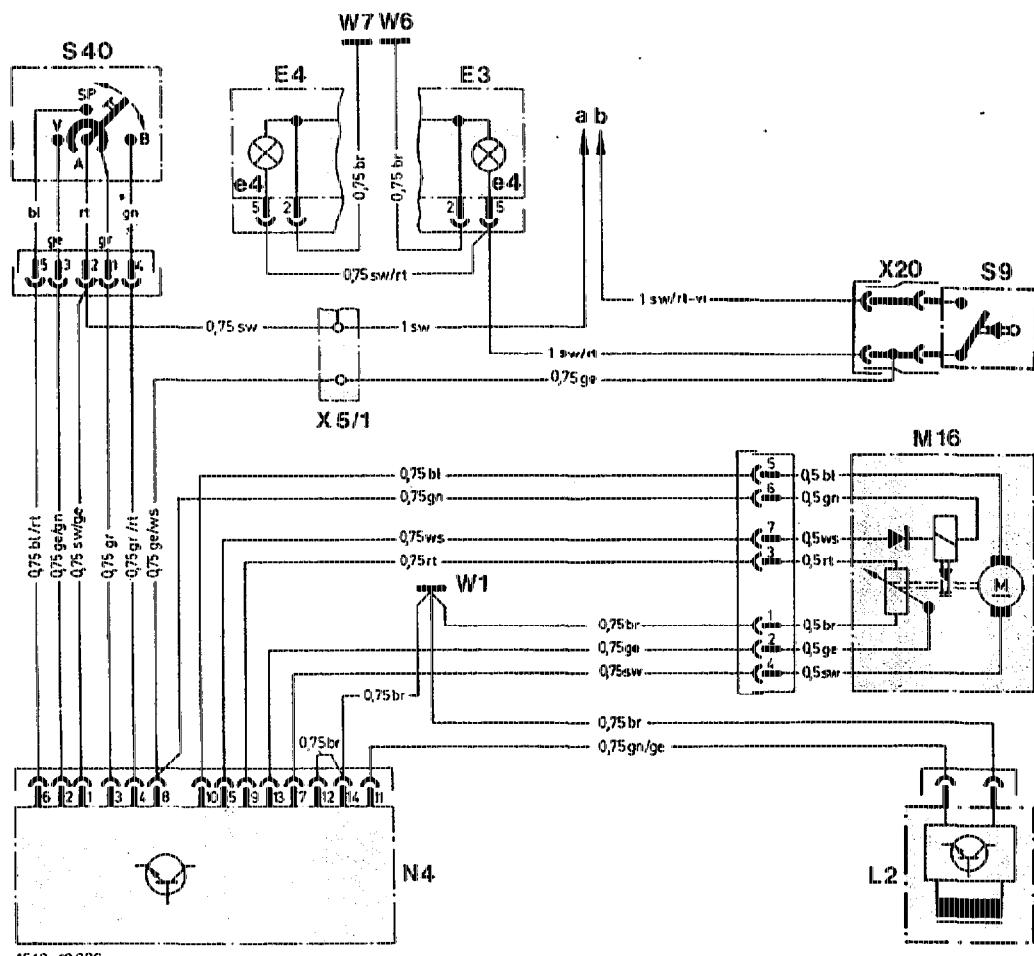


Model 201.122 up to approx. 08/85

E3	Left tail lamp unit
E3e4	Stop lamp
E4	Right tail lamp unit
E4e4	Stop lamp
L2	Road speed sensor
M16	Cruise control actuator
N4	Cruise control amplifier
S9	Stop lamp switch
S40	Cruise control switch
V	Decelerate/set
B	Accelerate/set
SB	Resume
A	Off

W1	Main ground (behind instrument cluster)
W6	Ground, left rear wheelhouse in trunk
W7	Ground, right rear wheelhouse in trunk
X5/1	Terminal block, interior (5-pole)
X20	Connector, stop lamp switch
a	On electrical center, coupling field L, line-up 1
b	On electrical center, coupling field C, line-up 1




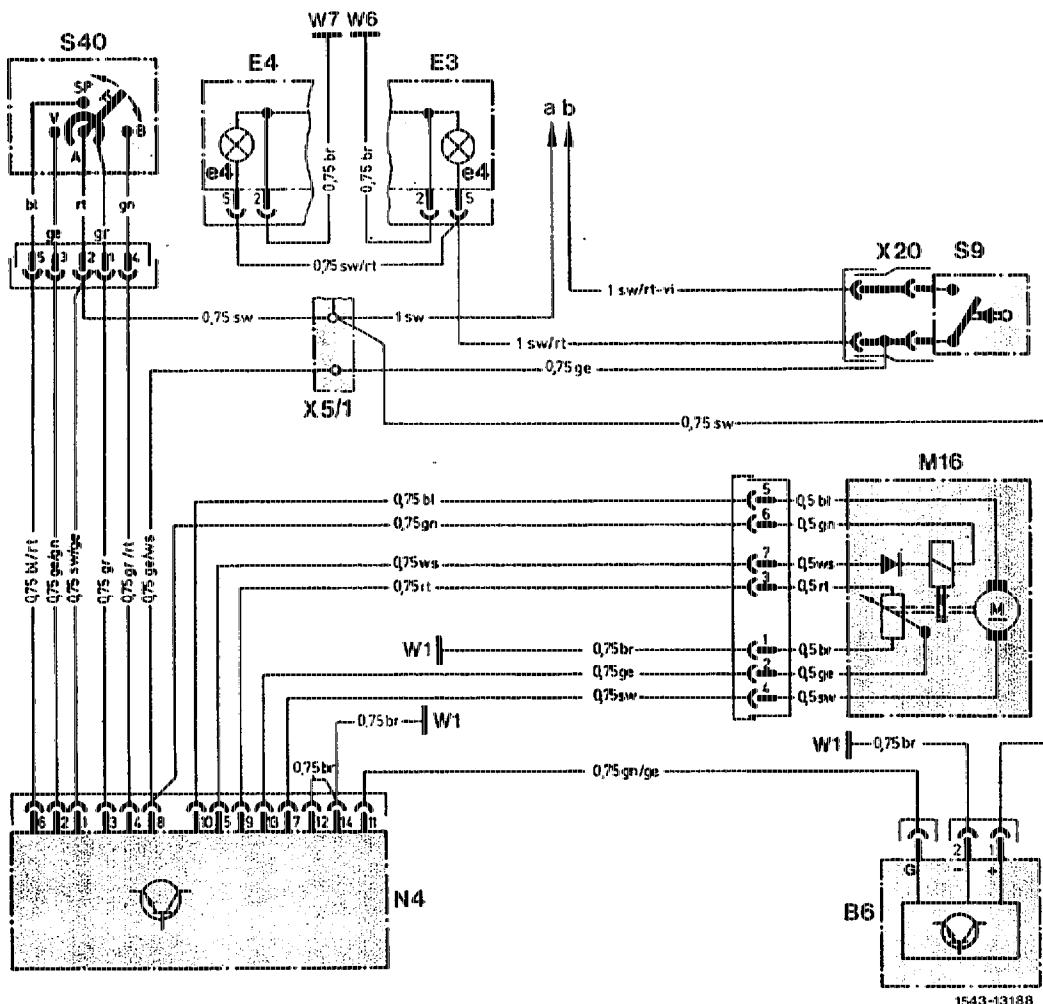

1543-13188

Model 201.122/126 as of approx. 09/85 up to vehicle ident. end no. A 313825/F 229814,  
except: (USA) as of 1986

B6	Hall-effect speed sensor	W1	Main ground (behind instrument cluster)
E3	Left tail lamp unit	W6	Ground, left rear wheelhouse in trunk
E3e4	Stop lamp	W7	Ground, right rear wheelhouse in trunk
E4	Right tail lamp unit	X5/1	Terminal block, interior (5-pole)
E4e4	Stop lamp	X20	Connector, stop lamp switch
M16	Cruise control actuator	a	On electrical center, coupling field L, line-up 1
N4	Cruise control amplifier	b	On electrical center, coupling field C, line-up 1
S9	Stop lamp switch		
S40	Cruise control switch		
V	Decelerate/set		
B	Accelerate/set		
SB	Resume		
A	Off		

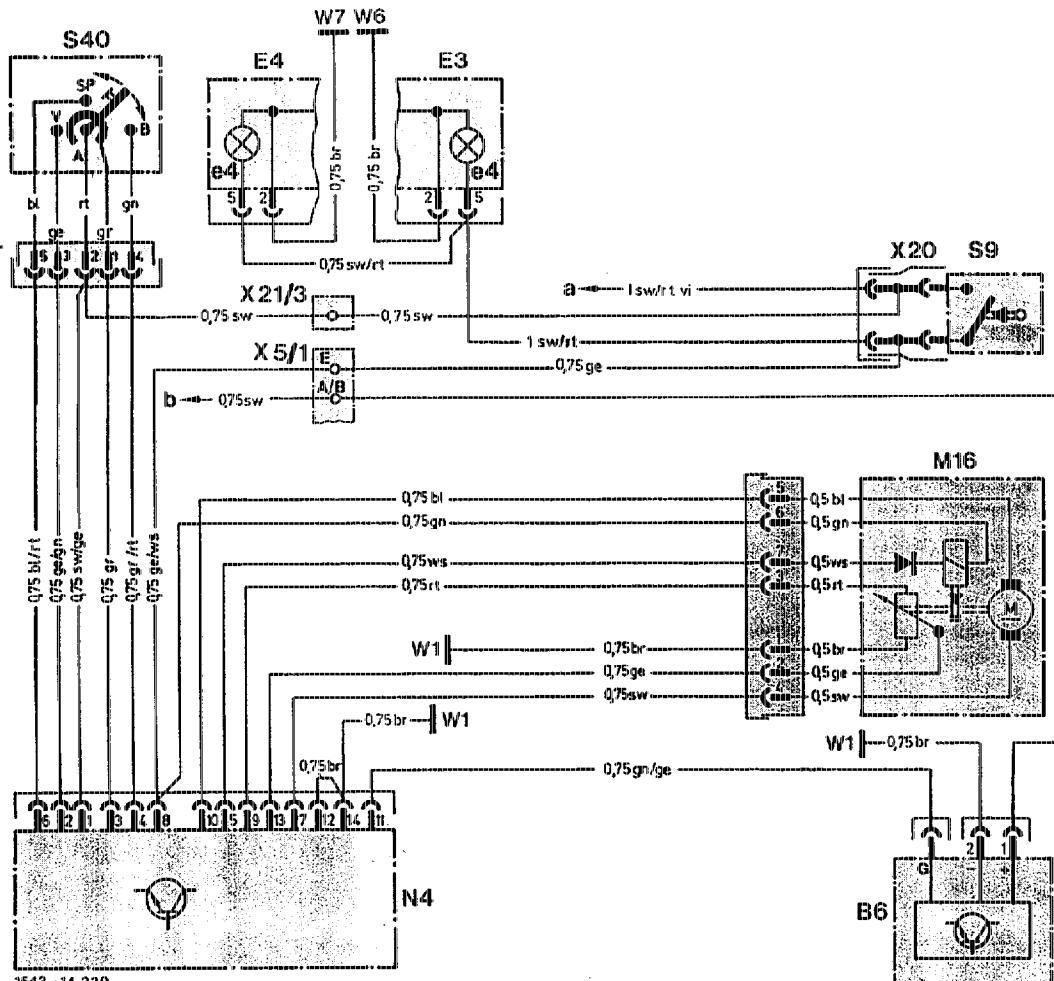


Model 201.122/126 as of vehicle ident end no. A 313826/F 229815

up to vehicle ident. end no. A 384359/F 286572, except: **USA** as of 1986


B6	Hall-effect speed sensor	W1	Main ground (behind instrument cluster)
E3	Left tail lamp unit	W6	Ground, left rear wheelhouse in trunk
E3e4	Stop lamp	W7	Ground, right rear wheelhouse in trunk
E4	Right tail lamp unit	X5/1	Terminal block, interior (5-pole)
E4e4	Stop lamp		A/B ident colour black
M16	Cruise control actuator		E ident colour yellow
N4	Cruise control amplifier	X20	Connector, stop lamp switch
S9	Stop lamp switch	X21/3	Terminal block, stop lamp switch/cruise control (1-pole)
S40	Cruise control switch	a	On electrical center, coupling field C, line-up 1
V	Decelerate/set	b	On electrical center, coupling field L, line-up 1
B	Accelerate/set		
SB	Resume		
A	Off		



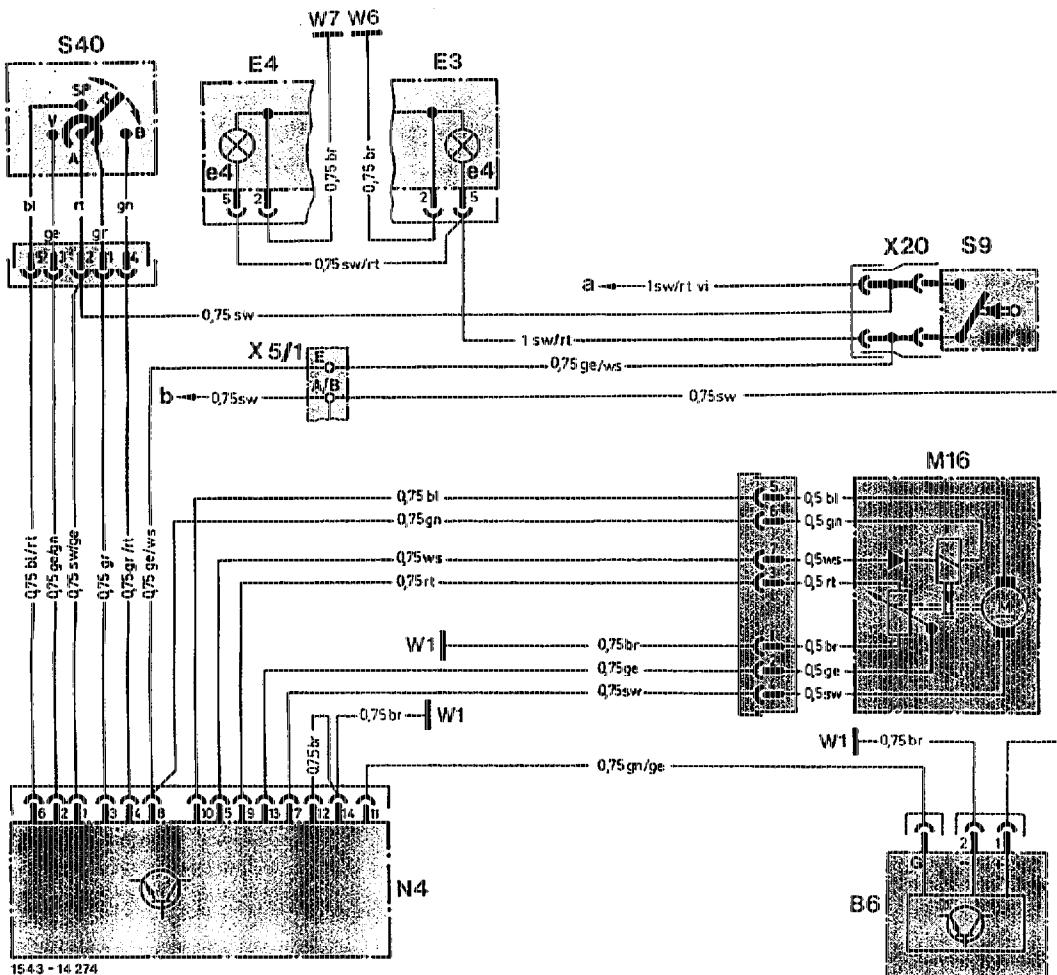


Model 201.122 as of vehicle ident end no. A 384360/F 286573

B6	Hall-effect speed sensor	W1	Main ground (behind instrument cluster)
E3	Left tail lamp unit	W6	Ground, left rear wheelhouse in trunk
E3e4	Stop lamp	W7	Ground, right rear wheelhouse in trunk
E4	Right tail lamp unit	X5/1	Terminal block, interior (5-pole)
E4e4	Stop lamp		A/B ident. colour black
M16	Cruise control actuator		E ident. colour yellow
N4	Cruise control amplifier	X20	Connector, stop lamp switch
S9	Stop lamp switch	a	On electrical center, coupling field C, line-up 1
S40	Cruise control switch	b	On electrical center, coupling field L, line-up 1
V	Decelerate/set		
B	Accelerate/set		
SB	Resume		
A	Off		

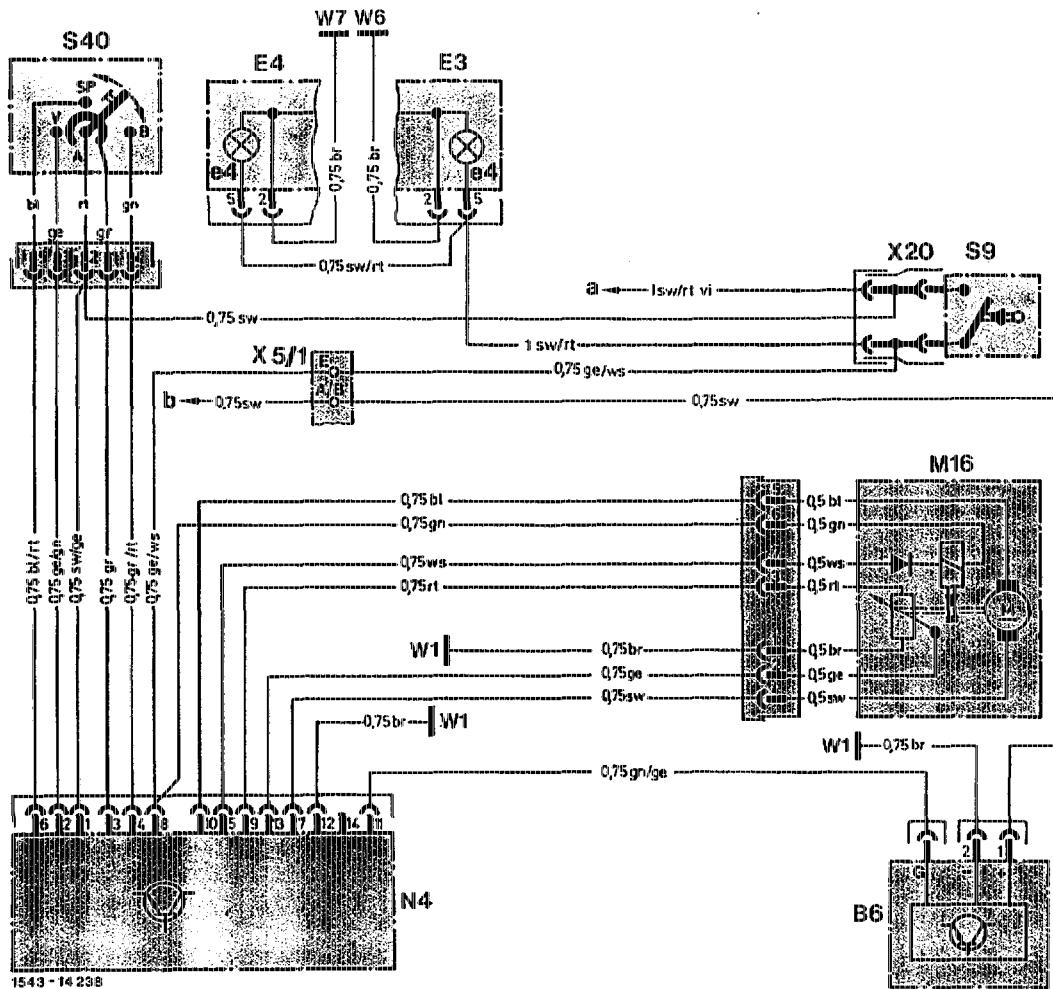


Model 201.126 as of vehicle ident end no. A 384360/F 286573, except: (USA) as of 1986

B6	Hall-effect speed sensor	W1	Main ground (behind instrument cluster)
E3	Left tail lamp unit	W6	Ground, left rear wheelhouse in trunk
E3e4	Stop lamp	W7	Ground, right rear wheelhouse in trunk
E4	Right tail lamp unit	X5/1	Terminal block, interior (5-pole)
E4e4	Stop lamp	a	A/B ident. colour black
M16	Cruise control actuator	b	E ident. colour yellow
N4	Cruise control amplifier	X20	Connector, stop lamp switch
S9	Stop lamp switch		On electrical center, coupling field C, line-up 1
S40	Cruise control switch		On electrical center, coupling field L, line-up 1
V	Decelerate/set		
B	Accelerate/set		
SB	Resume		
A	Off		

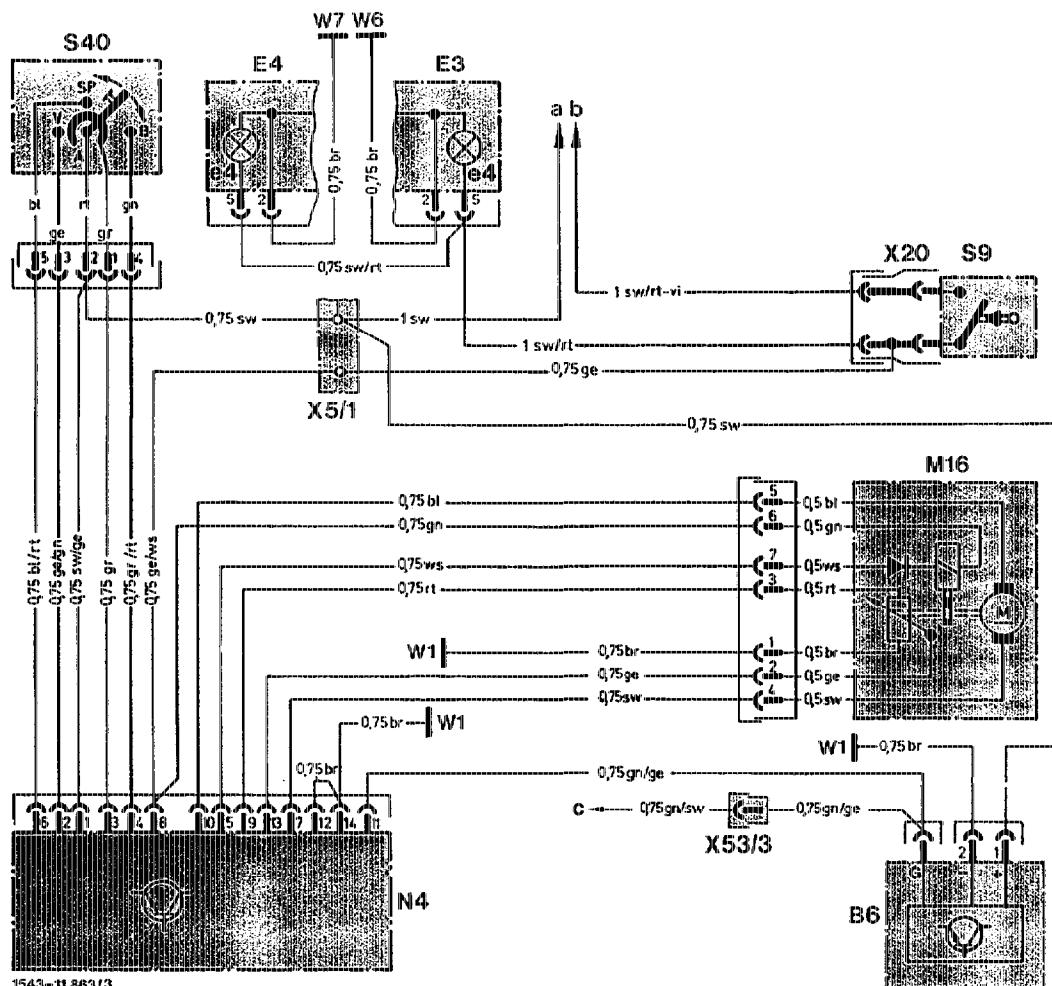

Model 201.126 (USA) 1986 up to vehicle ident. end no. F 229814


B6	Hall-effect speed sensor	W1	Main ground (behind instrument cluster)
E3	Left tail lamp unit	W6	Ground, left rear wheelhouse in trunk
E3e4	Stop lamp	W7	Ground, right rear wheelhouse in trunk
E4	Right tail lamp unit	X5/1	Terminal block, interior (5-pole)
E4e4	Stop lamp	X20	Connector, stop lamp switch
M16	Cruise control actuator	X53/3	Connector, Hall-effect sensor/EGR (1-pole)
N4	Cruise control amplifier	a	On electrical center, coupling field L, line-up 1
S9	Stop lamp switch	b	On electrical center, coupling field C, line-up 1
S40	Cruise control switch	c	On control unit exhaust gas recirculation line-up 5
V	Decelerate/set		
B	Accelerate/set		
SB	Resume		
A	Off		

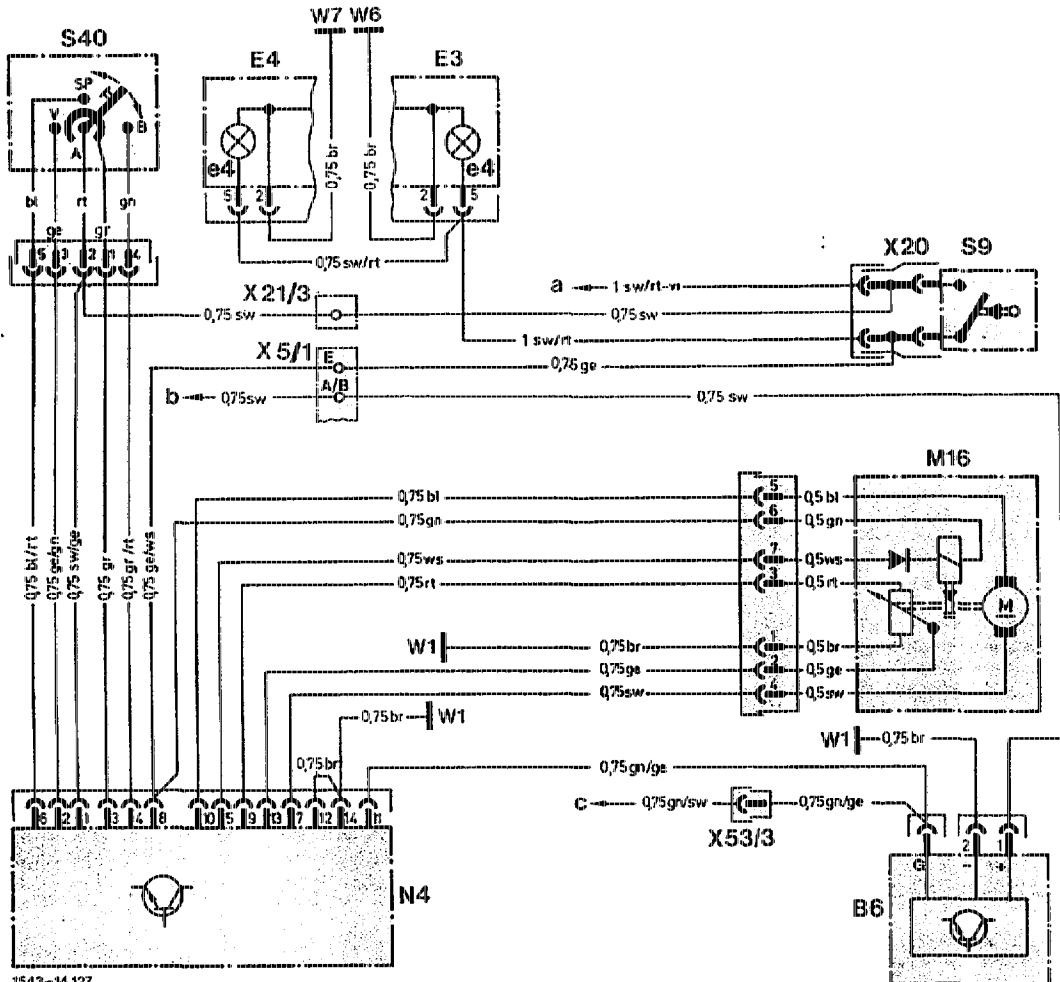

Model 201.126 (USA) 1986, 1987 as of vehicle ident end no. F 229815


up to vehicle ident. end no. F 286572

B6	Hall-effect speed sensor	W1	Main ground (behind instrument cluster)
E3	Left tail lamp unit	W6	Ground, left rear wheelhouse in trunk
E3e4	Stop lamp	W7	Ground, right rear wheelhouse in trunk
E4	Right tail lamp unit	X5/1	Terminal block, interior (5-pole)
E4e4	Stop lamp		A/B ident. colour black
M16	Cruise control actuator		E ident. colour yellow
N4	Cruise control amplifier	X20	Connector, stop lamp switch
S9	Stop lamp switch	X21/3	Terminal block, stop lamp switch/cruise control (1-pole)
S40	Cruise control switch	X53/3	Connector, Hall-effect sensor/EGR (1-pole)
V	Decelerate/set	a	On electrical center, coupling field C, line-up 1
B	Accelerate/set	b	On electrical center, coupling field L, line-up 1
SB	Resume	c	On control unit exhaust gas recirculation line-up 5
A	Off		

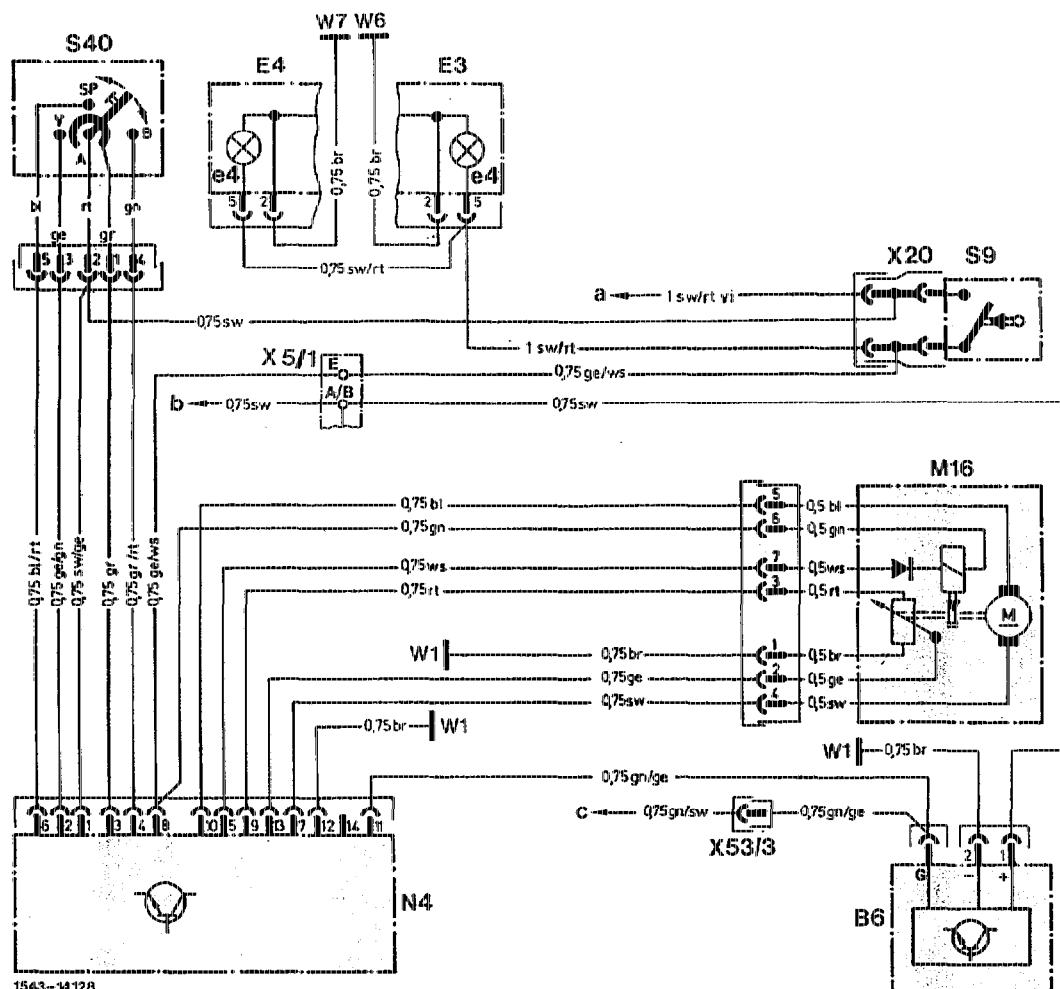


Model 201.126 (USA) 1987 as of vehicle ident end no. F 286573

B6	Hall-effect speed sensor	W1	Main ground (behind instrument cluster)
E3	Left tail lamp unit	W6	Ground, left rear wheelhouse in trunk
E3e4	Stop lamp	W7	Ground, right rear wheelhouse in trunk
E4	Right tail lamp unit	X5/1	Terminal block, interior (5-pole)
E4e4	Stop lamp	A/B	ident. colour black
M16	Cruise control actuator	E	ident. colour yellow
N4	Cruise control amplifier	X20	Connector, stop lamp switch
S9	Stop lamp switch	X53/3	Connector, Hall-effect sensor/EGR (1-pole)
S40	Cruise control switch	a	On electrical center, coupling field C, line-up 1
V	Decelerate/set	b	On electrical center, coupling field L, line-up 1
B	Accelerate/set	c	On control unit exhaust gas recirculation line-up 5
SB	Resume		
A	Off		

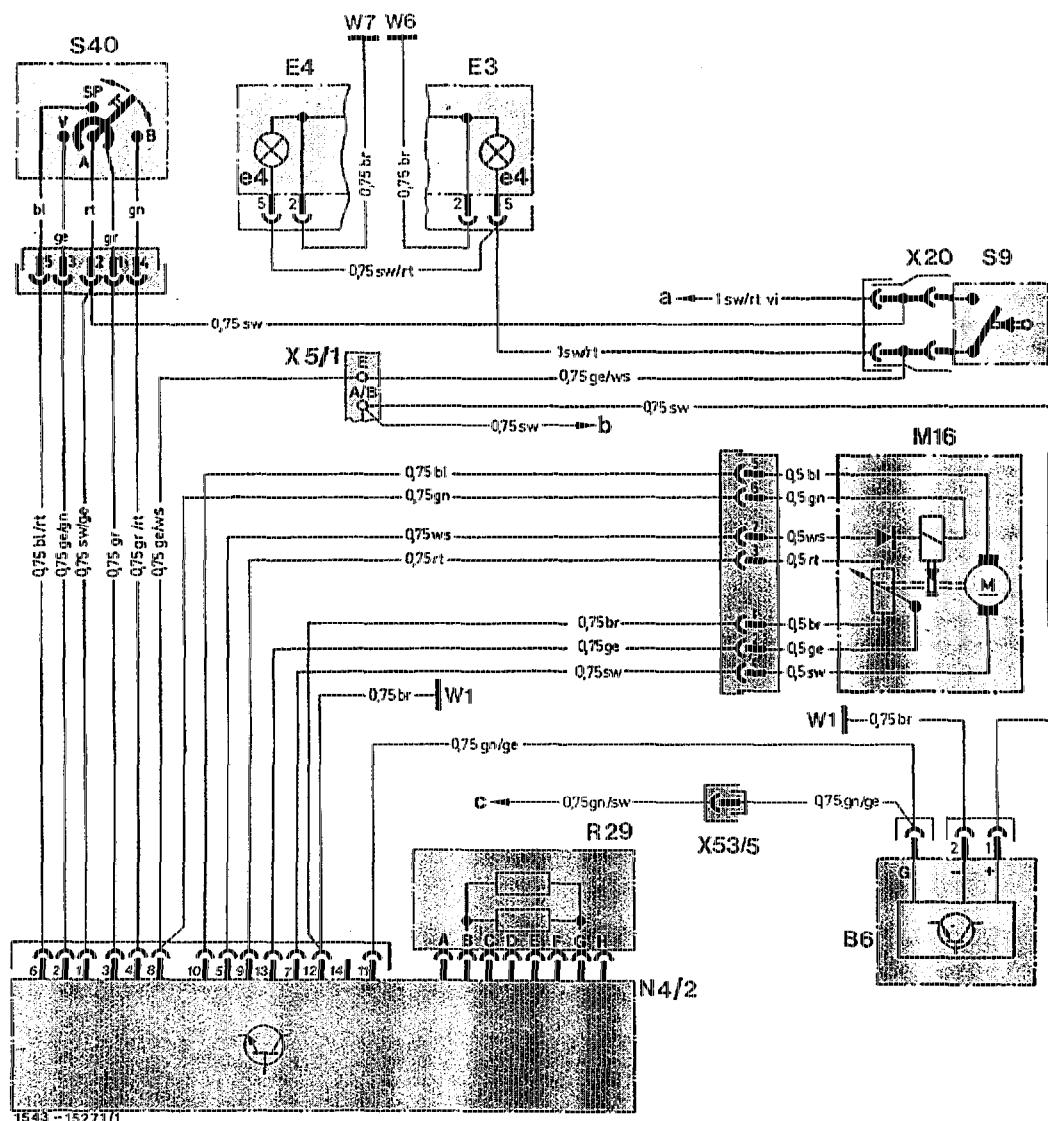


Model 201.126 (USA) as of 1988

B6	Hall-effect speed sensor	W1	Main ground (behind instrument cluster)
E3	Left tail lamp unit	W6	Ground, left rear wheelhouse in trunk
E3e4	Stop lamp	W7	Ground, right rear wheelhouse in trunk
E4	Right tail lamp unit	X5/1	Terminal block, interior (5-pole)
E4e4	Stop lamp		A/B ident. colour black
M16	Cruise control actuator		E ident. colour yellow
N4/2	Cruise control amplifier with reference resistor	X20	Connector, stop lamp switch
R29	Cruise control reference resistor	X53/3	Connector, Hall-effect sensor/EGR (1-pole)
S9	Stop lamp switch	a	On electrical center, coupling field C, line-up 1
S40	Cruise control switch	b	On electrical center, coupling field L, line-up 1
V	Decelerate/set	c	On control unit exhaust gas recirculation line-up 1
B	Accelerate/set		
SB	Resume		
A	Off		

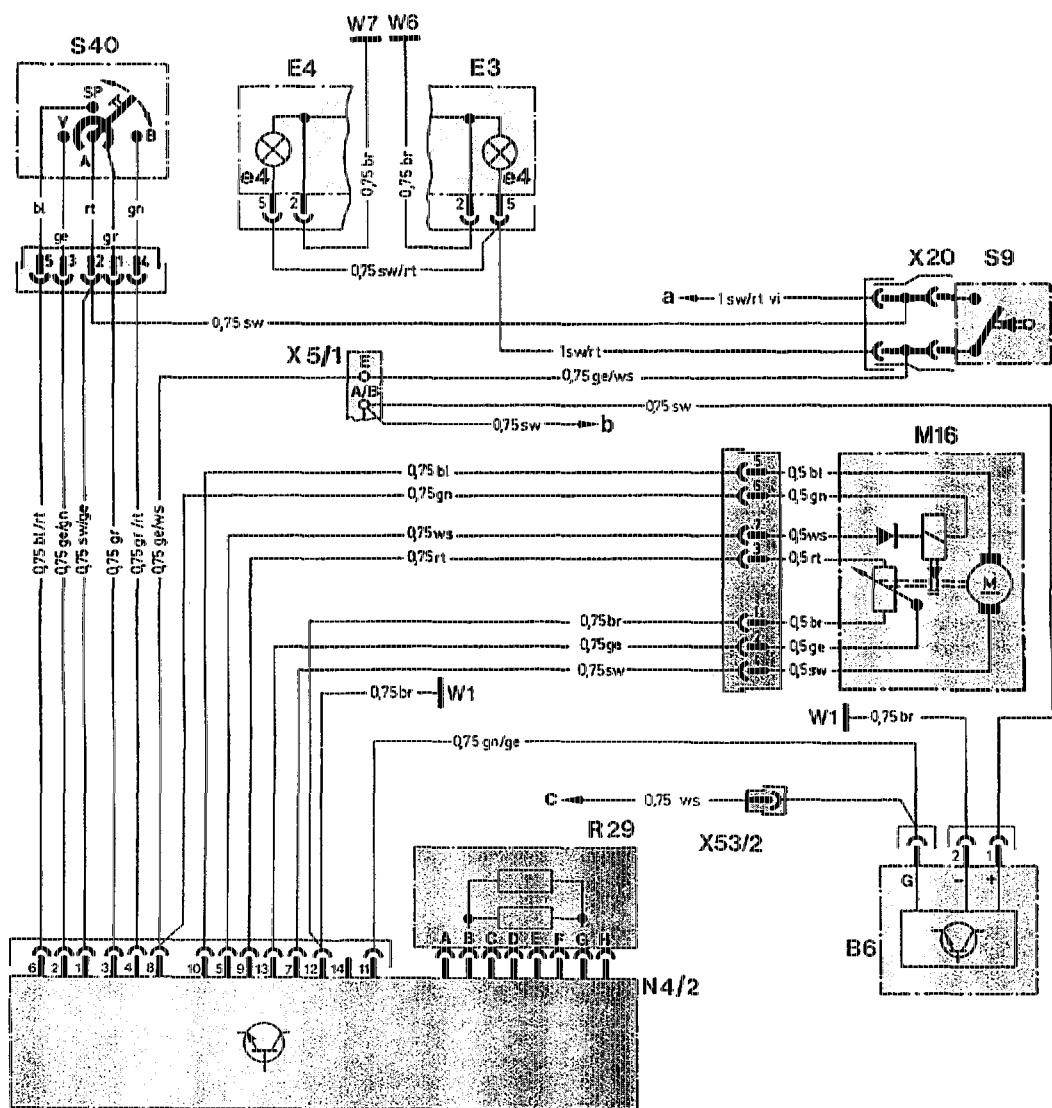

Model 201.128 except (USA) up to approx. 08/89


B6	Hall-effect speed sensor	W1	Main ground (behind instrument cluster)
E3	Left tail lamp unit	W6	Ground, left rear wheelhouse in trunk
E3e4	Stop lamp	W7	Ground, right rear wheelhouse in trunk
E4	Right tail lamp unit	X5/1	Terminal block, interior (5-pole)
E4e4	Stop lamp		A/B ident. colour black
M16	Cruise control actuator		E ident. colour yellow
N4/2	Cruise control amplifier with reference resistor	X20	Connector, stop lamp switch
R29	Cruise control reference resistor	X53/2	Connector, Hall-effect sensor/ Tempomat (cruise control)
S9	Stop lamp switch	a	On electrical center, coupling field C, line-up 1
S40	Cruise control switch	b	On electrical center, coupling field L, line-up 1
V	Decelerate/set	c	On outside temperature indicator A1p4
B	Accelerate/set		
SB	Resume		
A	Off		

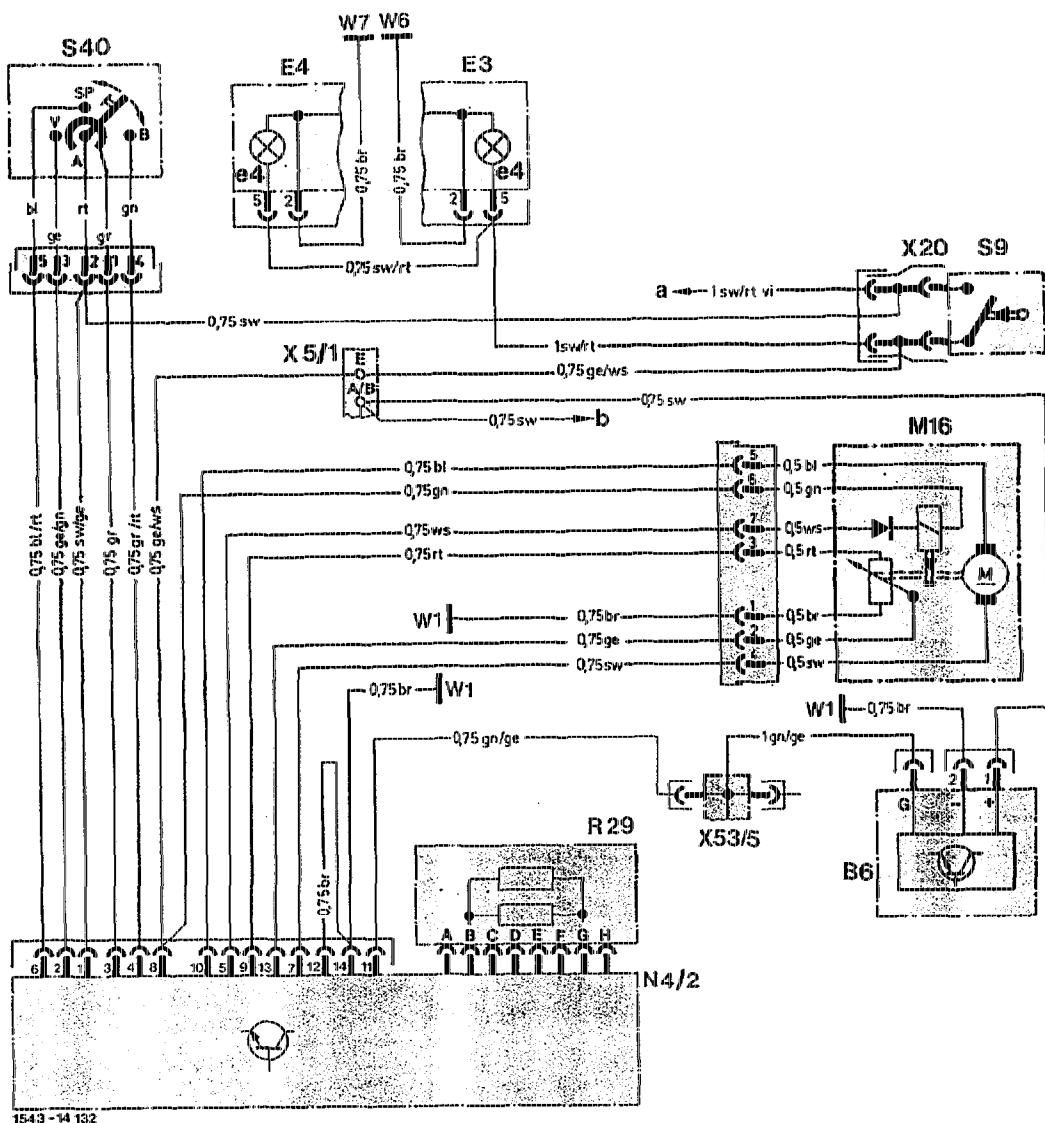

Model 201.128 USA 1987

B6	Hall-effect speed sensor	W1	Main ground (behind instrument cluster)
E3	Left tail lamp unit	W6	Ground, left rear wheelhouse in trunk
E3e4	Stop lamp	W7	Ground, right rear wheelhouse in trunk
E4	Right tail lamp unit	X5/1	Terminal block, interior (5-pole)
E4e4	Stop lamp		A/B ident. colour black
M16	Cruise control actuator		E ident. colour yellow
N4/2	Cruise control amplifier with reference resistor	X20	Connector, stop lamp switch
R29	Cruise control reference resistor	X53/5	Multipoint connector, Hall-effect sensor
S9	Stop lamp switch	a	On electrical center, coupling field C, line-up 1
S40	Cruise control switch	b	On electrical center, coupling field L, line-up 1
V	Decelerate/set		
B	Accelerate/set		
SB	Resume		
A	Off		


## H. Model 201 with diesel engine and manual transmission

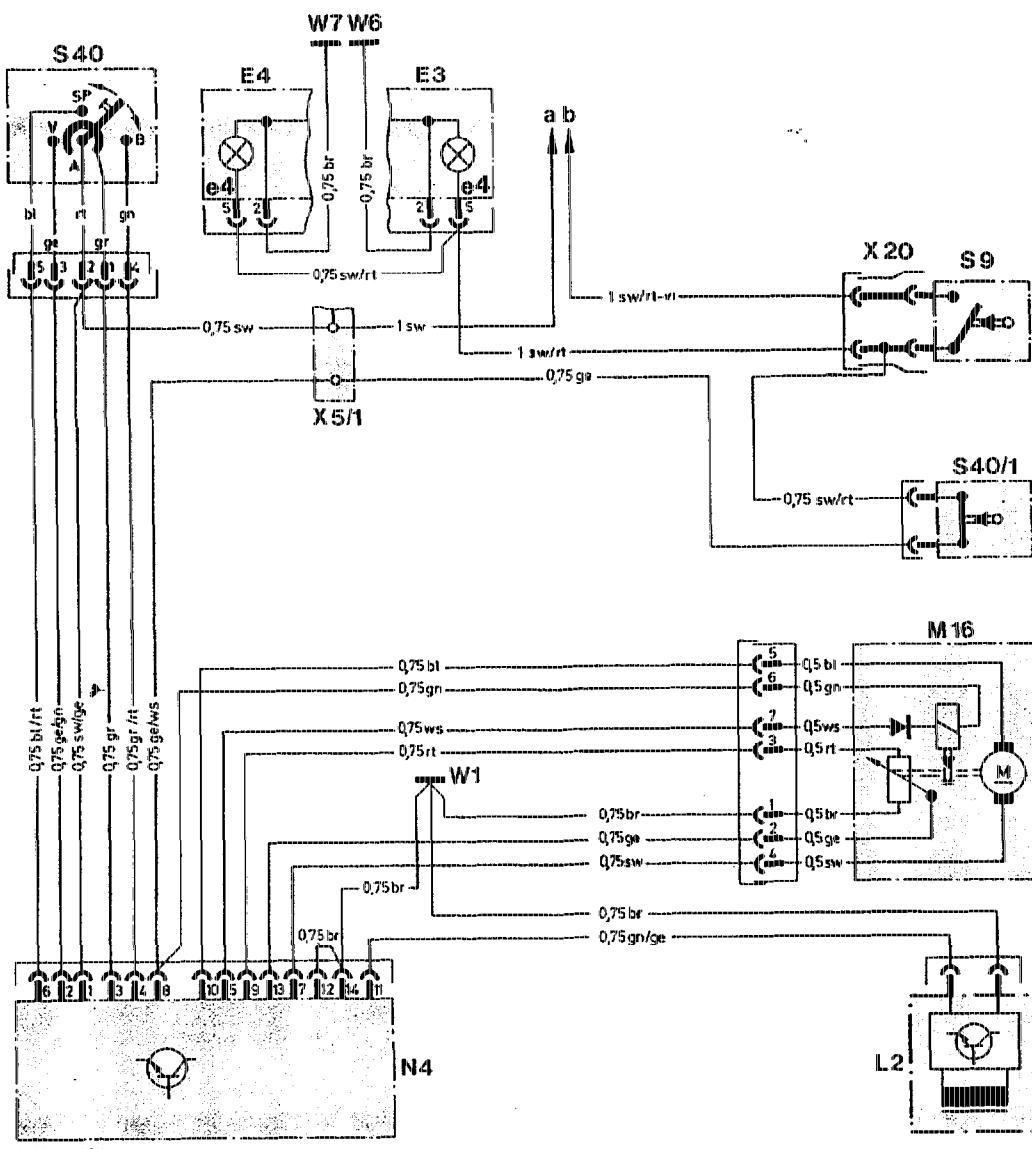

Model 201.122 (USA) 1984 except California


E3	Left tail lamp unit
E3e4	Stop lamp
E4	Right tail lamp unit
E4e4	Stop lamp
L2	Road speed sensor
M16	Cruise control actuator
N4	Cruise control amplifier
S9	Stop lamp switch
S40	Cruise control switch
V	Decelerate/set
B	Accelerate/set
SB	Resume
A	Off

S40/1	Clutch pedal switch (cruise control)
W1	Main ground (behind instrument cluster)
W6	Ground, left rear wheelhouse in trunk
W7	Ground, right rear wheelhouse in trunk
X5/1	Terminal block, interior (5-pole)
X20	Connector, stop lamp switch
a.	On electrical center, coupling field L, line-up 1
b.	On electrical center, coupling field C, line-up 1

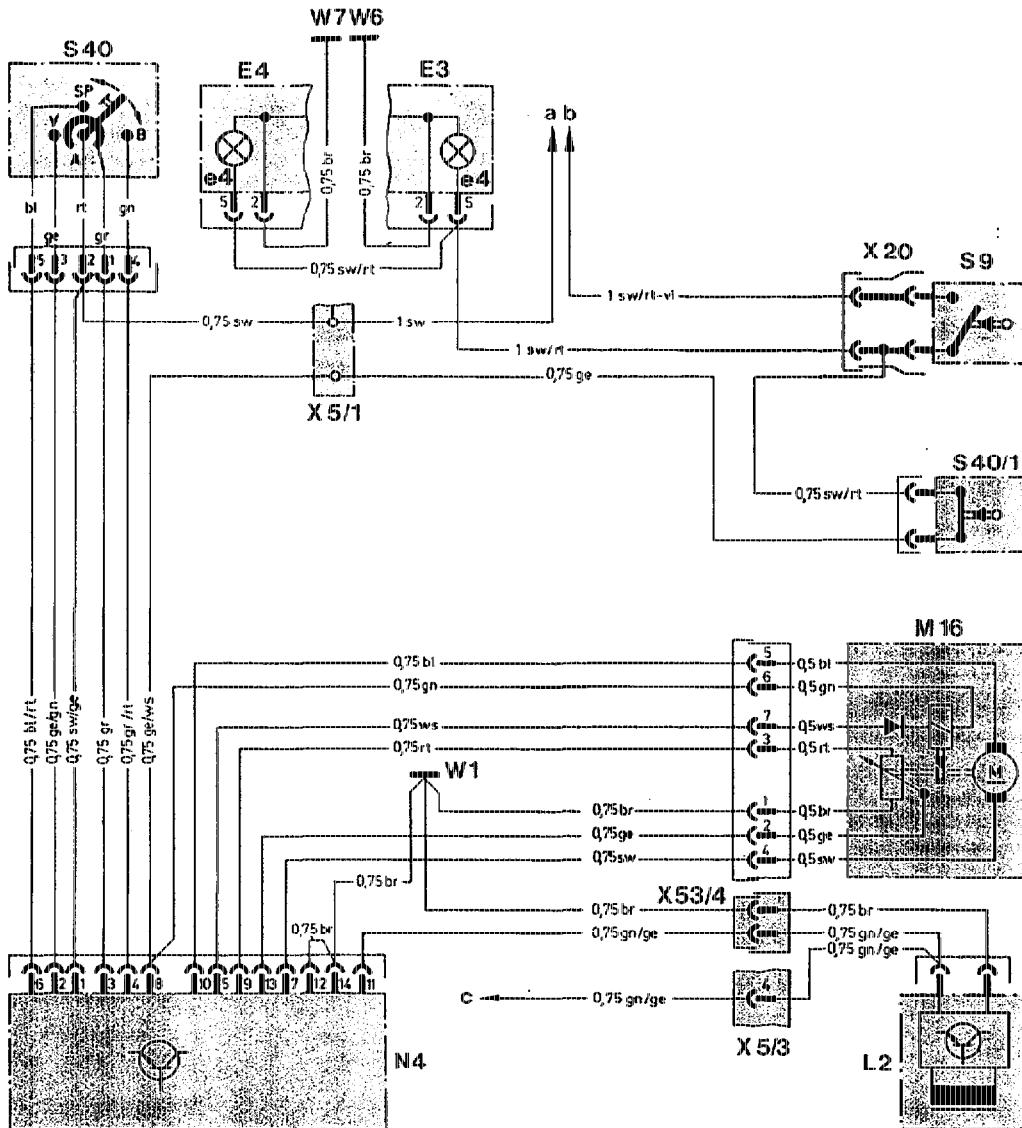

Model 201.122 (USA) 1985 up to vehicle ident. end no. A 209722/F 089783 and California 1984


E3	Left tail lamp unit	S40/1	Clutch pedal switch (cruise control)
E3e4	Stop lamp	W1	Main ground (behind instrument cluster)
E4	Right tail lamp unit	W6	Ground, left rear wheelhouse in trunk
E4e4	Stop lamp	W7	Ground, right rear wheelhouse in trunk
L2	Road speed sensor	X5/1	Terminal block, interior (5-pole)
M16	Cruise control actuator	X53/4	Connector, inductive sensor/EGR (2-pole)
N4	Cruise control amplifier	X5/3	Connector, interior/A/C compressor harness
S9	Stop lamp switch	X20	Connector, stop lamp switch
S40	Cruise control switch	a	On electrical center, coupling field L, line-up 1
V	Decelerate/set	b	On electrical center, coupling field C, line-up 1
B	Accelerate/set	c	On control unit exhaust gas recirculation line-up 5
SB	Resume		
A	Off		

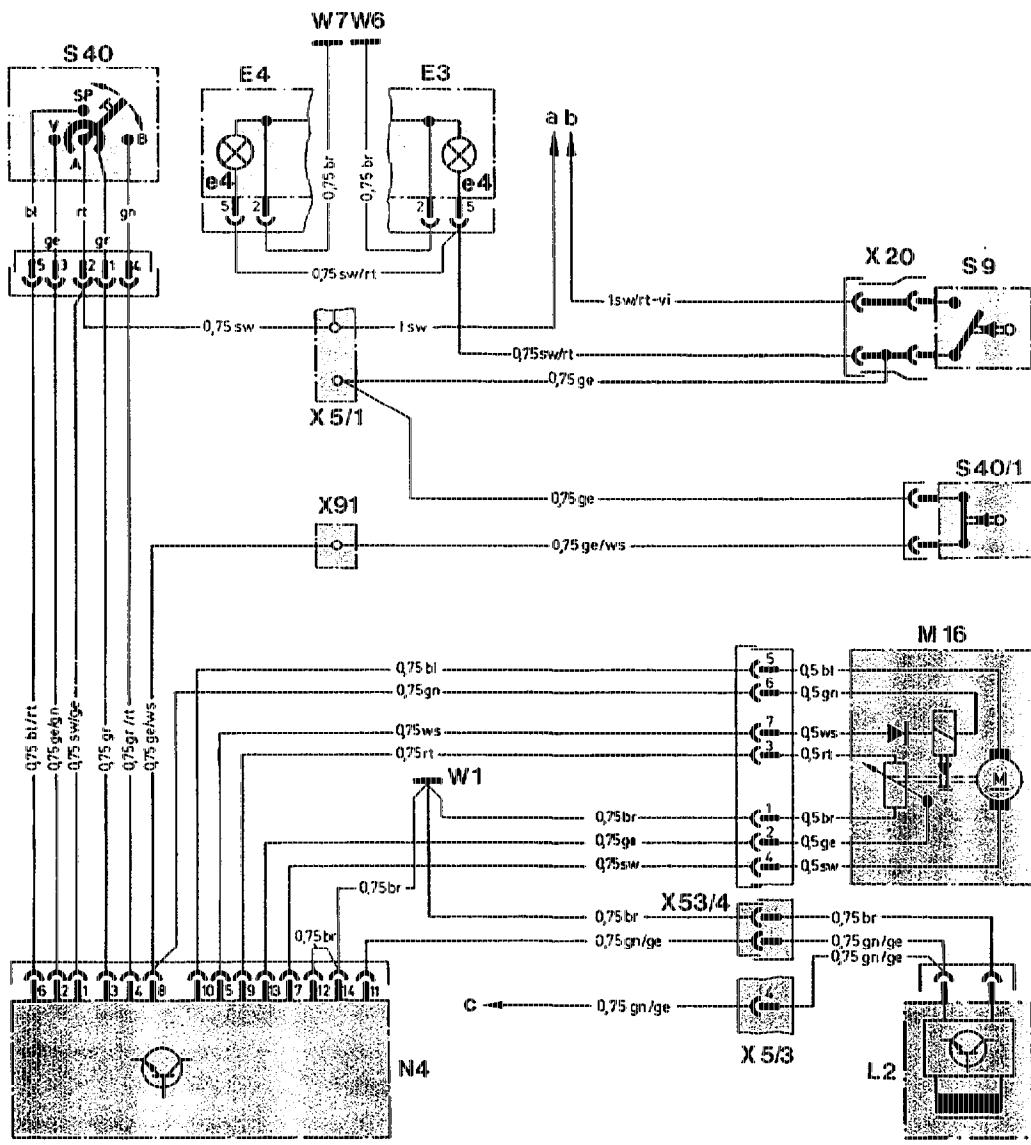

Model 201.122 (USA) 1985 as of vehicle ident end no. A 209723/F 089774

E3	Left tail lamp unit	W1	Main ground (behind instrument cluster)
E3e4	Stop lamp	W6	Ground, left rear wheelhouse in trunk
E4	Right tail lamp unit	W7	Ground, right rear wheelhouse in trunk
E4e4	Stop lamp	X5/1	Terminal block, interior (5-pole)
L2	Road speed sensor	X5/3	Connector, interior/A/C compressor harness
M16	Cruise control actuator	X20	Connector, stop lamp switch
N4	Cruise control amplifier	X53/4	Connector, inductive sensor/EGR (2-pole)
S9	Stop lamp switch	X91	Terminal block, clutch pedal/cruise control 1-pole
S40	Cruise control switch	a	On electrical center, coupling field L, line-up 1
V	Decelerate/set	b	On electrical center, coupling field C, line-up 1
B	Accelerate/set	c	On control unit exhaust gas recirculation line-up 5
SB	Resume		
A	Off		
S40/1	Clutch pedal switch (cruise control)		




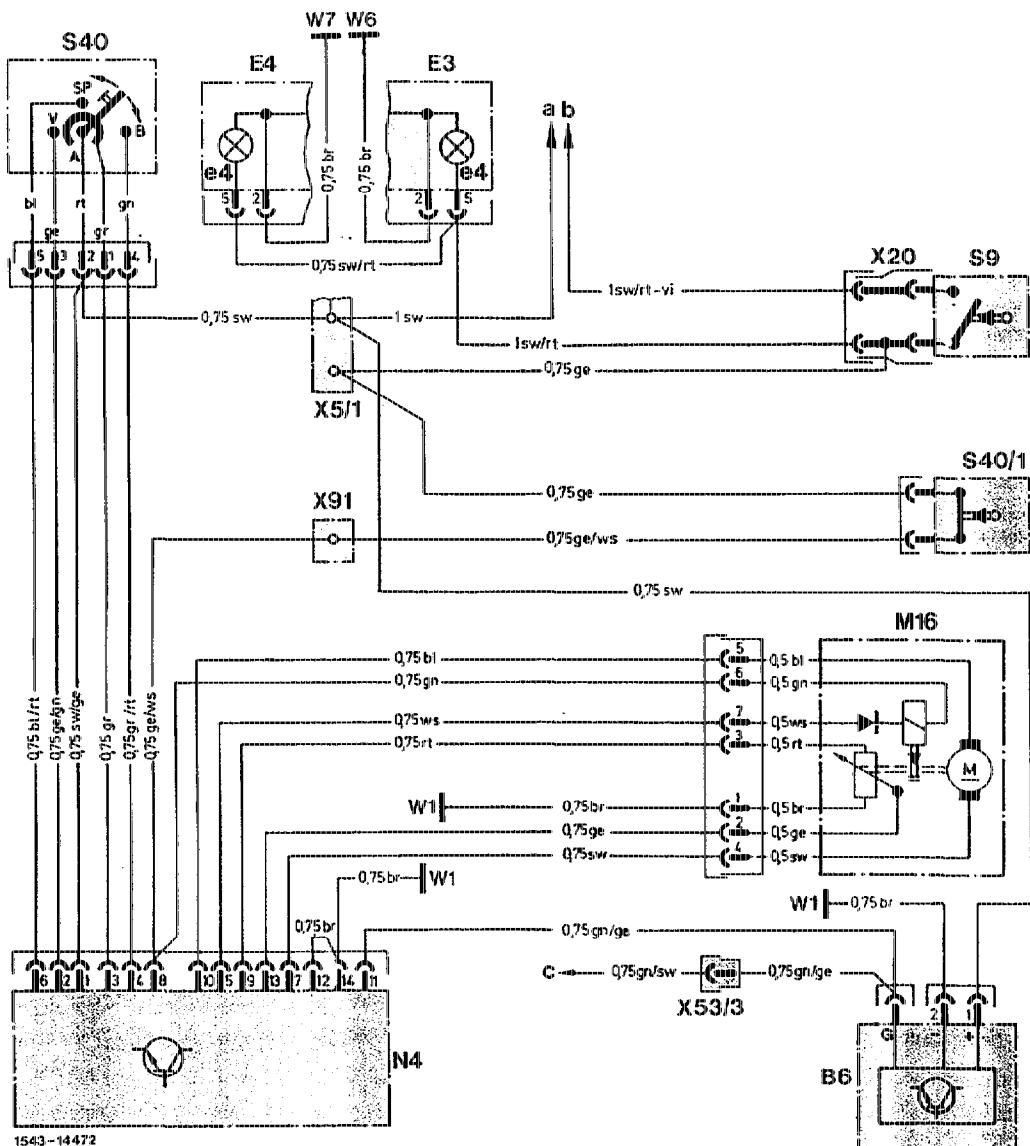

Model 201.126 (USA) 1986 up to vehicle ident. end no. F 229814

B6	Hall-effect speed sensor	S40/1	Clutch pedal switch (cruise control)
E3	Left tail lamp unit	W1	Main ground (behind instrument cluster)
E3e4	Stop lamp	W6	Ground, left rear wheelhouse in trunk
E4	Right tail lamp unit	W7	Ground, right rear wheelhouse in trunk
E4e4	Stop lamp	X5/1	Terminal block, interior (5-pole)
M16	Cruise control actuator	X20	Connector, stop lamp switch
N4	Cruise control amplifier	X53/3	Connector, Hall-effect sensor/EGR (1-pole)
S9	Stop lamp switch	X91	Terminal block, clutch pedal/cruise control 1-pole
S40	Cruise control switch	a	On electrical center, coupling field L, line-up 1
V	Decelerate/set	b	On electrical center, coupling field C, line-up 1
B	Accelerate/set	c	On control unit exhaust gas recirculation line-up 5
SB	Resume		
A	Off		




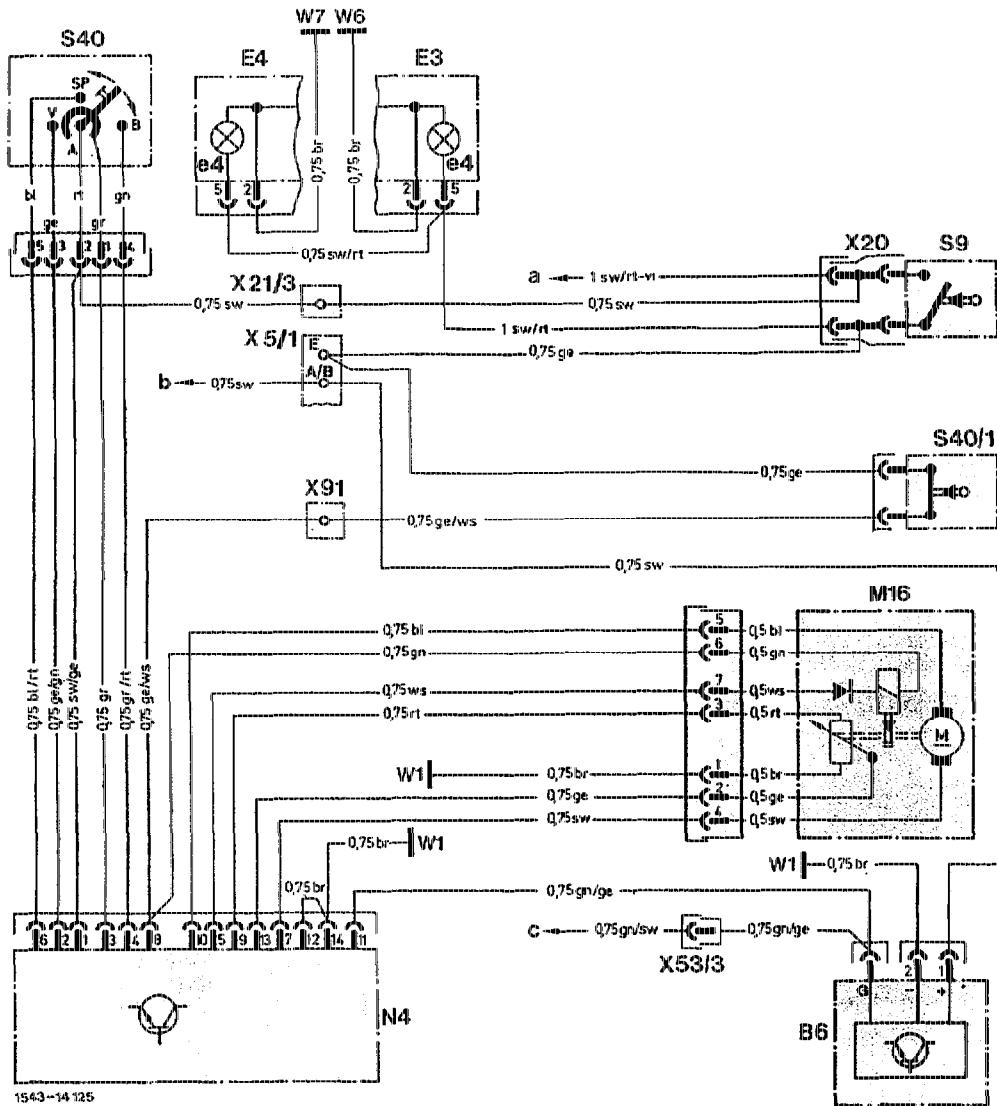

Model 201.126 USA 1986, 1987 as of vehicle ident end no. F 229815

up to vehicle ident. end no. F 286572

B6	Hall-effect speed sensor	X5/1	Terminal block, interior (5-pole)
E3	Left tail lamp unit		A/B ident colour black
E3e4	Stop lamp		E ident colour yellow
E4	Right tail lamp unit	X20	Connector, stop lamp switch
E4e4	Stop lamp	X21/3	Terminal block, stop lamp switch/cruise control (1-pole)
M16	Cruise control actuator	X53/3	Connector, Hall-effect sensor/EGR (1-pole)
N4	Cruise control amplifier	X91	Terminal block, clutch pedal/cruise control 1-pole
S9	Stop lamp switch	a	On electrical center, coupling field C, line-up 1
S40	Cruise control switch	b	On electrical center, coupling field L, line-up 1
	V Decelerate/set	c	On control unit exhaust gas recirculation line-up 5
	B Accelerate/set		
	SB Resume		
	A Off		
S40/1	Clutch pedal switch (cruise control)		
W1	Main ground (behind instrument cluster)		
W6	Ground, left rear wheelhouse in trunk		
W7	Ground, right rear wheelhouse in trunk		

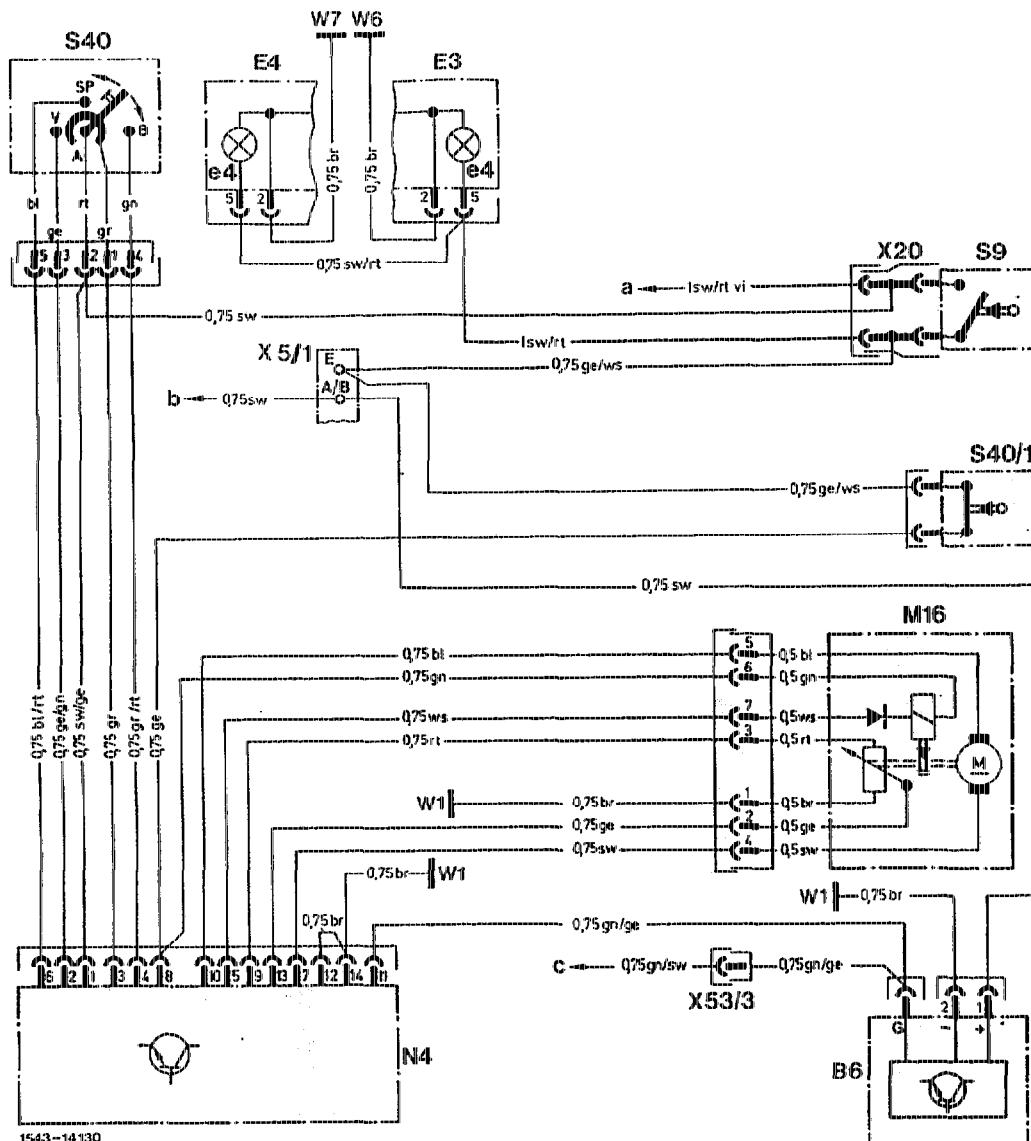

Model 201.126 (USA) 1987 as of vehicle ident end no. F 286573

B6	Hall-effect speed sensor	W1	Main ground (behind instrument cluster)
E3	Left tail lamp unit	W6	Ground, left rear wheelhouse in trunk
E3e4	Stop lamp	W7	Ground, right rear wheelhouse in trunk
E4	Right tail lamp unit	X5/1	Terminal block, interior (5-pole)
E4e4	Stop lamp	A/B	ident. colour black
M16	Cruise control actuator	E	ident. colour yellow
N4	Cruise control amplifier	X20	Connector, stop lamp switch
S9	Stop lamp switch	X53/3	Connector, Hall-effect sensor/EGR (1-pole)
S40	Cruise control switch	a	On electrical center, coupling field C, line-up 1
V	Decelerate/set	b	On electrical center, coupling field L, line-up 1
B	Accelerate/set	c	On control unit exhaust gas recirculation line-up 5
SB	Resume		
A	Off		
S40/1	Clutch pedal switch (cruise control)		

