
All Models

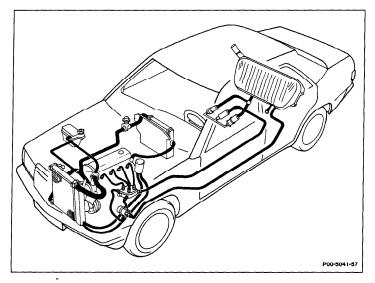

Note: To perform this job number, the engine compartment lower panels or the lower noise encapsulation panels must be removed and then reinstalled after completion of all maintenance work (see jobs 6190 or 9490, respectively).

Inspect engine and fuel system, including lines and hoses, for leaks. Check for chafe marks and proper routing.

En	gi	ne


Crankcase Crankcase seal, front
Coolant pump and housing Timing housing cover
Oil pan Coolant and heating hoses
Air-oil cooler with hoses

Cylinder head cover

Radiator Oil filter

Fuel system

Fuel tank Fuel filters Injection pump Prefilter Fuel pump Fuel cooler Fuel pump assembly Injection system Fuel preheating

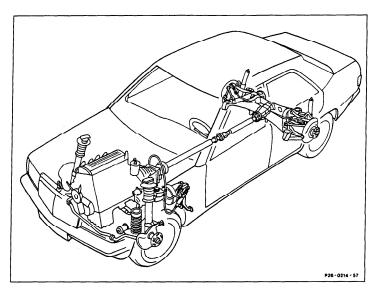

Check condition of damper struts, shock absorbers, and rear axle.


If traces of oil are found on lower engine compartment panels, determine source.

Rear axle

Sealing rings Fill and drain plugs Housing cover

Damper struts or shock absorbers

Leaks Mounting

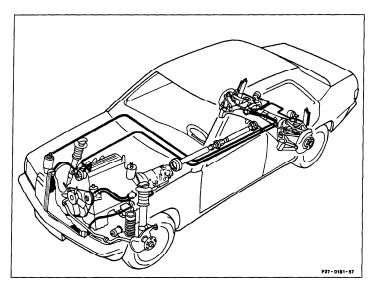

Check condition of automatic transmission, level control and power steering, including lines and hoses. Check for chafe marks and proper routing.

Automatic transmission, power steering

Torque converter

Sealing rings and gasket

Housing plugs

Line connections

Hoses

Oil pan

Level control/ADS

Suspension struts

Line connections

Hoses

Leveling valves

Hydraulic oil reservoir


Hydraulic oil pump

Suspension pressure reservoirs

Distribution valve

Control valve

Damping valve units

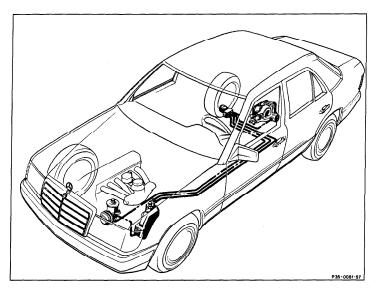

Vehicles with ASD


Check condition of all lines and hoses. Check for chafe marks and proper routing.

Oil reservoir

Tandem pump

Hydraulic unit

Ring cylinders on rear axle center piece

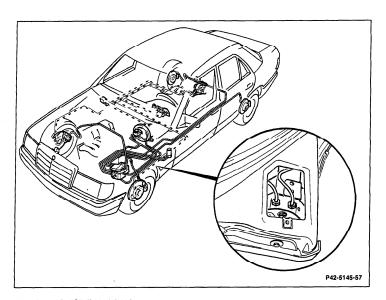

Vehicles with ASR II Model 124 Vehicles with ASR III Models 124.034/036 Check condition of all lines and hoses. Check

Check condition of all lines and hoses. Check for chafe marks and proper routing.


ASR hydraulic unit

Pressure reservoir

Charging pump

Note:

Inspect pressure reservoir through opening in plastic cover under left front fender.

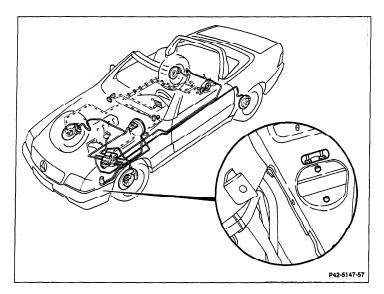

Vehicles with ASR II and Model 129 with ASR III

Check condition of all lines and hoses. Check for chafe marks and proper routing.

ASR hydraulic unit

Pressure reservoir

Charging pump


Note:

Model 129.06

inspect the pressure reservoir connections from underneath the vehicle through opening in engine compartment left side wall.

Model 129.07

Inspect the pressure reservoir connections through opening in plastic cover under left front fender.

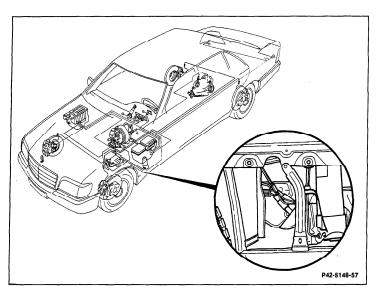

Vehicles with ASR III Model 140

Check condition of all lines and hoses. Check for chafe marks and proper routing.


ASH hydraulic unit

Pressure reservoir

Charging pump

Note:

Inspect the pressure reservoir connections by removing left front fender lower side panel.

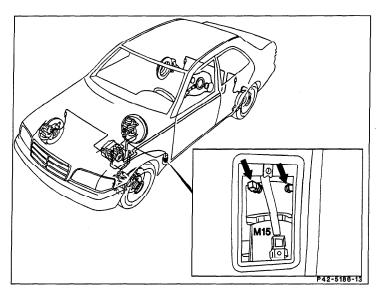

Vehicles with ASR IV Model 202

Check condition of all lines and hoses. Check for chafe marks and proper routing.

ASR hydraulic unit

Pressure reservoir

Charging pump

Note:

Inspect the pressure reservoir connections by removing left front fender lower side panel.