


Diesel engines

⚠ WARNING!

Apply parking brake before performing any work with engine running.
Place transmission selector lever in Park position.


A. Engine 603

- Pull off fuel lines and remove fuel prefilter.
- Observe arrow indicating direction of flow and install new filter.
- Run engine and check for leaks.
- When starting, injection system will bleed automatically. Run engine at approx. 1500 rpm. Avoid having engine stop, since restarting will require several attempts.

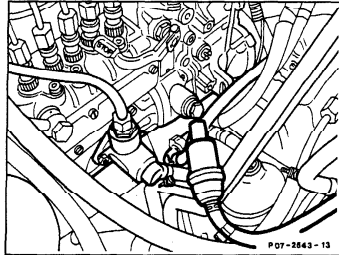


B. Engine 606

- Pull off fuel line (70/4) and remove retainer (70/3) to remove fuel prefilter (70/1).
- Run engine and check for leaks.
- When starting, injection system will bleed automatically. Run engine at approx. 1500 rpm. Avoid having engine stop, since restarting will require several attempts

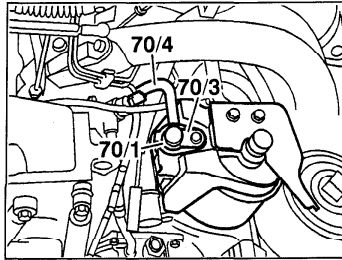

P07-6001-13

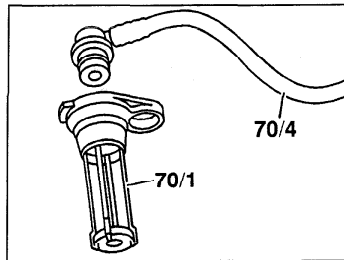

P07-6002-13