
Operation no. of operation texts and work units or standard texts and flat rates:

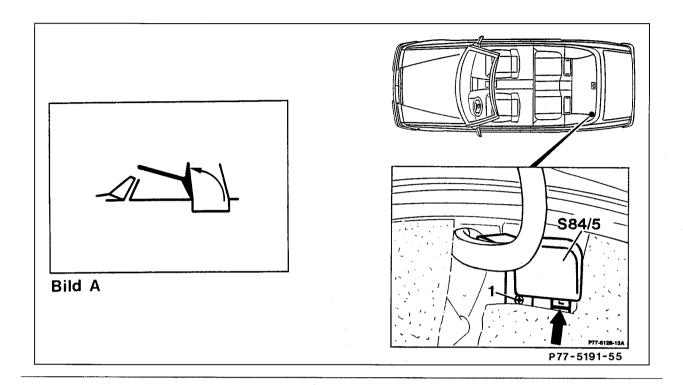

Soft top compartment cover	open, close.
Soft top bow	put up (position A), put down.
Plug connection (arrow)	disconnect, connect.
Screw (1)	unscrew, screw in.
Soft top compartment "open" switch (S84/5)	remove, install.