

Preceding work: Bottom engine compartment lining removed (01–006).

Engine 601.91/92 in model 201, 603.96/97 in model 126

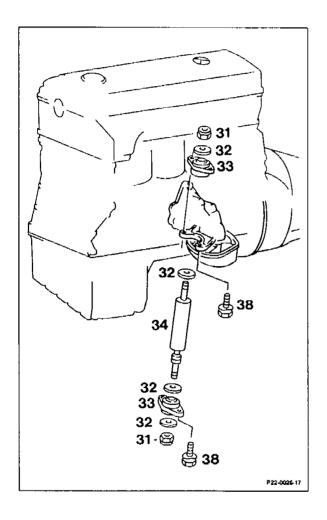

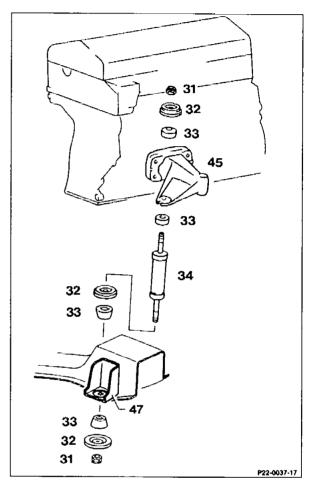

Model 201.122 (up to 02/85)

Model 201.122

Model 126

unscrew at frame cross member and at engine supporting bracket, screw on, 10 Nm. remove from the mounts (33), install. unscrew from frame cross member and from engine supporting bracket, screw on, 10 Nm.

Model 126

Hexagon nut (31)	of left and right shock absorber (34), unscrew at frame cross member and at engine supporting bracket, screw on, 10 Nm.
Shock absorber (34)	take off, install.

Note

Check condition of shock absorbers and all attached parts; renew, if necessary.

Tightening torques	Nm_	
Hexagon nuts, shock absorber mounting	10	
Hexagon bolts, shock absorber mount model 201.128	10	

Special tool

