
Preliminary work: Ground lead on battery disconnected

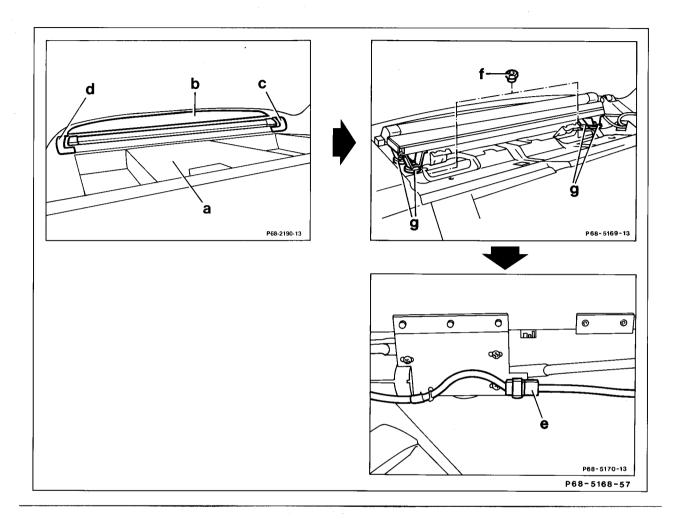

Covers (b, c, d) ...... unclip, clip in. Rear shelf (a) ..... remove, install (68-458). Mounting nuts (f) ...... screw off, screw on (6.5-7 Nm). Plug connector on motor (e) ...... disconnect, connect. remove, install.

## Note

During assembly check the installation position of the blind and correct with spacers (g), if required.

## Special tool

