

## Removal


1 Force off trimstrips.

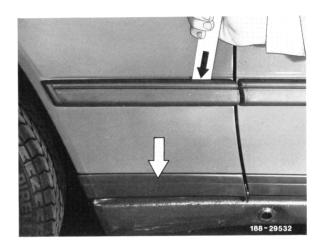


2 Remove screws on front wall pillar and on side member.

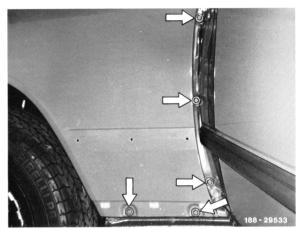

Remove screws on flange at top.

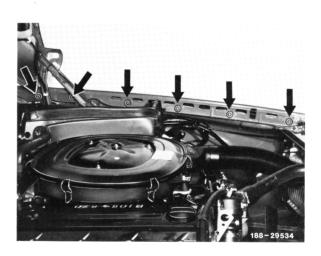


4 Push holding bracket of flasher lamp unit inwards, remove flasher lamp unit in forward direction and pull off plug connection.

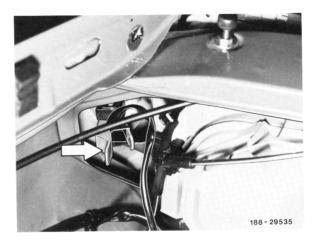

5 Remove screws in cutout of flasher lamp unit.



6 Unscrew screw on molding and remove molding.

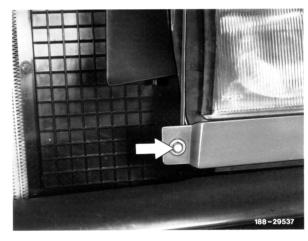

7 Unscrew screw at front.



8 Unscrew lateral screw on bumper.



- 9 Pull bumper laterally downward and unscrew lower screw.
- 10 Remove front fender forward in upward direction.



## Installation

- 11 Coat spare fender with MB permanent underfloor protection.
- 12 Check sealing rubber on inner fender for correct seat.
- 13 Mount front fender and fit.
- 14 For further installation proceed in reverse order.
- 15 Upon assembly of fender, preserve cavity above inner fender through opening in flasher lamp unit cutout with cavity wax.

**Note**: Mask openings on fender top (refer to item 3) prior to waxing and unmask again upon completion of waxing.

