A4

AR47.30-P-8212D

Removing and installing activated charcoal canister


14.2.94

MODEL 124, 129, 140, 170, 202, 208, 210 MODEL 170 with CODE (491) up to Model Year 97 U.S. version MODEL 129, 202, 208 with CODE (491) up to Model Year 98 U.S. version

Left-hand illustration Shown on model 124

Right-hand illustration Shown on model 202, 208


- 77 Activated charcoal canister
- A Activated charcoal canister / purge control valve pipe
- D Vent valve / activated charcoal canister pipe
- E Vent pipe

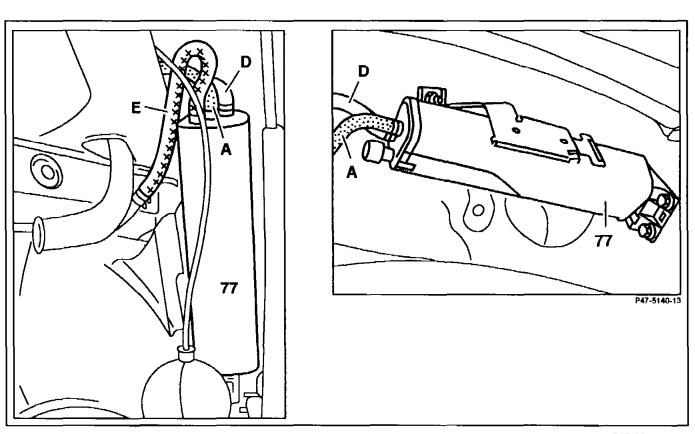


P47.30-0244-05

Model 129


- 77 Activated charcoal canister
- A Activated charcoal canister / purge control valve pipe
- D Vent valve / activated charcoal canister pipe
- E Vent pipe

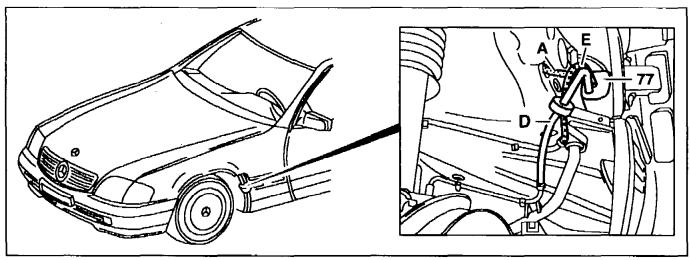

P47.30-0245-04

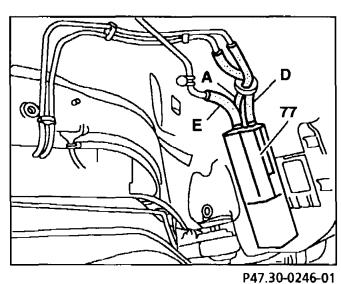

Model 140 with 100liter fuel tank

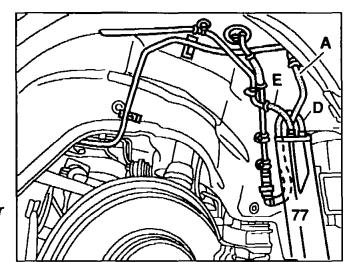


Model 140 with 90-liter fuel tank

P47.30-0247-01

Model 170 (3) up to MY 97


- 77 Activated charcoal canister
- A Activated charcoal canister / purge control valve pipe
- D Vent valve / activated charcoal canister pipe

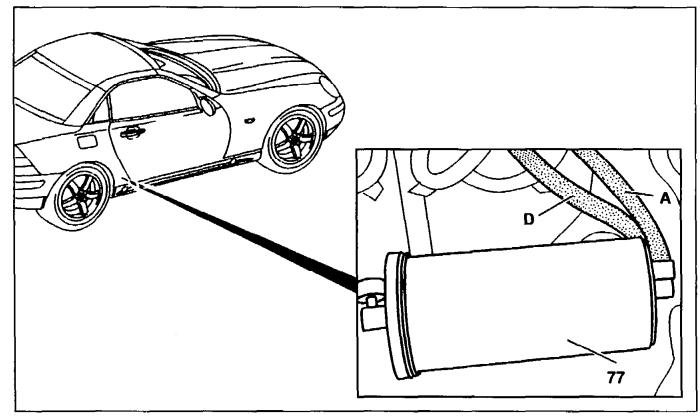

P47.30-0289-05

Model 208.4


- 77 Activated charcoal canister
- A Activated charcoal canister / purge control valve pipe
- D Vent valve / activated charcoal canister pipe

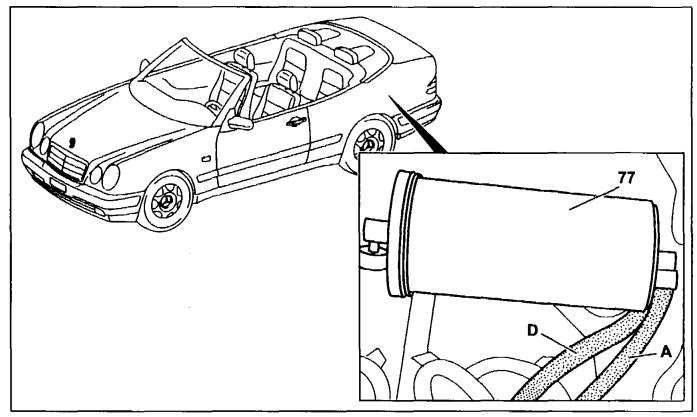

P47.30-2005-05

Model 210

- 77 Activated charcoal canister
- A Activated charcoal canister / purge control valve pipe
- D Vent valve / activated charcoal canister pipe

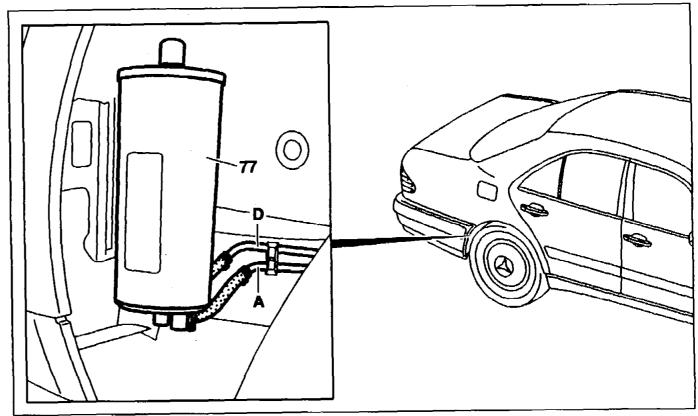


P47.30-0261-05

Model 210 🕪 up to MY 97

77 Activated charcoal canister


Y58/4 Activated charcoal canister shutoff valve

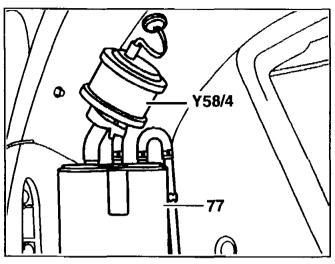

P47.30-0286-01

Model 210 (sa) as of MY 98

77	Activated charcoal canister
82/1	Fuel overflow line
82/2	ORVR vent line
Y58/4	Activated charcoal canister shutoff valve
A	Activated charcoal canister / purge control valve line
D	Fuel tank / activated charcoal canister line

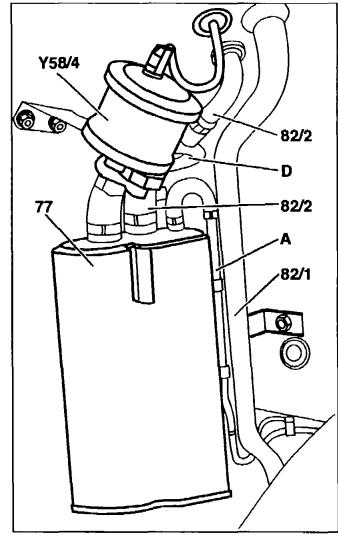

P47.30-0308-03

Operation no. of operation texts or standard texts and flat rates

Op. no.	Operation text
0047-8212	Replace activated charcoal canister for evaporation emission control system (after testing)

XX	Removing, installing			
⚠ Danger!	Risk of explosion due to ignition, risk of poisoning through inhaling and swallowing fuel and as well as risk of injury due to fuel coming into contact with the skin and eyes.	Fire, sparks, naked flame and smoking forbidden. Only pour fuels into suitable, appropriately marked containers. Wear protective clothing when handling fuel.	AS47.00-Z-0001-0	1A
1.1	Remove wheel arch inner panel	Models 124, 129 front left		
		Models 140, 202, 208 rear left		
		Model 210 rear right		
1.2	Detach cover of fuel pump/activated charcoal canister	Model 170		
2	Disconnect lines from activated charcoal canister (77)	Models 124, 129, 140 lines (A, D, E) Models 170, 202, 208, 210 lines (A, D)		-
		installation: Connecting diagram ↓		
		Model 124 with engine 104, 111 Model 129 with engine 104 Model 140 with engine 104 without ski bag	AR47.30-P-8212-01DA	A15
		Model 140 with engine 104 with ski bag	AR47.30-P-8212-01DB	D15
		Model 202 with engine 104, 111	AR47.30-P-8212-01DC	E15
		Model 170 with engine 111 Model 210 with engine 104, 111	AR47.30-P-8212-01DE	H15

	Models 202, 208, 210 with engine 112 version ((sa) up to 09/97	AR47.30-P-8212-01DF	K15
i i	Model 210 with engine 113 version (see) up to 09/97	AR47.30-P-8212-01DG	L15
	Models 129, 202, 208, 210, 220 with egine 112 version (see as of 09/97)	AR47.30-P-8212-01DH	N15
	Models 129, 202.093, 210, 220 with engine 113 as of 09/97	AR47.30-P-8212-01DI	015
	Models 129, 202.033, 210, 220 with engine 113 Ausführung (a) as of 09/97	AR47.30-P-8212-01DJ	P15
	Models 129, 202, 208, 210, 220 with engine 112 as of 09/97	AR47.30-P-8212-01DK	A16
	Models 170, 202, 208, 210 with engine 111.921/42/45/46/70/74 without code 923 schadstoffarm D3	AR47.30-P-8212-01DL	B16
	Models 170, 202, 208, 210 with engine 111.921/42/45/46 with Code 923 low-emission D3	AR47.30-P-8212-01DM	C16
	Models 129, 140, 210 with engine 119.97	AR47.30-P-8212-01EA	D16
	Model 129 with engine 119.98 except code 491 🙉 as of MY 98 Models 140, 210 with engine 119.98	AR47.30-P-8212-01EB	G16

		Model 129.067 with engine 119.982 with code 491 (as of MY 98	AR47.30-P-8212-01EC	H16
		Model 170.447 with engine 111.973 with code 491 (as of MY 98	AR47.30-P-8212-01ED	J16
3	Remove activated charcoal canister (77)	On models 124, 129, 140, 210, disengage upwards		
		Model 170, disengage to one side		
		Models 202, 208, unscrew		ì
4	Install in reverse order			